



SOFTWARE VERSION v5.6

WWW.PRG.COM



MBOX[®] REMOTE

USER MANUAL (rev. G)



AutoPar®, Bad Boy®, Best Boy®, Followspot Controller™, Mbox®, Mini Node™, Nocturne®, Series 400®, ReNEW®, Super Node™, UV Bullet™, V476®, V676®, Virtuoso®, and White Light Bullet™, are trademarks of Production Resource Group, LLC, registered in the U.S. and other countries.

Mac® and QuickTime® are registered trademarks of Apple Computer, Inc.

All other brand names which may be mentioned in this manual are trademarks or registered trademarks of their respective companies.

This manual is for informational use only and is subject to change without notice. Please check www.prg.com for the latest version. PRG assumes no responsibility or liability for any claims resulting from errors or inaccuracies that may appear in this manual.

Mbox® Remote v5.6 User Manual
Version as of: September 8, 2026 rev G
PRG part number: 02.9800.0005.560

Production Resource Group
Dallas Office
3110 Roy Orr Blvd, Suite 200
Grand Prairie, Texas 75050
www.prg.com

TABLE OF CONTENTS

Introduction

About This Manual	1
Important Note About Companion Applications	1
Additional Documentation	1
Customer Service	1

General Operation

About Mbox Remote	3
Mbox Daemon	3
Mbox Content Folder	3
Starting Mbox Remote	4
Adding Servers	4
Setting Mbox Remote Preferences	6
Server Status	7
Setup	7
Indicators	9
Flags	10

Content Management

Overview	11
About Mbox Remote Content Management	11
Terminology	11
Networking Hardware	12
Managing Content	13
Configuring Network Bandwidth	13
Network Performance Monitoring	13
Configuring Server Master/Member Roles	14
Selecting Content to Sync	15
Synchronizing Content	16
Reverse Sync	18
Synchronizing Pixel Map, Plugin, Script, and Image Remapping Files	18
Organizing Content Files	19
Sync History	19
Content Management Archive	20
File Conflicts	21
Newer File Warning	22
Monitor and Manage Modes	23

Remote Server Configuration and Preferences Setting

Configuring Mbox Server Outputs, Mixes, Preferences, and Image Remapping Configurations Remotely	24
Server Control Commands	24

Projection Mapping

Overview	25
Getting Started	25
Basic Projection Mode	27

Setup of Outputs	27
Setup of Keystone/Warp	27
Setup of Vignettes	30
Advanced Mode (Mbox Designer/Studio License Levels Only)	34
Advanced Projection Setup	34
Topography	36
ModellInfo	45
Vignettes	45
3D Object Creation Guidelines	45

Pixel Mapping

Overview	48
What is Pixel Mapping	48
What Can Be Mapped	48
How Does Mbox Convert Onscreen Color to Pixel Map Data	48
How Does Mbox Output Pixel Map Data	50
Ethernet Interface Guidelines	50
Protocols	51
Fixture Profile Model	52
File Structure	52
Compatibility Between Mbox License Levels	52
Syncing Between Servers	53
Important Pixel Mapping Preferences in Mbox	53
Enabling Mbox Pixel Mapping	54
Getting Started	55
Pixel Map Tab	55
Pixel Map Menu	55
Session Types	56
Offline Editing	57
Live Editing	58
Copy To Mbox	61
Source	62
Source Dimensions	62
Adding and Configuring Sources	64
Advanced Settings	64
Contexts	65
Context Grid Controls	68
Automatically Resizing Contexts	68
Fixtures	69
Adding Fixtures	70
Fixtures Out of Bounds	72
Addressing Fixtures	72
Re-Addressing Fixtures	75
Copy and Paste Fixtures	78
Fixture Editing	80
Moving Fixtures	80


Deleting Fixtures	80
Undo and Redo	80
Geometry Tools	81
Editing Fixture Properties	88
Destinations	91
Destination Protocol Information	91
Destination IP Addressing	93
Background Image	98
Still Image Backgrounds	98
Live Stream Backgrounds	98
AVFoundation Input Backgrounds	99
Ghosting	99
Fixture Profiles	101
Creating Custom Fixtures	101
Fixtures That Span Output Universes	104
Universe Spanning with Merge Input	106
RGBW_2 and RGBxW Pixels	107
RGBAmber, RGBAx, and RGBLime Pixels	107
CIE Pixel Types	109
Important Considerations for CIE Pixel Types	110
Parked Pixels	111
Editing Fixture Profiles	113
Importing Profiles	114
Deleting Profiles	114
Groups	115
Group Control Mode	117
Merge	118
Guidelines for Fixture Merge Types	121
General Merge Notes	122
Merge Examples	122
Example Merge Hardware Diagrams	124
Testing	126
Import/Export	128
Property List Files	128
CSV Files	128
Fixture Auto-Place	132

Image Remapping

Overview	138
What is Image Remapping	138
For More Information	138

Appendix A. Mbox Networking Guidelines

Concepts	139
Subnet Masking Basics	140
Routing Ethernet Communications	140

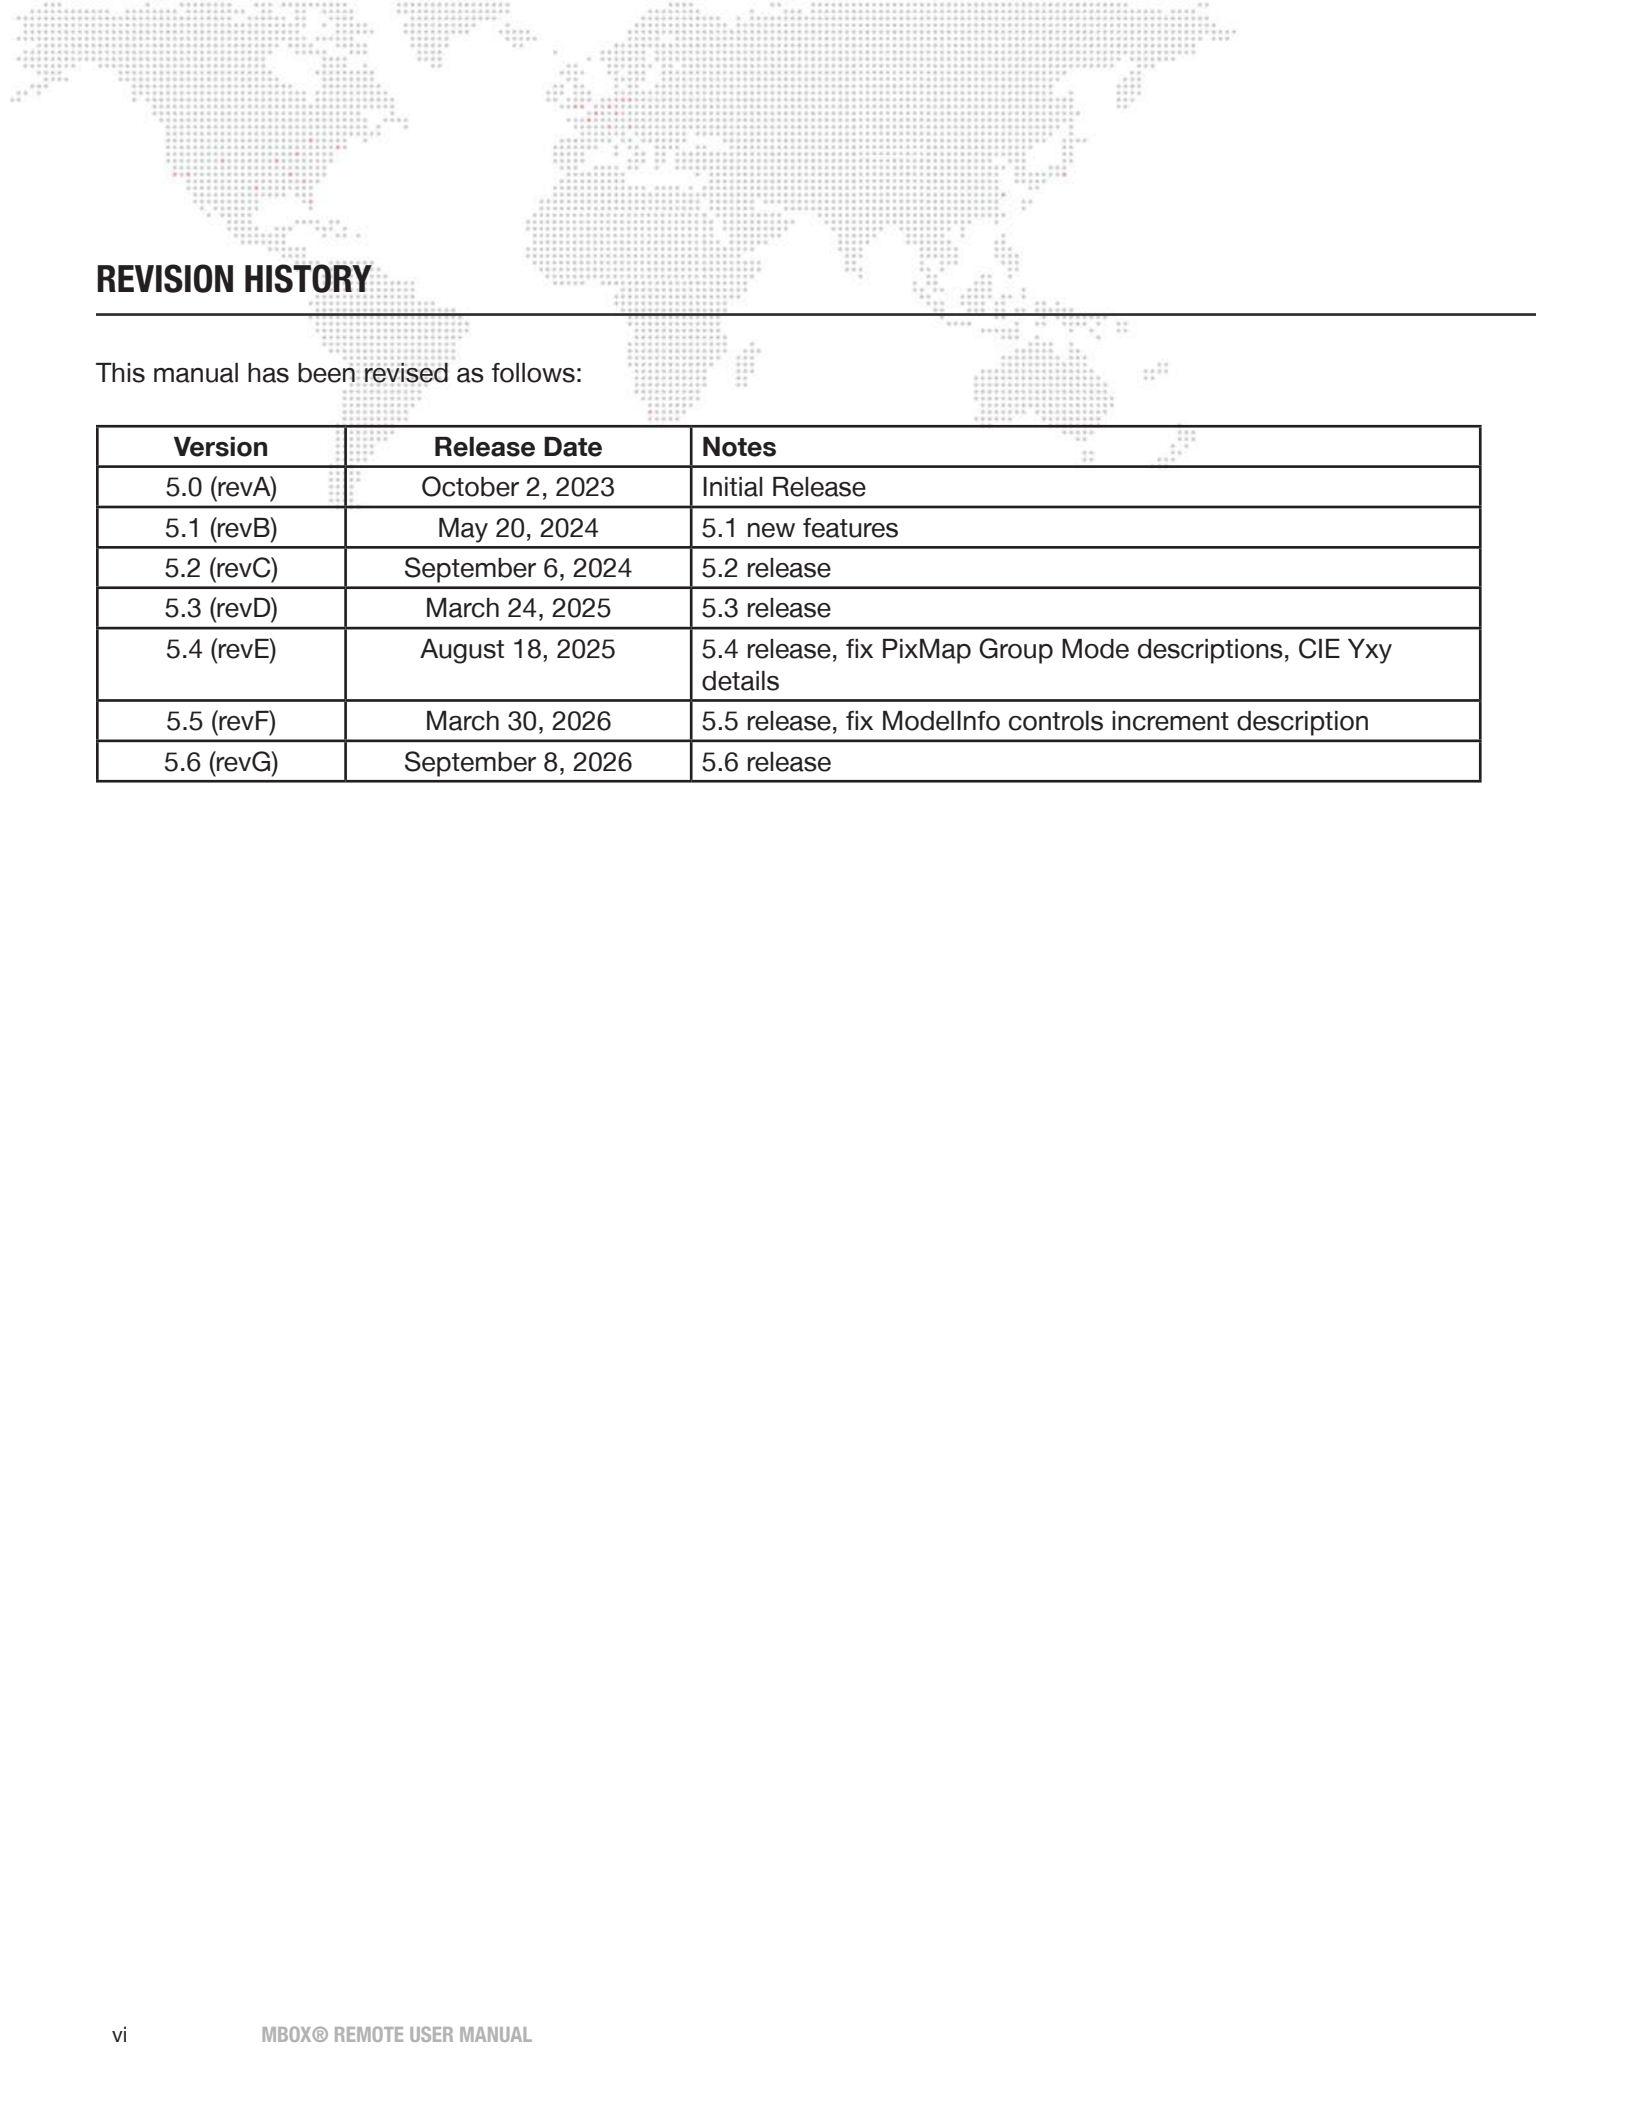

REVISION HISTORY

This manual has been revised as follows:

Version	Release Date	Notes
5.0 (revA)	October 2, 2023	Initial Release
5.1 (revB)	May 20, 2024	5.1 new features
5.2 (revC)	September 6, 2024	5.2 release
5.3 (revD)	March 24, 2025	5.3 release
5.4 (revE)	August 18, 2025	5.4 release, fix PixMap Group Mode descriptions, CIE Yxy details
5.5 (revF)	March 30, 2026	5.5 release, fix ModelInfo controls increment description
5.6 (revG)	September 8, 2026	5.6 release



INTRODUCTION

About This Manual

This user manual provides necessary information regarding the operation of the Mbox Remote v5 software. This guide is provided to explain the features in the Mbox Remote v5 software in detail. This manual is written to cover the use of Mbox Remote with all four license levels of the Mbox application - Designer, Studio, Studio+, and Mini. Differences between the operation of the software license levels are noted wherever applicable.

This manual assumes a basic understanding of Mbox Media Server concepts. For more in-depth explanations of the configuration and use of the Mbox application and its features, refer to the latest version of the Mbox User Manual.

Important Note About Companion Applications

The Mbox Remote v5 software is designed to work with other applications in the Mbox v5 software family. There are new (v5.x) versions of the Mbox application as well as Mbox Daemon and Mbox Director.

Additional Documentation

For more information about DMX512 and sACN protocols, refer to the following documents available from the American National Standards Institute (ANSI) at www.ansi.org:

- + ANSI E1.11 - 2008 (R2013): Entertainment Technology - USITT DMX512-A, Asynchronous Serial Digital Data Transmission Standard for Controlling Lighting Equipment and Accessories
- + ANSI E1.31 - 2025: Entertainment Technology - Lightweight streaming protocol for transport of DMX512 using ACN

The above documents are also available in electronic format free for PLASA members at www.plasa.org

For more information about Art-Net, refer to the following document available from Artistic Licence Engineering at www.artisticlicence.com:

- + Specification for the Art-Net ethernet Protocol

Customer Service

For technical assistance, contact your nearest PRG office. Contact information for all PRG offices can be found on our website at: www.prg.com

For Mbox support, please contact: mboxsupport@prg.com

For additional resources and documentation, please visit our website at: www.prg.com

Notes

GENERAL OPERATION

About Mbox Remote




The Mbox Remote application is used for remote monitoring, content management, and configuration of the many aspects of the Mbox application. The Remote application is included with the Mbox software and can be used on any Mac® computer running macOS X 12.0 or greater to monitor/manage/configure from a remote location.

Mbox Daemon



It is important to note that Mbox Daemon software is required on all Mbox servers to enable remote feedback to both Mbox Remote and to CITP/MSEX enabled devices. When the Mbox application launches, it will automatically launch the last version of Mbox Daemon used on that computer.

The network interface that Mbox and Daemon will use to communicate with external monitoring devices (like Remote or CITP enabled consoles and visualizers) must be configured; use the Network > Management pop-up on the Mbox Preferences tab as shown below:

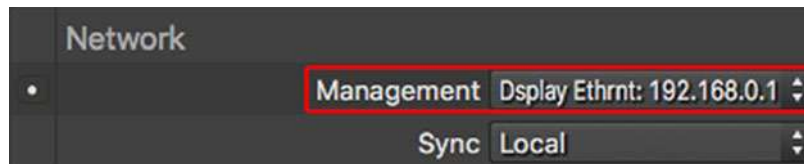

Mbox Daemon is also required on any computer running Mbox Remote that is ALSO acting as a Master from the point of view of Content Management. (Refer to [“Content Management”](#) on page 11 for more information)

When running only Mbox Remote and Daemon, the management interface must be set using the Network Interface pop-up available in the Daemon application's window (rather than on the Mbox Preferences tab as shown above).



Mbox Content Folder

Beginning with Mbox v4.4.1, the location of the default Mbox content folder changed from the root of the computer's boot drive to the /Applications folder on the computer's boot drive. This change is necessary for forwards compatibility because the old location (/Mbox) is not allowed in newer versions of macOS (10.15 Catalina and beyond).

Note: This manual uses file paths formatted like “Mbox/Media” or “Mbox/plugins”. Paths using the ‘Mbox’ prefix resolve to the Mbox content folder. e.g. /Applications/Mbox/Media and /Applications/Mbox/plugins for the paths above.

Starting Mbox Remote

Before opening the Remote application, ensure that your computer is on a network with one or more Mbox servers. Ensure that each Mbox server's instance of Mbox Daemon, and optionally the Mbox application, are running. Confirm that the Mbox and Daemon Management network interfaces are set to the same ethernet interface and that this is the interface to which the Remote application is connected. The network interfaces on all computers must be set to the same subnet.


When Mbox Remote starts, it will either resume with its previous state or start with a blank configuration. The user interface and configuration can be reset by opening the preferences window and pressing the "Reset All to Defaults" button.

Adding Servers


Once the network is configured, servers can be added to the Mbox Remote window for the purpose of monitoring and management.

To add servers:


Step 1. On the Mbox Remote main window, click the Edit Servers button or press [⌘,] on the keyboard to open the preferences window.

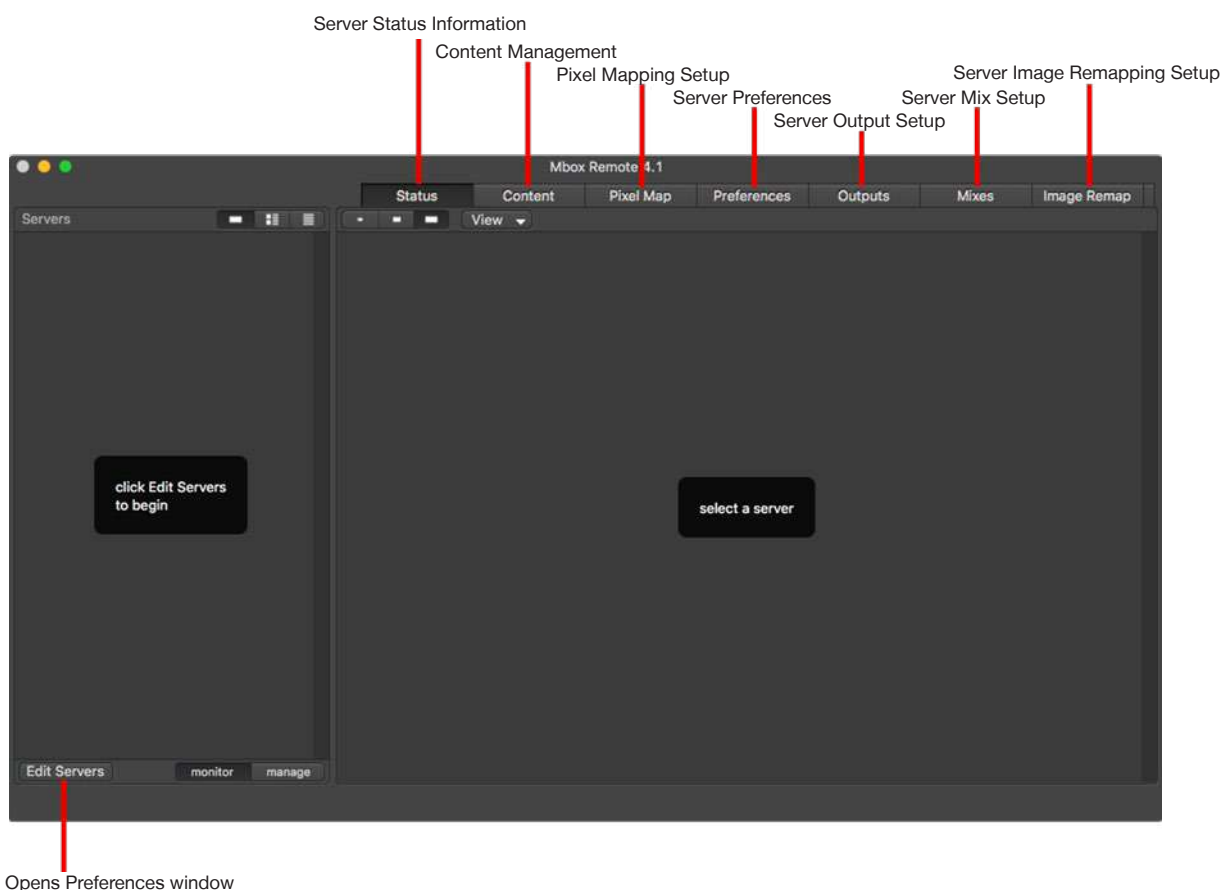

- Step 2. On the preferences window, double-click on any available Mbox server in the list to add that server to the group of servers being managed. Servers will be added to the Servers column in Mbox Remote's main window.

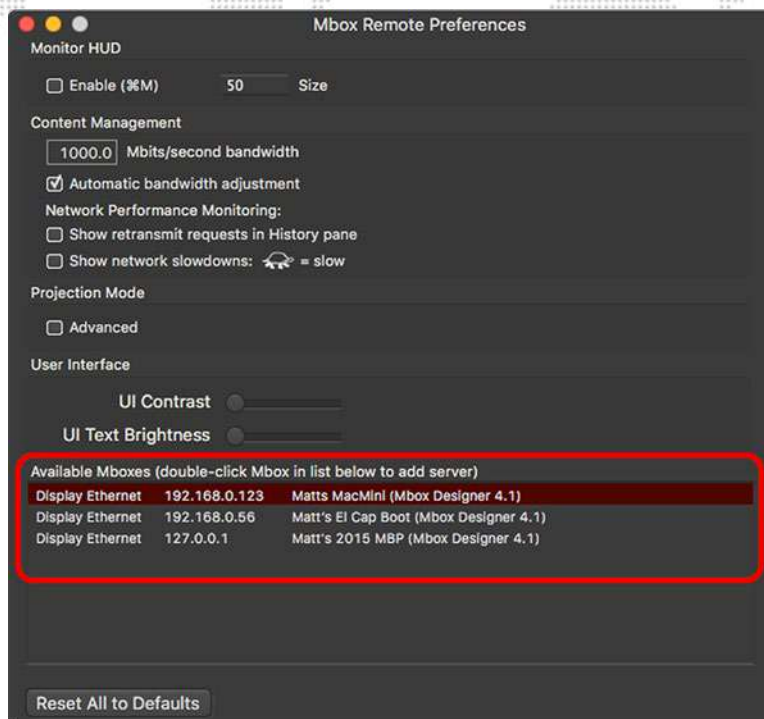

- Step 3. When at least two servers have been added, click on the red button to close the preferences window. Managed servers are displayed as a scrollable list in the Servers column of Remote's main window.
- Servers that can now be managed

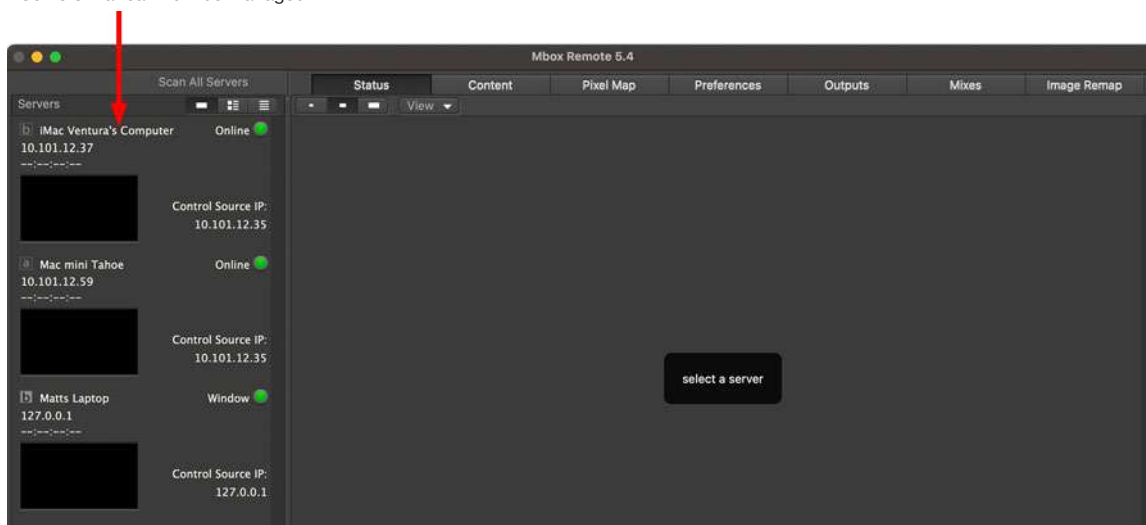


Note: No matter which tab is selected in Remote's main window, the Servers column on the left will always display the list of managed servers. The selected server in the Servers column will dictate what information is displayed or being edited on the selected tab.

Setting Mbox Remote Preferences

Open Mbox Remote's preferences window at any time by clicking the Edit Servers button on the main window or by pressing [⌘,] on the keyboard.

Monitor HUD

- + **Enable** - The Monitor HUD can be toggled on and off by clicking the Enable checkbox in the Preferences window or by pressing [⌘M] on the keyboard. The Monitor HUD is a floating window showing the default layer breakout view for the servers that is currently selected (designated by a dark red highlight) in the Servers column. The Monitor HUD allows the feedback from a server to be visible even while the Status tab is not the active tab.
- + **Size** - The size of the Monitor HUD can be adjusted using the Size field.

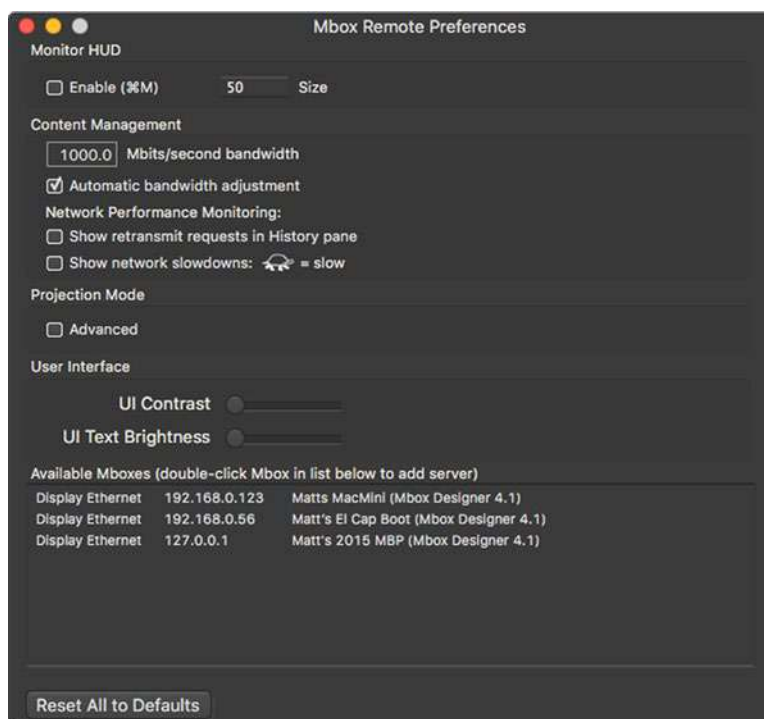

Content Management

The Content Management section is used to configure the network bandwidth which the Content Management system will utilize to transfer content. Refer to [“Configuring Network Bandwidth”](#) on page 13 for more instructions.

Projection Mode

The Projection Mode checkbox is used with the Projection Mapping Advanced mode feature. Refer to [“Advanced Projection Setup”](#) on page 34.


Note: Projection Mapping Advanced mode is only applicable to the Mbox Designer and Studio/Studio+ license levels.

Server Status


By default, in “Selected Server Only” mode, the Status tab of the Remote window shows feedback streams of a server’s Global Surface and individual layers.

Setup


The window provides options for how the streams are displayed. Click the view size options and/or use the View drop-down menu to customize the view.

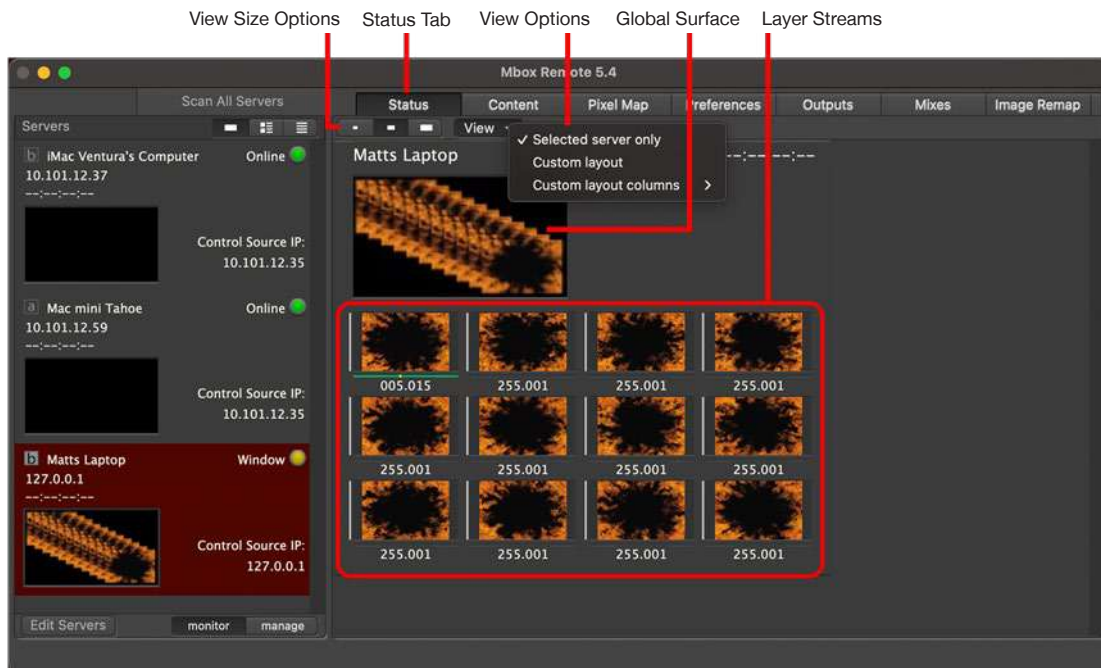


In the custom layout mode, server status can be setup by dragging a server into the status area.

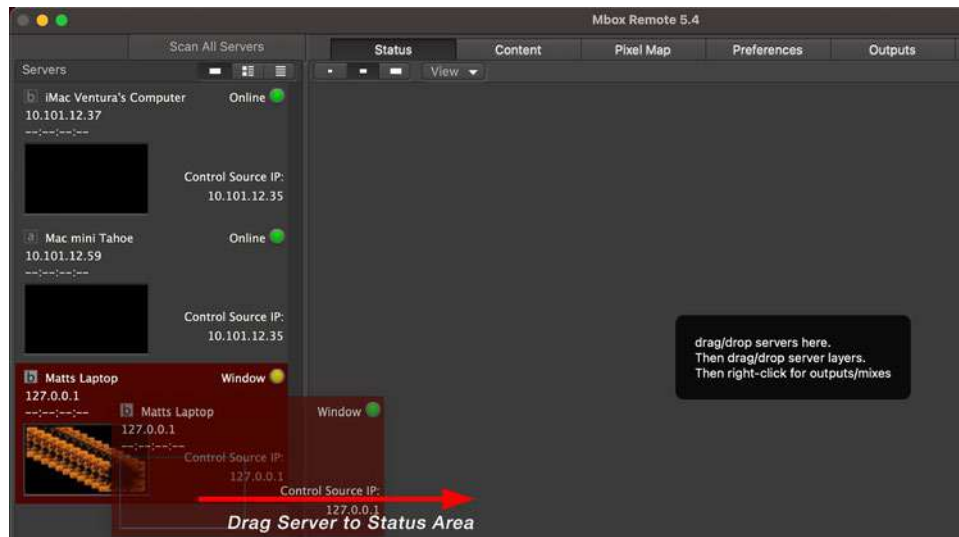

More-detailed layer status information can be viewed by dragging a layer icon to the bottom of the status area.

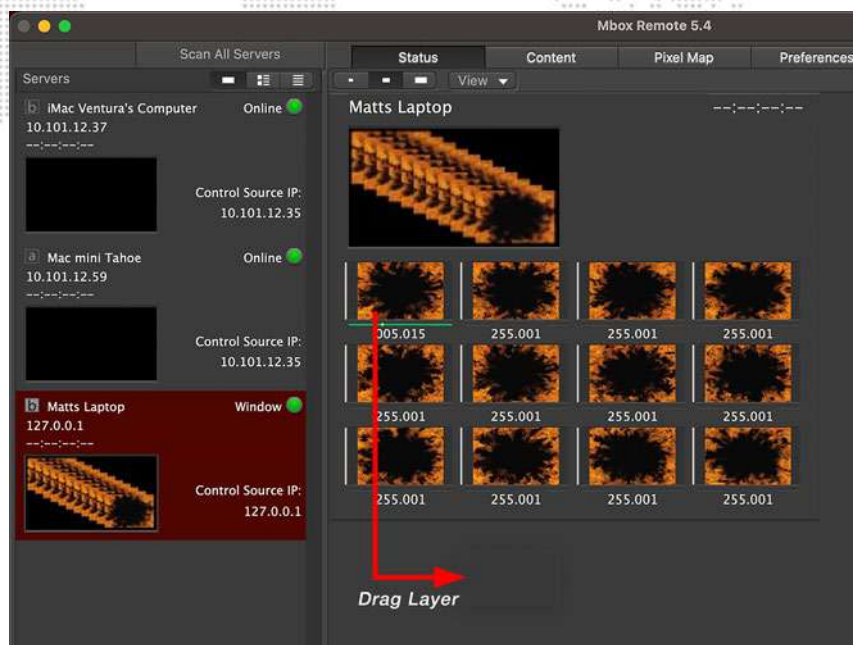


The picture below shows the result of dragging Layer 1 into the bottom area:

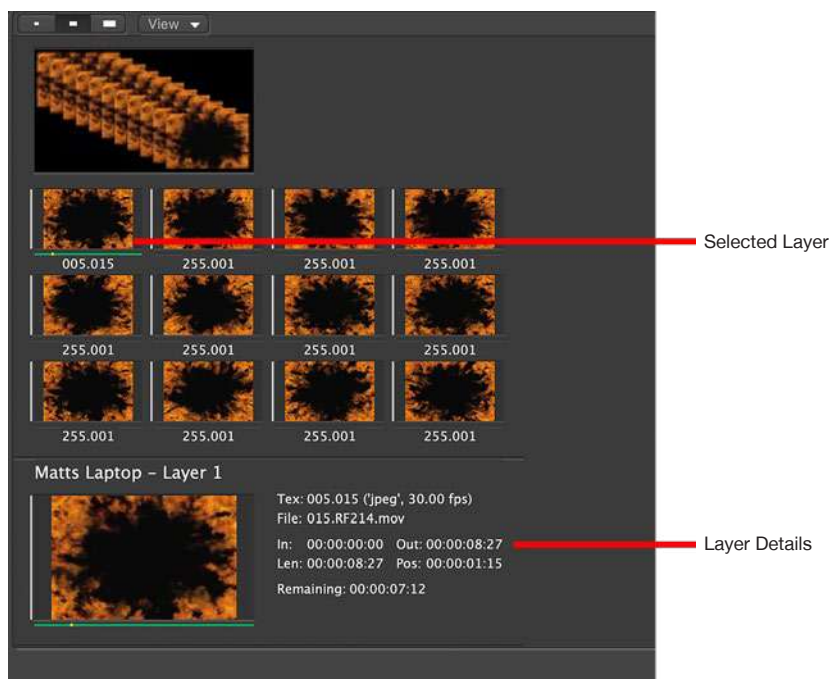

Additionally, right-clicking on an existing element reveals a menu allowing any Output, Mix, or Layer to be added to the status area and for the current element to be removed.

Indicators

The Mbox Remote window has several indicators that provide system information.

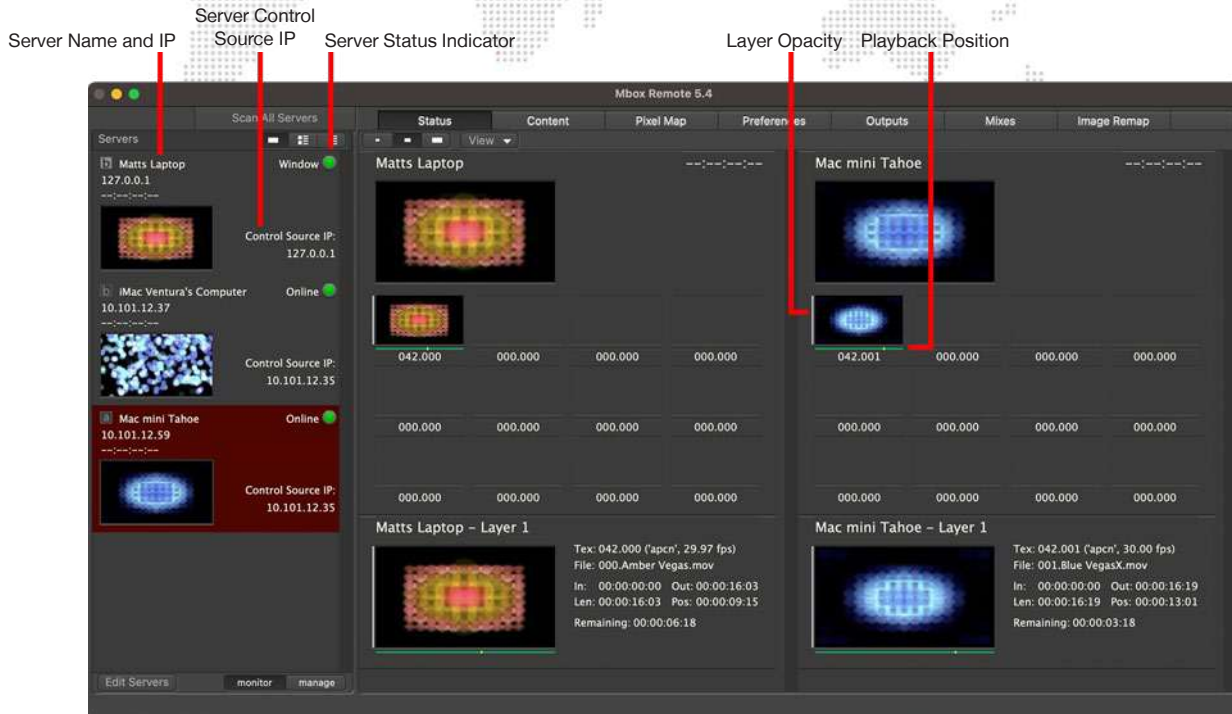

Server status Indicator - The color-coded dot in the Servers column indicates the running status of the server:

- + **Green** - Server connection good, Mbox running in Fullscreen mode.
- + **Green/Yellow Flashing** - Server connection good, Mbox running in Window mode.
- + **Yellow** - Server connection good, Mbox not running.
- + **Red** - No server connection (Mbox Daemon not running on server, or network set up incorrectly/not connected).
- + **Blue** - server in Backup mode running in Fullscreen mode.
- + **Blue/Yellow Flashing** - server in Backup mode running in Window mode.

Note: Connection status depends on Mbox Daemon running on the Mbox. Mbox may be running, but unless Daemon is also running, Remote will display a red dot and cannot provide any additional status or feedback. A red dot may also be displayed if the network is not set up correctly or is not connected, regardless of whether Daemon is running.

Server Name and IP Address - each Mbox's IP address is shown under the server's name. (For more information about IP Address settings for Mbox, refer to ["Appendix A. Mbox Networking Guidelines"](#) on page 139.)

Server Timecode Value - if an Mbox is receiving timecode locally or over the network, that timecode value will be show below the server's IP address in the Servers column.


Server Control Source IP - if an Mbox is receiving control data (Art-Net or sACN) on its first patched universe, the IP address of the sender of that universe is shown here. Otherwise, "No Input" is shown.

Layer Opacity - the vertical white line to the left of each layer video stream represents the opacity value of that layer.

Playback Position, In/Out Points - the length of the green line below each layer video stream represents the position of the layer's current in and out point values, and the yellow dot represents the current playhead position.

Flags

“Flags” are another type of indicator that may appear to the right of a layer thumbnail during operation. The flags indicate various conditions, some that need to be resolved for proper playback. Hovering the cursor over either of the thumb images for the layer will bring up a tooltip explanation.

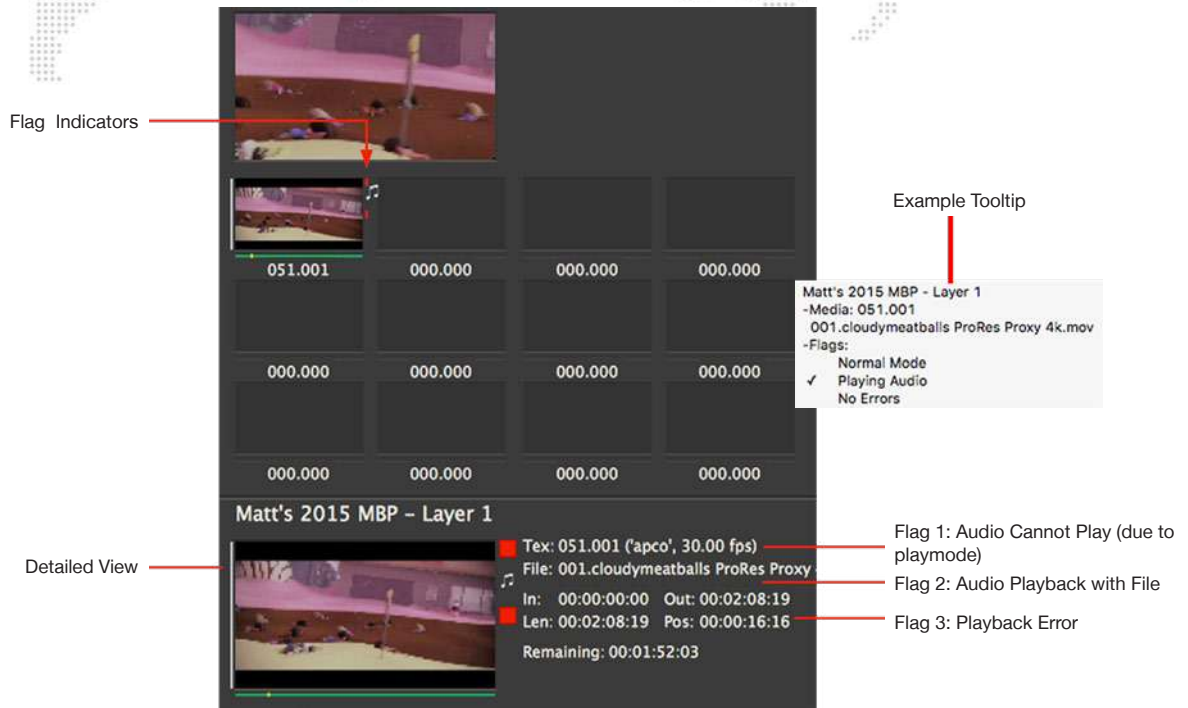

Flag indication type:

- 1) **Audio Cannot Play** - The movie has embedded or sidecar audio (see Flag 2) but the audio is not playing due to the selected playmode - e.g. Reverse Loop, Random, etc. (Refer to the Mbox product manual for more information about audio output and playmodes.) Resolution: Use a forward playmode.
- 2) **Audio Playback with File** - The movie has sidecar audio or embedded that has been enabled for playback. Resolution: If not intending to play audio, then remove the “.audio” suffix from the file name or remove the sidecar audio file.
- 3) **Playback Error** - The movie has an issue such that Mbox cannot play it properly. This can be an incorrect codec or an issue in the movie’s header data. Resolution: Re-encode the movie using a preferred codec. (Refer to the Mbox product manual for more information about recommended codecs.)

Guidelines:

- + Flag 3 is obviously undesirable, as the movie is not playing.
- + Flag 1 may not an optimal situation, as the audio is not playing. However, this is unavoidable if the movie uses a non-forward playmode.
- + Flag 2 is okay if you intend to play audio.
- + Flags 1 and 2 are not necessarily indications of a error. However, if there is no intention to play audio, then it is recommended that the audio is removed.


If you have selected a layer for more detailed information (see page 8), it will be displayed in the detailed view at the bottom of the window. The flag indicators will then be visible in two places as shown in the illustration above.

CONTENT MANAGEMENT

Overview

About Mbox Remote Content Management

The Mbox Remote Content Management system allows quick and easy management of movie, still image, and audio content between Mbox servers. For this purpose, the Remote application window provides three main areas for display of managed servers (left), status/content (middle), and file details/history (right) as shown in the example below:

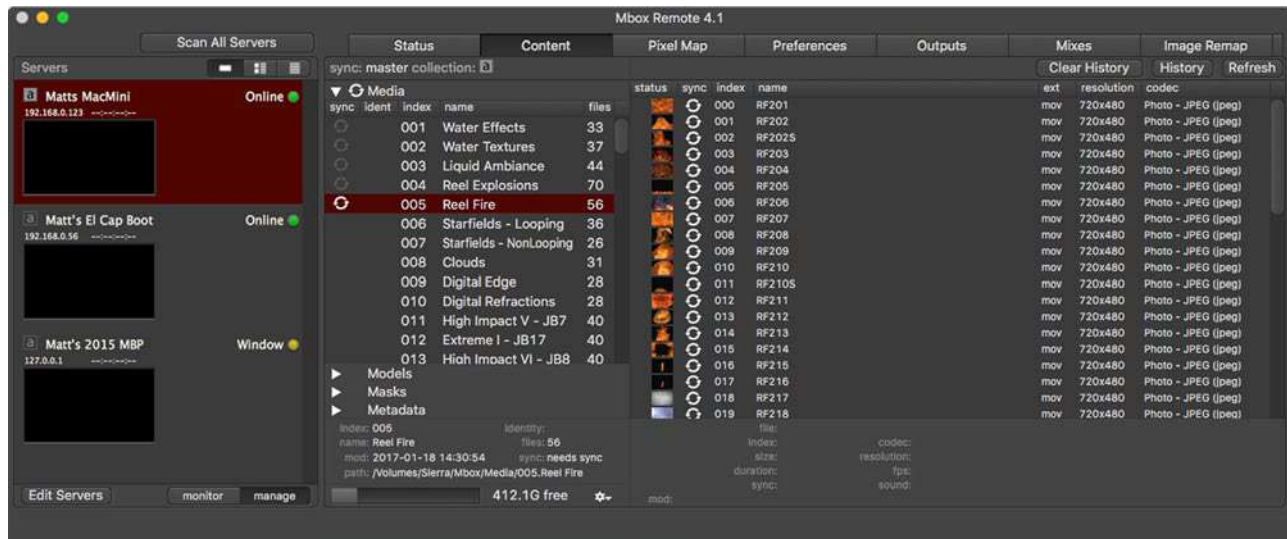


The following components are required in order to use the Mbox Content Management system:

- + The first required application is Mbox Remote. Remote is the user interface for the Content Management system and must be running on at least one machine and connected to the same network as the other Mboxes in the system.
- + The second required application is Mbox Daemon. Daemon is the service provider that allows Mbox Remote to control, monitor, and manage content and settings of an Mbox server. Mbox Daemon must be running and correctly configured in order for Mbox Remote to function. When an instance of Mbox is started, the last version of Daemon will be will also be started automatically. If the Mbox application is not needed, Mbox Daemon can be manually launched without Mbox.
- + Typically, the Mbox application itself should be running on at least one computer. Although Mbox is not required to be running in order to use the Content Management system for basic synchronization, the intention is to sync content for Mbox to use.

Terminology

In order to fully understand how content management works, it's important to understand some basic terminology.

- + **Server** - An Mbox server consists of two major software components with respect to Content Management: Mbox Daemon and Mbox. Although the Mbox application is required for some features of Remote and Content Management to function, it does not need to be running for basic Content Management.
- + **Server Roles** - Within Content Management, each server takes the role of either the Master or a Member server in a Collection (described later). Each Collection of servers must contain exactly one Master and at least one Member in order to synchronize content between the servers.

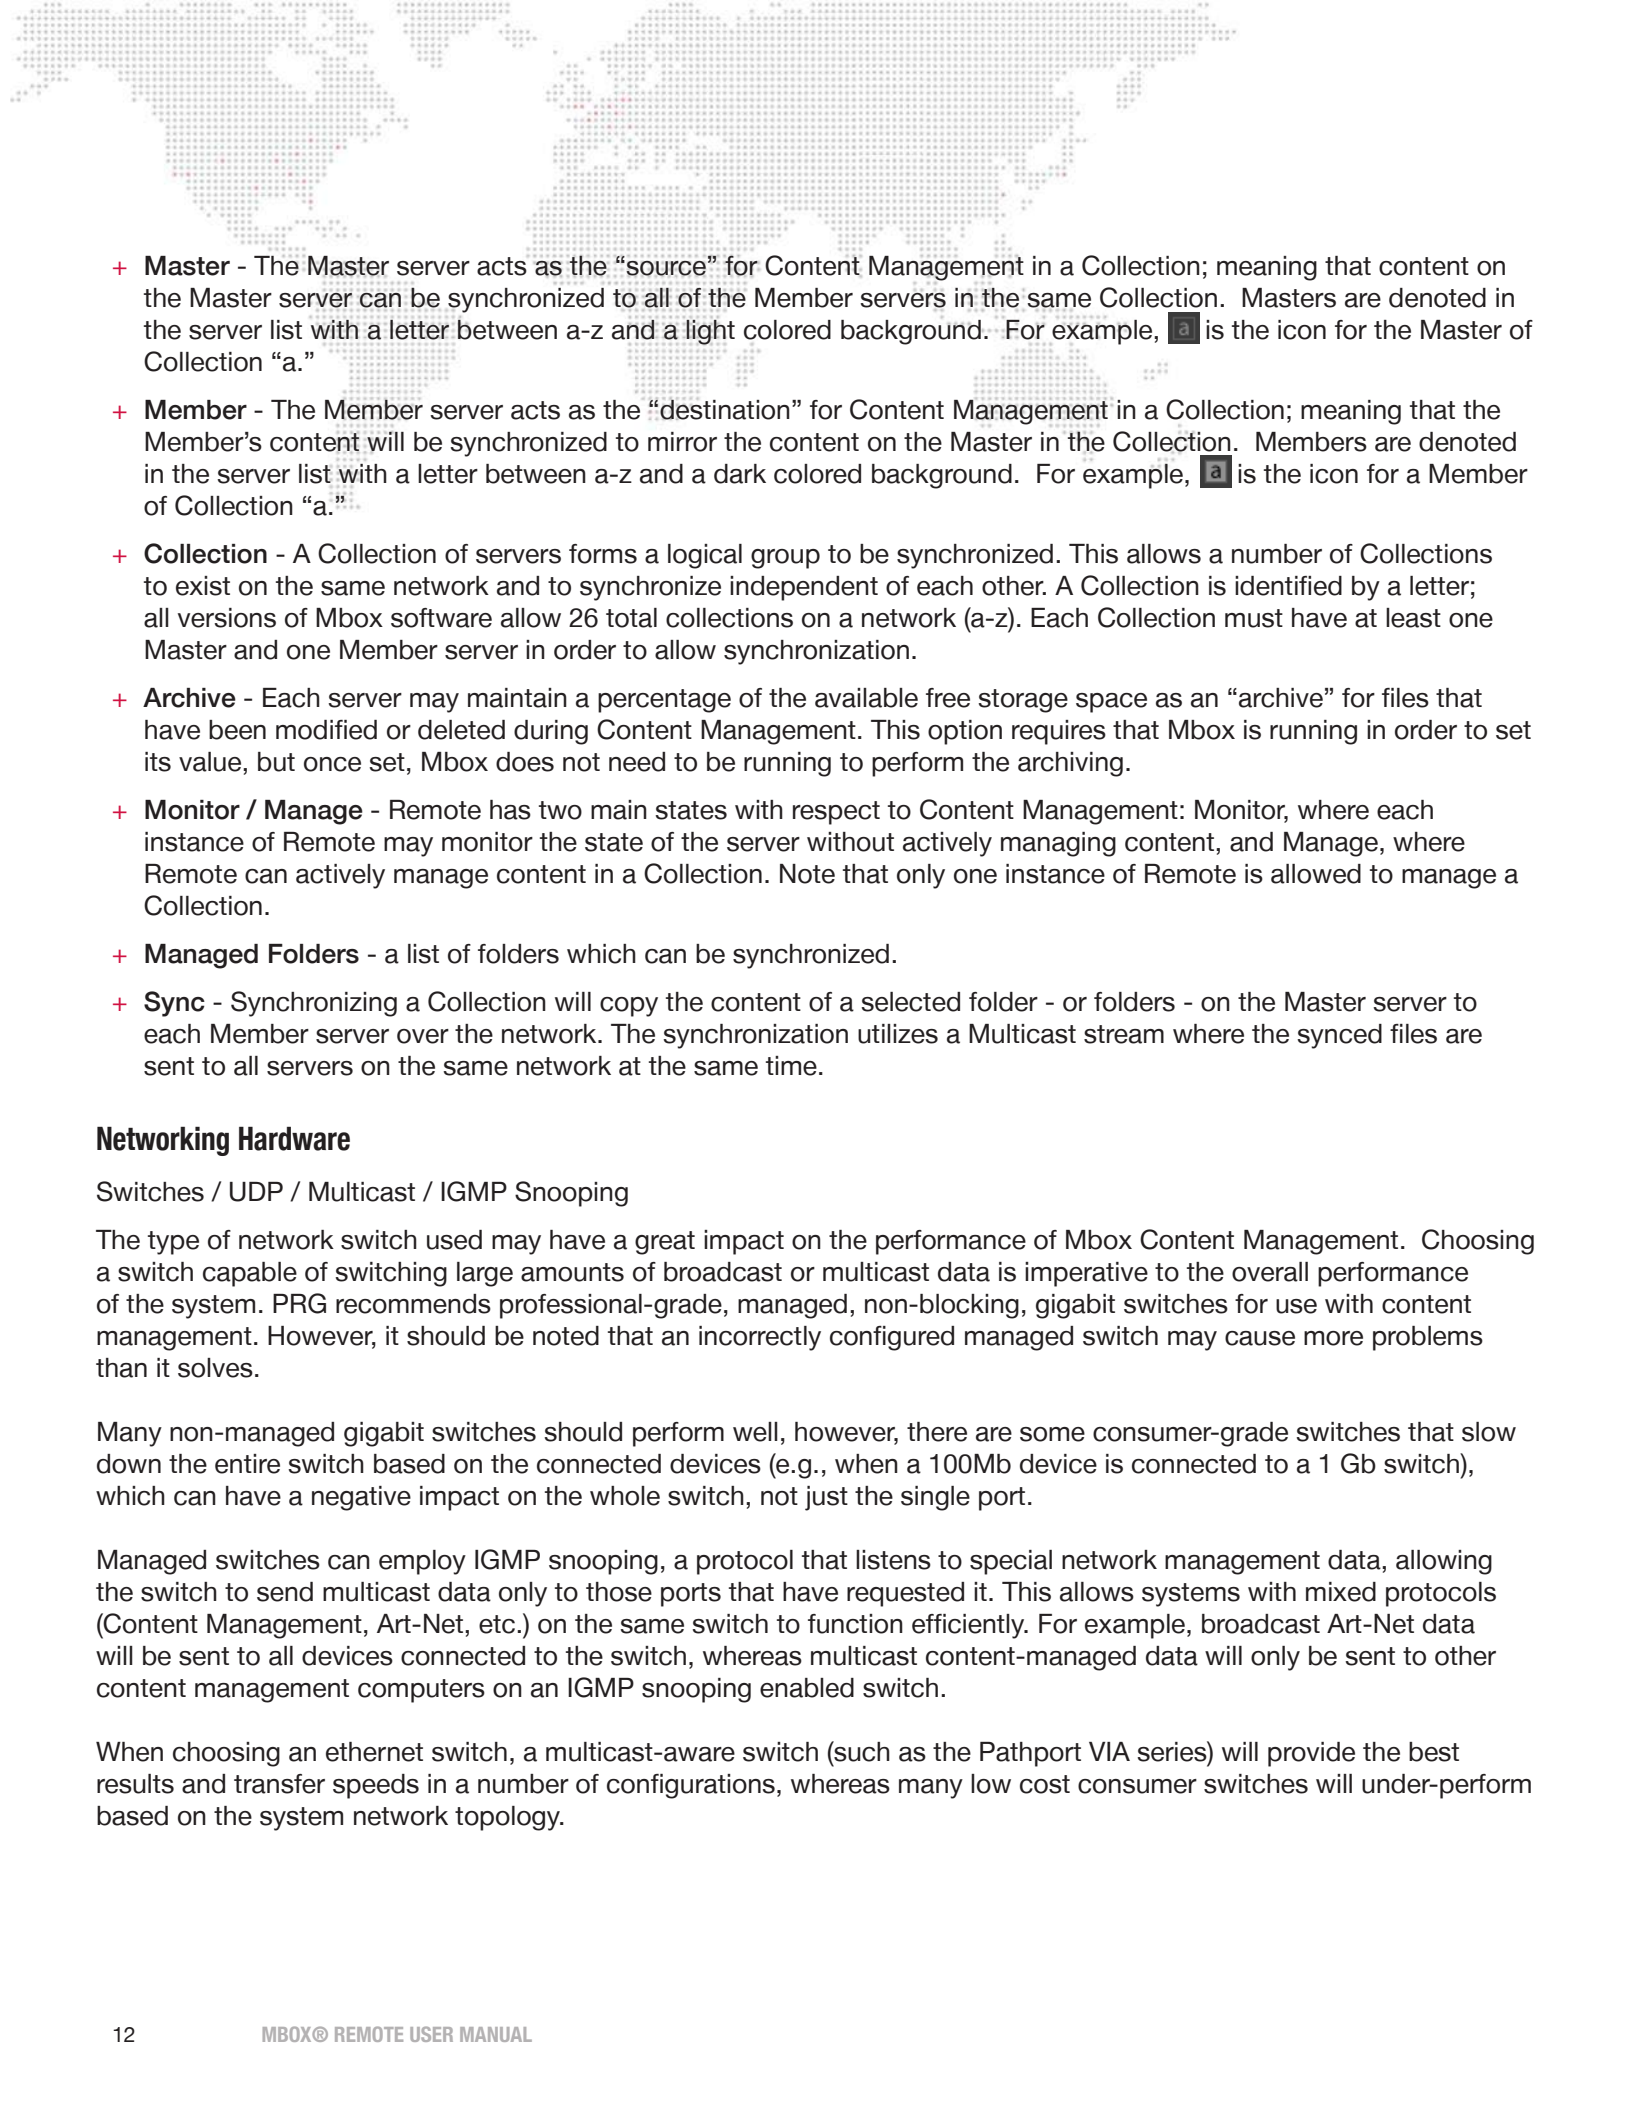- 
- + **Master** - The Master server acts as the “source” for Content Management in a Collection; meaning that content on the Master server can be synchronized to all of the Member servers in the same Collection. Masters are denoted in the server list with a letter between a-z and a light colored background. For example,  is the icon for the Master of Collection “a.”
 - + **Member** - The Member server acts as the “destination” for Content Management in a Collection; meaning that the Member’s content will be synchronized to mirror the content on the Master in the Collection. Members are denoted in the server list with a letter between a-z and a dark colored background. For example,  is the icon for a Member of Collection “a.”
 - + **Collection** - A Collection of servers forms a logical group to be synchronized. This allows a number of Collections to exist on the same network and to synchronize independent of each other. A Collection is identified by a letter; all versions of Mbox software allow 26 total collections on a network (a-z). Each Collection must have at least one Master and one Member server in order to allow synchronization.
 - + **Archive** - Each server may maintain a percentage of the available free storage space as an “archive” for files that have been modified or deleted during Content Management. This option requires that Mbox is running in order to set its value, but once set, Mbox does not need to be running to perform the archiving.
 - + **Monitor / Manage** - Remote has two main states with respect to Content Management: Monitor, where each instance of Remote may monitor the state of the server without actively managing content, and Manage, where Remote can actively manage content in a Collection. Note that only one instance of Remote is allowed to manage a Collection.
 - + **Managed Folders** - a list of folders which can be synchronized.
 - + **Sync** - Synchronizing a Collection will copy the content of a selected folder - or folders - on the Master server to each Member server over the network. The synchronization utilizes a Multicast stream where the synced files are sent to all servers on the same network at the same time.

Networking Hardware

Switches / UDP / Multicast / IGMP Snooping

The type of network switch used may have a great impact on the performance of Mbox Content Management. Choosing a switch capable of switching large amounts of broadcast or multicast data is imperative to the overall performance of the system. PRG recommends professional-grade, managed, non-blocking, gigabit switches for use with content management. However, it should be noted that an incorrectly configured managed switch may cause more problems than it solves.

Many non-managed gigabit switches should perform well, however, there are some consumer-grade switches that slow down the entire switch based on the connected devices (e.g., when a 100Mb device is connected to a 1 Gb switch), which can have a negative impact on the whole switch, not just the single port.

Managed switches can employ IGMP snooping, a protocol that listens to special network management data, allowing the switch to send multicast data only to those ports that have requested it. This allows systems with mixed protocols (Content Management, Art-Net, etc.) on the same switch to function efficiently. For example, broadcast Art-Net data will be sent to all devices connected to the switch, whereas multicast content-managed data will only be sent to other content management computers on an IGMP snooping enabled switch.

When choosing an ethernet switch, a multicast-aware switch (such as the Pathport VIA series) will provide the best results and transfer speeds in a number of configurations, whereas many low cost consumer switches will under-perform based on the system network topology.

Managing Content


In order to manage content, servers must first be added to Mbox Remote. Refer to [“Adding Servers”](#) on page 4 for instructions.

Configuring Network Bandwidth

There are two properties that control the network bandwidth which the Content Management system will attempt to utilize when transferring content. To configure the bandwidth, open Remote’s preferences window by clicking the Edit Servers button on the main window or pressing [⌘,] on the keyboard.

- + Automatic bandwidth adjustment - With this option checked, the Content Management system will automatically adjust the transfer rate to utilize all available bandwidth on the network if possible, or reduce bandwidth to that of the slowest or least-reliable connection to any Mbox when transferring files. With this option enabled, the Mb/s/second bandwidth field is used as a hint for the starting network speed. **It is strongly recommended that this option always remain enabled!**
- + Manual bandwidth - When Automatic bandwidth adjustment is not checked, the Content Management system will always try to transfer at the rate entered in the “Mb/s/second bandwidth” field. Allowable values for this setting are in the range of 100 Mb/s to 1000 Mb/s. However, when any value is entered, the link speed of the network interface that connects to the Mbox computers is checked and the value will be limited to the link speed.

CAUTION! When Automatic bandwidth adjustment is not checked, setting the bandwidth value higher than the actual available network bandwidth will have an adverse effect on transfer - the system will attempt to transfer content faster than the network allows, and errors or complete failure can occur. **It is always best to enable the automatic bandwidth adjustment!**

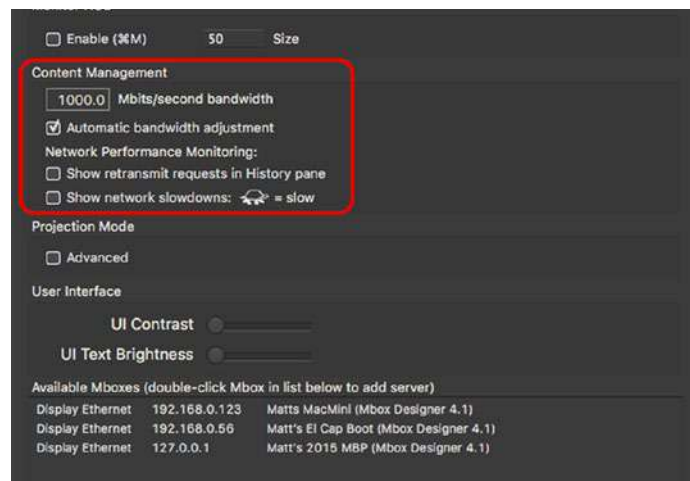

Network Performance Monitoring

In addition to the bandwidth properties, there are two further properties that allow Remote to show feedback information for Content Management performance:

- + Show retransmit requests in History pane - When checked, the content management History pane (see page 19) will show retransmit requests for each piece of synced content. High numbers of retransmit requests can indicate network issues or that manual bandwidth settings are too high.
- + Show network slowdowns - When checked, Remote will display a yellow “turtle” icon in the Server column, next to the Member server that is making the most retransmit requests - indicating that this server may be causing content syncing to slow down. This condition may indicate a network issue between the Master and that Member.


Configuring Server Master/Member Roles

In order to start using Content Management, a Master server must be assigned for a given Collection. By default, all Mbox servers are in the same collection (a).


IMPORTANT! The Servers area on the left will always display the list of managed servers. After the Collection has been configured, the Status/Content tabs and file detail/history columns at the right side of the window will reflect the content of whichever server is currently selected. Content is always displayed from the perspective of the Master server, however, if a Member server is selected, any unique files that may exist on that particular machine will be highlighted in the content area.

To configure a Master server:

- Step 1. At Servers column, right-click on server that will be the “master.”
- Step 2. At Syncing pop-up menu, choose Master of a. (The letter of the Collection depends on the selection made in the Collection menu. By default, this is “a,” but can be changed by selecting a new letter from the Collection menu.)

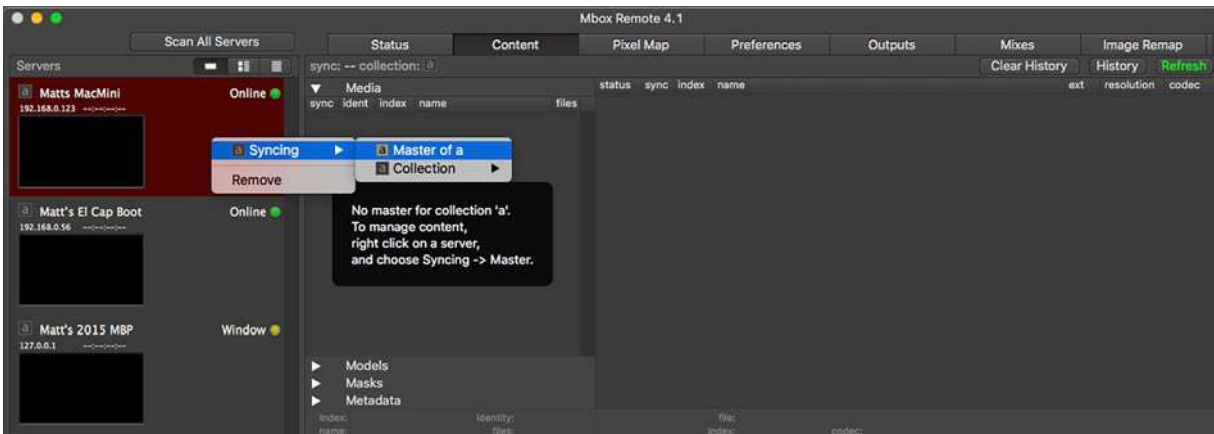

- Step 3. The server's icon will change to light gray to denote that this machine is now the Master and content will be copied from this server to all of the other servers in the same collection. All other servers are now considered as “Members” of the collection.

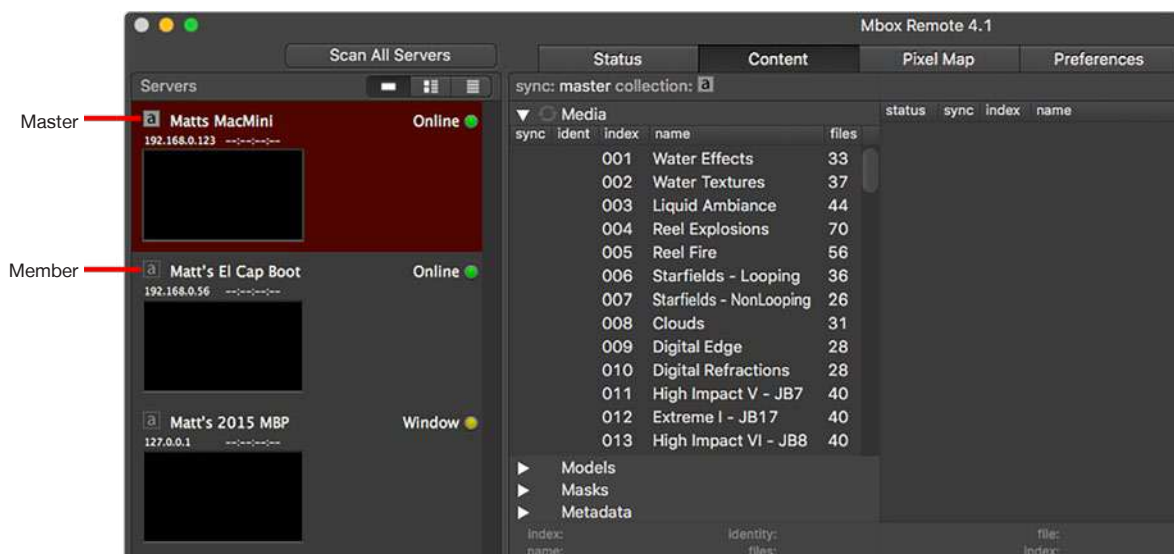


Selecting Content to Sync

In order to synchronize movie, still image, and audio files between Master and Member servers, folders must first be added to the managed folders list.

Note: Image Sequences cannot be synced using Mbox's content management tools.

To add a folder to the managed list:

- Step 1. Select Master server.
- Step 2. Do one of the following:
 - a. At a content folder row (in the Content Tab), mouse-over the blank Sync column. The sync icon will highlight (and a tooltip will appear in the bottom-left corner of the window). Click on the sync icon to manage this folder.
 - b. Select one or more folders in the Content column (using Shift and/or Command keys), then right-click on one of the selected folders and select Manage this folder from the pop-up menu.

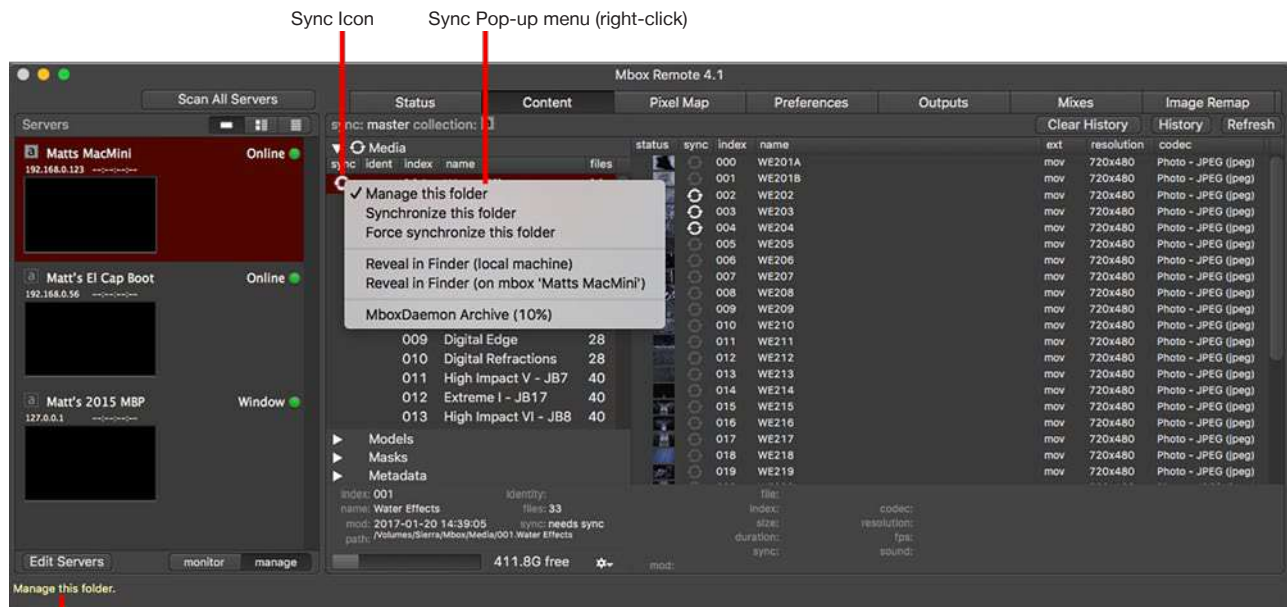

Tool tips will be displayed here (To bring up tool tips, place the cursor over different areas of the window)

The folder's sync icon has four states to indicate current status:


- + Blank - Folder is not a "managed" folder.
- +  White - One or more files in this folder need to be synchronized.
- +  Gray - This folder is synchronized.
- +  Rotating - This folder is currently being synchronized.

Synchronizing Content


After a folder has been added to the managed folders list (see previous page), content can then be synchronized. The window allows for synchronization of a single file, a single folder, or multiple folders.

To synchronize content:

- Step 1. To start synchronization from the Master to the Member servers, do one of the following:
- At a folder, click its white Sync icon to synchronize all files in that folder.
 - Select one or more folders (using Shift and/or Command keys), then right-click on one of the selected folders and select Synchronize this folder or Force synchronize this folder from the pop-up menu. The Force command will synchronize all files within the selected folders, even those with the same Size, Name and Modification Date.
 - Select a folder, then right-click on an individual file to synchronize it.
- Step 2. The progress of the sync action can be viewed by clicking on the folder currently being synced. This will display the status of each file within the folder with a progress bar in the content items row, as well as a white or gray sync icon based on the synchronization state of the file.

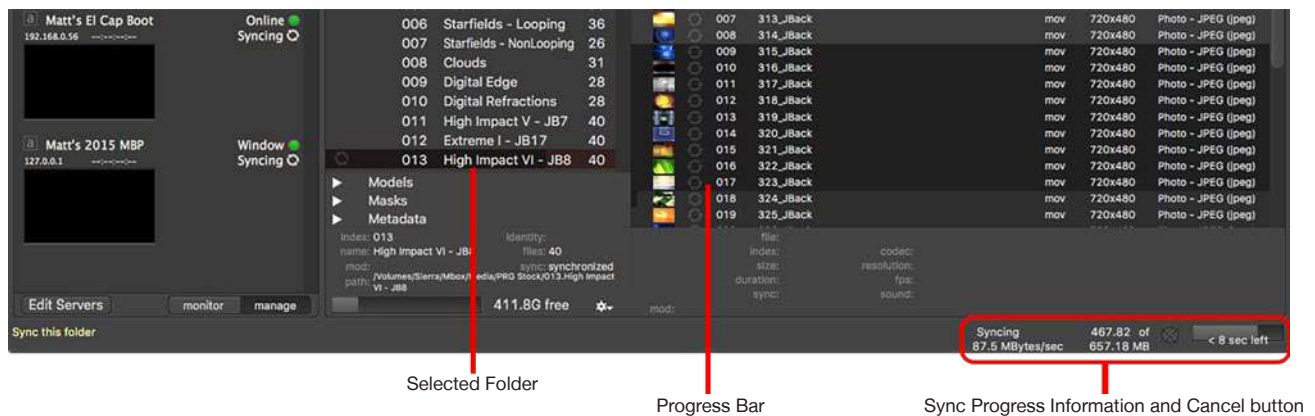


- Step 3. Once synchronization is complete and the specified item (folder or file) has successfully been transferred (i.e., copied from the Master to the Members), the sync icon will change to gray (unless there was an error - refer to ["File Conflicts"](#) on page 21).
- Step 4. To tell all servers to rescan for new content, click the Scan All Servers button or perform a rescan [⌘R] on each Mbox server individually.

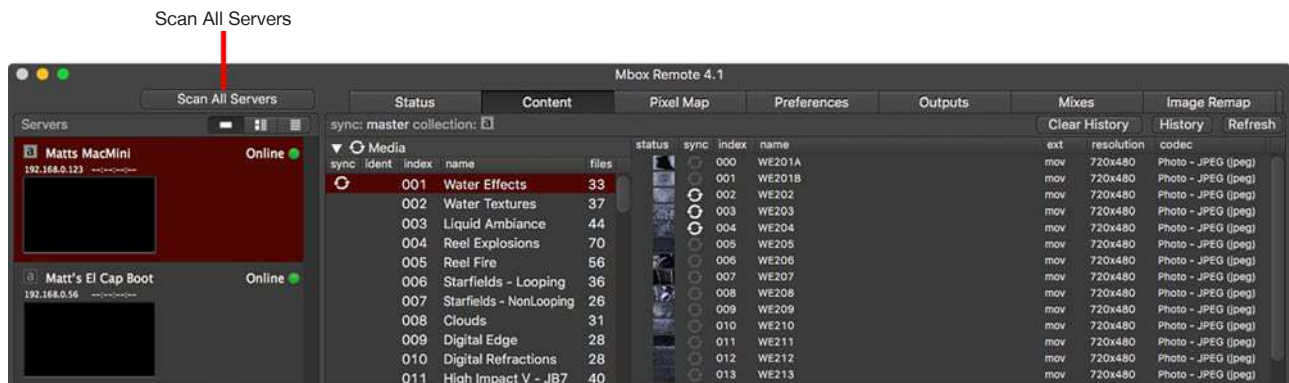

Note: A file's new sync status will be reflected in the window approximately 10 seconds after it has been changed.

Note: Files with extensions not recognized by Mbox will not be indexed. These will be placed at the bottom of the file list.

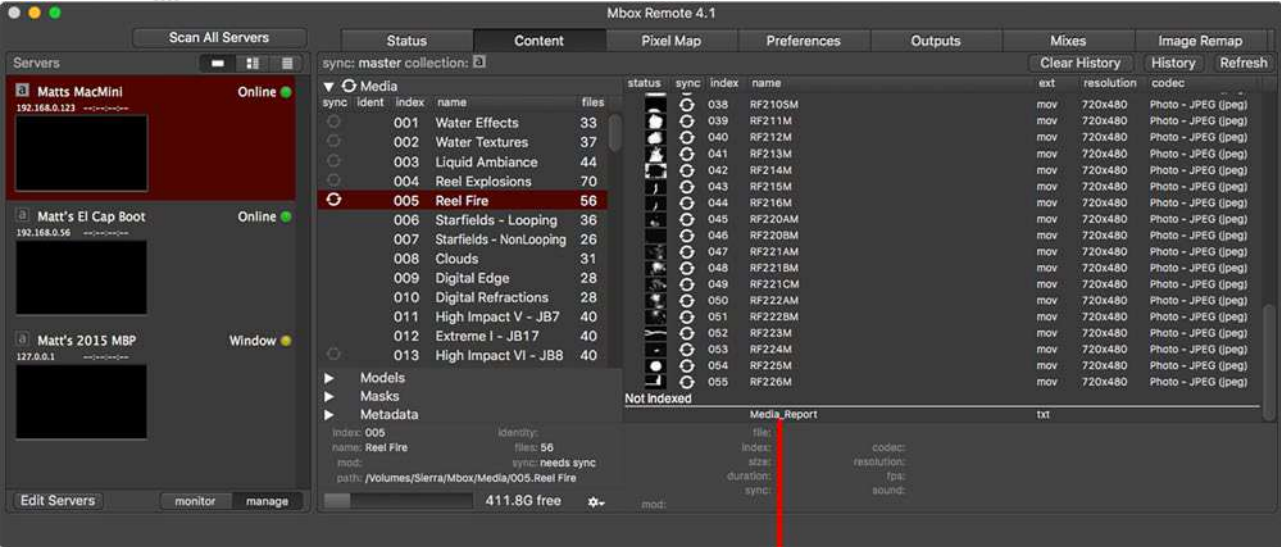

File(s) not indexed

If any new content is added (e.g. synced from one Mbox to another) while the Mbox application is running, Mbox must rescan the Media, Models, Masks, and Plugins folders and all Metadata locations in order to use that new content. This includes when syncing the image remapping file (MultiScreenData.plist) and pixel mapping files.

Rather than manually rescanning after each content transfer, it is possible to have all servers automatically perform a rescan after a content transfer. To enable this automatic rescanning, press and hold the Shift key while clicking the Scan All Servers button. The button will now display the text “Scanning After Transfers” using a green color, as shown below:




To return to normal, manual rescanning, click on the button again and it will revert to displaying the text “Scan All Servers” using the standard white color.

Reverse Sync

The Reverse Sync feature allows a single file to be “reverse synced” from a member to the master, or from a member to master and all other members.

- Step 1. Select a member server.
- Step 2. Locate file to be synced (backwards) and right-click on its sync circle icon.
- Step 3. At pop-up menu, select Backwards sync FROM member... and a sync TO option. File will sync as directed.

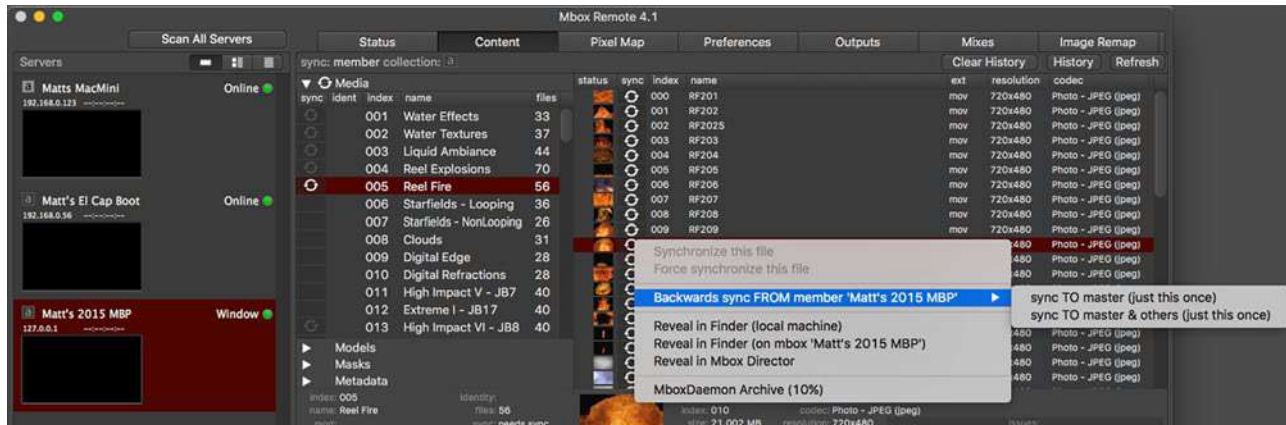


Important! You will only be able to reverse sync if the Master computer already has a folder of the same index number with at least one indexed file in it.

Synchronizing Pixel Map, Plugin, Script, and Image Remapping Files

Pixel mapping files, plugin image files, scripts, and Image Remapping files can also be synced between servers using Content Management.


Requirements:

- + Files other than the Image Remapping file (MultiScreenData.plist) must have an index number prefix (8-bit).
- + The Image Remapping file (MultiScreenData.plist) must be placed in the Mbox content folder.
- + Pixel mapping files must be placed in the Mbox/PixelMapping folder. Plugin image files must be placed in the Mbox/plugins/images folder. Scripts must be placed in the Mbox/plugins/scripts folder.

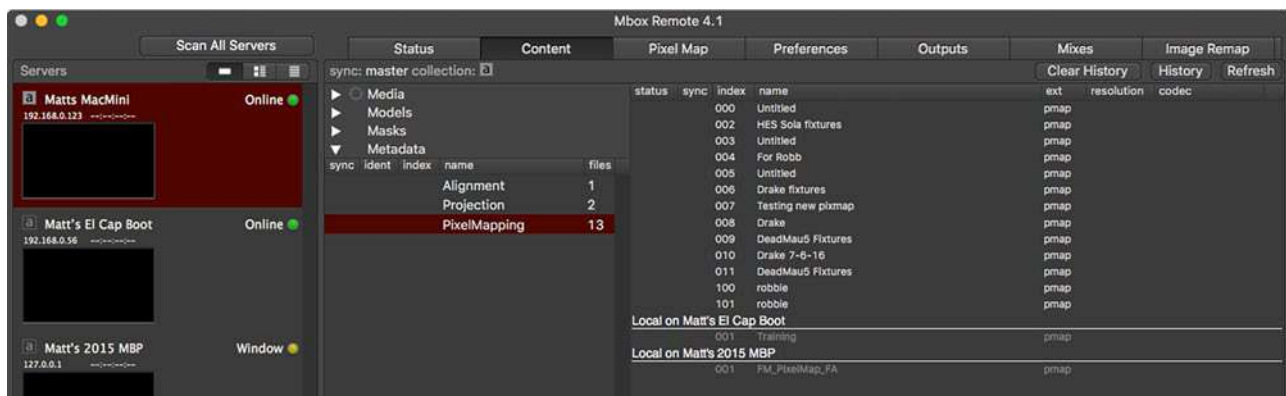

Organizing Content Files


Organization of a server's media files is completely under user control using the Finder on the computer, rather than a large opaque database. Any changes to name, index number, or file extension can be done using the Finder. As a convenience, folders and files can be quickly viewed in the Finder by selecting the Reveal in Finder (local machine) or Reveal in Finder (remote machine) options from the pop-up menu.

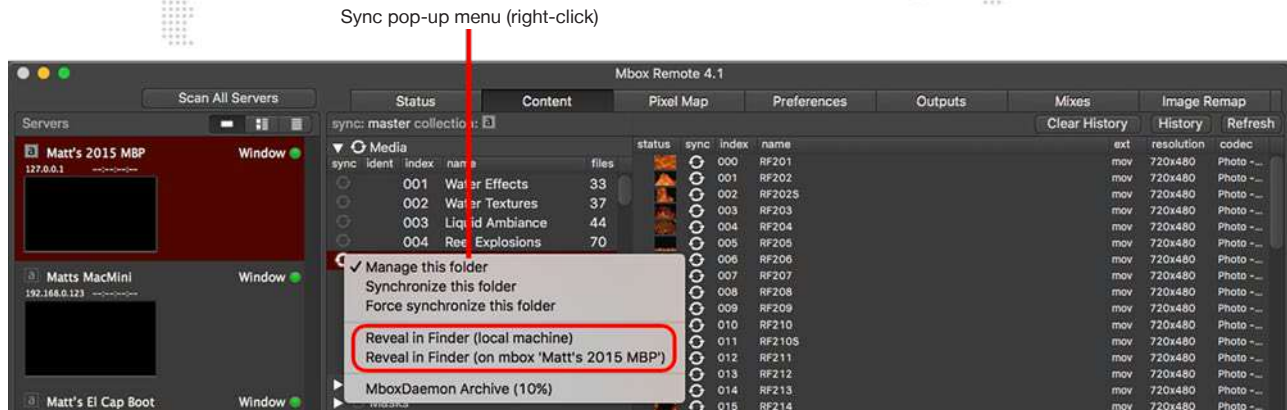


Sync History

The History button, available at the top-right of the window, will display status information for all pending and past synchronization tasks.

To view the History, first select a folder, then click the History button. Clear History or Refresh the information by clicking the applicable button.

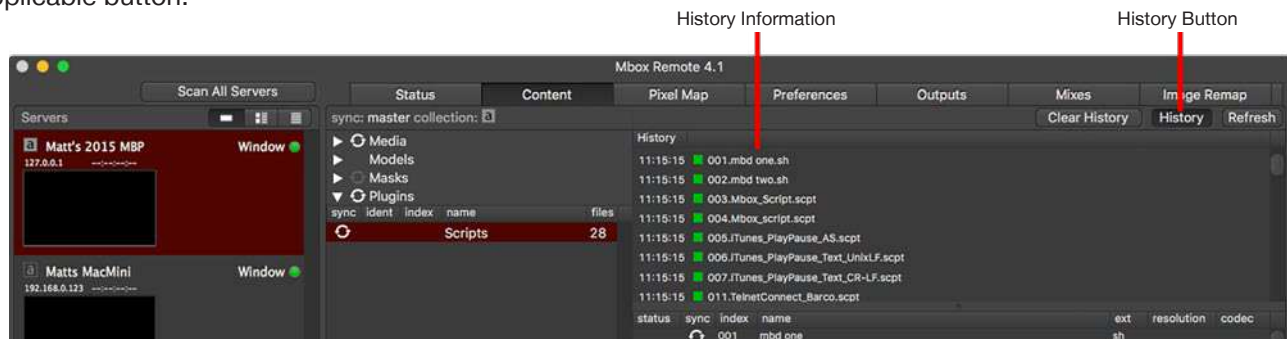

Note: On the Master and Member servers, there is a status area within Mbox Daemon that displays the status of the current and past file transfers.

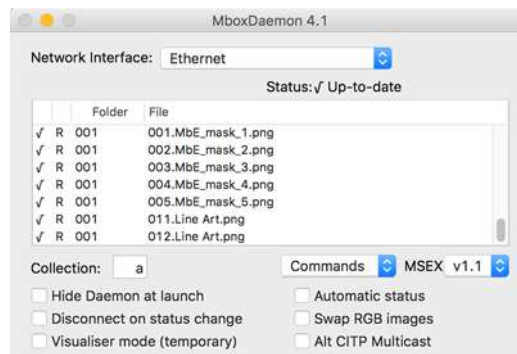


Content Management Archive

Mbox's Content Management system can be configured on each server to use a specific percentage of the free disk drive space to store archived content files as result of deletions or replacements during synchronization. Archives will be placed into a folder within the default archive folder (Mbox/archive) and organized into sub-folders by type (media, models, metadata), parent folder index number, and file number. The archived file's name will have a prefix with a time/date stamp.


If the drive holding the archive folder runs out of space, the oldest files (by date) are deleted from the archive until there is enough space available. The archive size preference specifies a percentage of the total FREE space available on the drive. Because of this, while the total space available for the archive shrinks (to zero) as the drive fills up, it is possible to make sure that the archive never uses up all the free space on the drive.

To configure an archive:

- Step 1. Ensure Mbox and Daemon are running on the target Mbox server.
- Step 2. In the Remote application, select the target server in Servers column. Use one of the following options:
 - a. Click on the Preferences tab to view/edit preferences for the selected server. Scroll down to the Misc section and find the Content Management Archive (%) preference.
 - b. Right-click on a folder or file in management area and select Mbox Daemon Archive from the pop-up that opens.
 - c. Click on the gear icon at the bottom of the Content tab view and select Mbox Daemon Archive from the pop-up that opens.

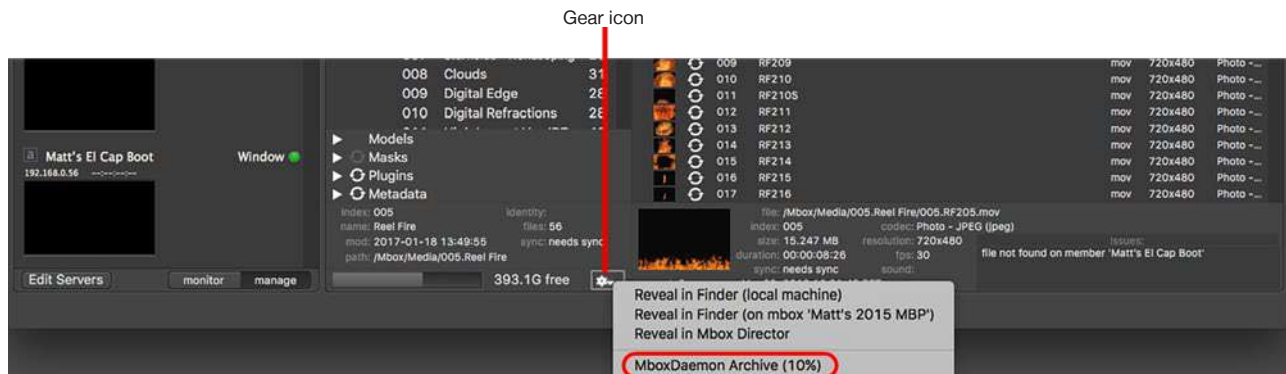

- Step 3. In the preference's value field, enter a percentage of disk space that the archive will occupy. (Note that entering a value of 0 turns off the archive feature. In which case, files that have been deleted from the Member machine will not be archived.)

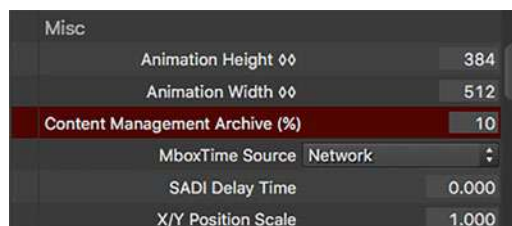

To restore an archived file:

- + Manually move the file back into the correct location using the Finder and edit its name as required.

File Conflicts


During file scanning or synchronization, file conflicts can occur as a result of the following:

- + More than one file in the same folder with the same Index number.
 - This condition includes versioned files, which are files in the same folder with the same index number, but with each file having the “_v” suffix followed by an alphanumeric version string. These files are generically considered to be “conflicts” but will be given a cyan icon (rather than red) to indicate that they are versioned files.
- + Two folders with the same Index number.


Other issues can be caused by:

- + Folder permissions.
- + Insufficient disk space.

Media files with the same Index number and which are not versioned will be flagged with a yellow icon (indexed file) or a red icon (duplicate conflicting file). Media files with the same index number and which are versioned will be flagged with a yellow icon (latest revision) or a cyan icon (older revisions). In both cases, the file with the yellow icon is the file that Mbox will play when requested, and the files with the red or cyan icons will not play. Examples are shown below:

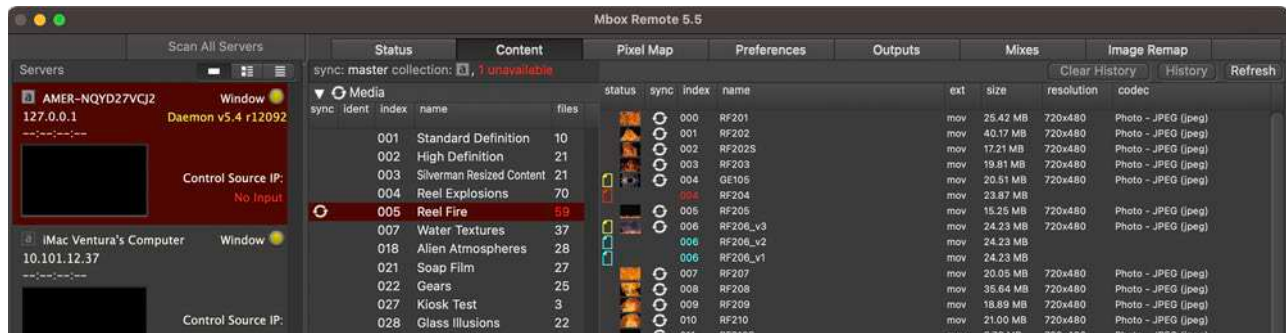

Folders with the same Index number will be flagged with the <multiple folders> bar as shown below:

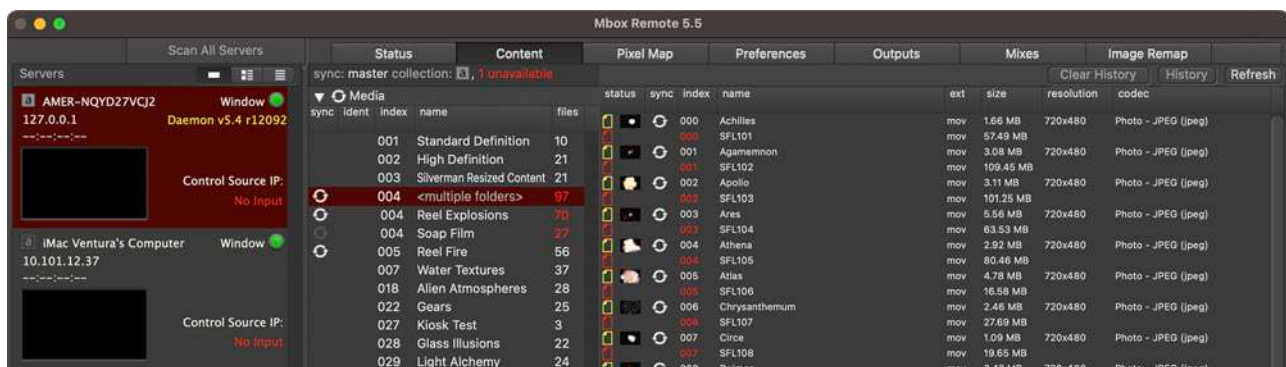

The file(s) with yellow icon are the ones that Mbox will play when asked to play the file having that index. The file(s) with red icons will not play. In situations like this, the files that will play will all be in the same folder, the folder that comes first alphabetically.


Actual file conflicts can be resolved by either deleting the duplicate files/folders or by renaming/indexing them using the Finder. (Refer to [“Organizing Content Files”](#) on page 19.) Versioned files do not need to be resolved or deleted. Neither conflicting files nor older version files will be synced from the master to members when a sync happens.

Newer File Warning

Mbox Remote will provide an alert if an older file (based on modification date) is about to be synced onto a newer file that is judged to be the same file (by index number and name). In these cases, three choices are possible:

- 1) Overwrite only this individual newer file. If more than one file is being synced and other files are found to be newer on the Member, the same alert will be shown again.
- 2) Overwrite all newer files in this folder. If more than one folder is being synced and other files in other folders are found to be newer on the Member, the same alert will be shown again.
- 3) Overwrite all newer files during this sync (assuming more than one folder is being synced). No further alerts will appear if newer files are found.

In the dialog window, choose an option using the radio buttons and click Sync or Skip. Or press Cancel to do nothing.

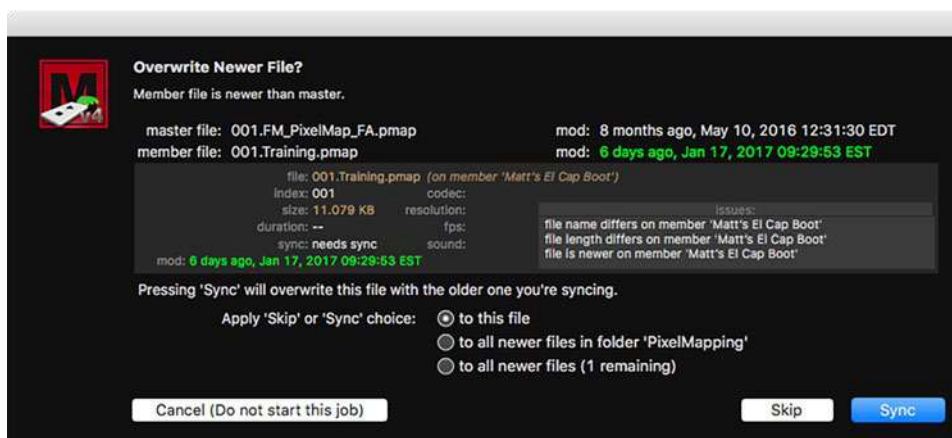


Monitor and Manage Modes

Mbox Remote includes two modes for managing and monitoring the Content Management system.

- + Manage - allows the Mbox Remote application to perform Content Management actions.
- + Monitor - allows the Mbox Remote application to monitor Content Management operations.

Mbox Remote automatically assumes the Manage role. Typically, no action is required unless the Remote application is being used on more than one machine. In which case, to specify which instances of Remote are allowed to monitor or manage, click on one of the two mode buttons located at the bottom of the Servers column.


Note: Multiple instances of Mbox Remote are allowed to run as managers, but only one manager is allowed for each Collection. To become the manager for a specific collection, first select the Master for a Collection, then press the Manage button.

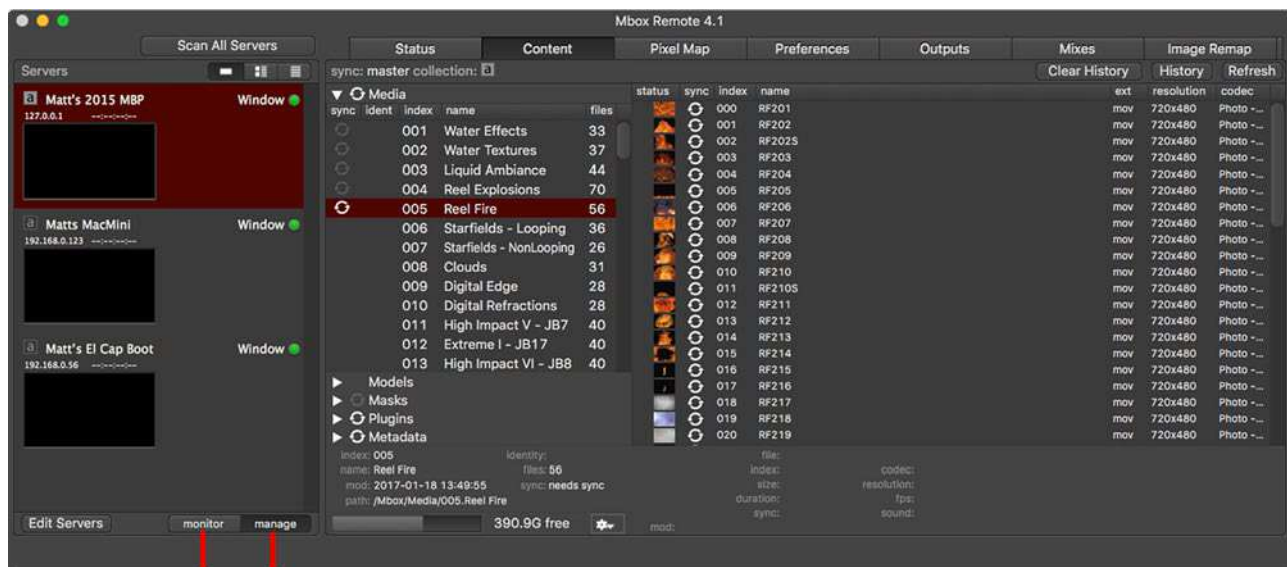

Sets application to Manage mode

Sets application to Monitor mode

If an instance of the Mbox Remote application is set to Manage mode for a Collection that is already being managed by another copy of Mbox Remote, a warning message will be displayed. If it is okay to assume the Content Management role, then click the Attempt Takeover button. If not, click Cancel.

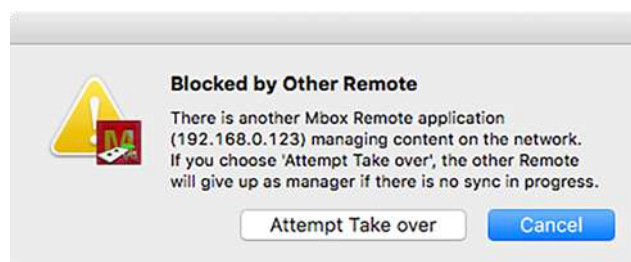

REMOTE SERVER CONFIGURATION AND PREFERENCES SETTING

Configuring Mbox Server Outputs, Mixes, Preferences, and Image Remapping Configurations Remotely

By selecting an available, networked server in the Servers column of the Mbox Remote application's main window and then clicking on the Outputs, Mixes, Preferences, or Image Remap tabs, it is possible to view and edit the output and mix configuration on that server or to view and edit that server's preferences or to compare them to preferences on another networked server. The Outputs, Mixes, Preferences, and Image Remap tabs in Remote work in the same manner as those same tabs in the Mbox application itself.

Refer to the Mbox User Manual, Chapter 3: Configuration > Application Windows for more in-depth information on how to use the Outputs, Mixes, Preferences, and Image Remap tabs.

CAUTION! Changes made to configuration and preferences will be immediately applied to the affected Mbox server. Note that there is no undo functionality on the Outputs, Mixes, Preferences, or Image Remap tabs in Mbox Remote.

Server Control Commands

With a server selected in the Server column of Remote's main window, there are a number of control commands available in the Commands section of the menu bar that will affect that server. The following tasks are available:

- + Rescan Media - rescans Media and Models folder.
- + Update Thumbnails - scans for new content and builds thumbnails.
- + File Sharing On/Off - turns File Sharing on/off. Requires Accessibility to be enabled for the Mbox application.
- + Clear Keyboard HUDs - turns off all onscreen HUD displays that were enabled using the computer's keyboard.
- + Go Fullscreen - if the Mbox software is in Window mode, it will enter Fullscreen mode.
- + Exit Fullscreen - if the Mbox software is in Fullscreen mode, it will enter Window mode.
- + Relaunch Mbox - immediately quits and relaunches the Mbox software.
- + Quit Mbox - immediately quits the Mbox software.
- + Restart Computer - immediately restarts the computer.
- + Shutdown Computer - immediately shutdowns the computer.
- + Make Primary/Make Backup - turns off/on the "Backup Mode" preference. Backup Mode disables the output of layer sync and pixel mapping, allowing a server to be a hot backup without it duplicating that protocol data on the network. (To take over from a failed unit, turn off Backup Mode on the backup and turn on Backup Mode on the failed unit.)
- + Show Mbox Daemon - if the Mbox Daemon application is hidden on the server, it will be unhidden.
- + Launch Mbox - launches the Mbox software. (Only works if Mbox Daemon is running.)
- + Mount Server - opens a File Sharing session with the server. Requires SMB file sharing to be enabled on the Mbox computer.
- + Share Screen - opens a Screen Sharing session with the server. Requires VNC screen sharing (with password) to be enabled on the Mbox computer.
- + Send Network Probes - sends a proprietary network ping to Mbox servers, to check for proper communication.
- + Close Probe Windows - closes the window that opens when a successful network probe reaches an Mbox server.

PROJECTION MAPPING

Projection Mapping is an advanced Mbox feature. If you are unsure about its operation, contact PRG support for assistance.

Overview

The Mbox Remote application can be used to configure settings for simple keystone and warp of configured outputs for Mbox. Beyond those settings, projection surfaces (Topography files) and more complex projection mapping settings can be created, applied, and adjusted for use with Mbox when either a Designer or Studio license level is active. The Mini license level does not support topography and projection mapping.

Compatible functionality works the same way with all license levels of Mbox, although the reduced function set with the Studio or Mini license levels will restrict some options. Configuration requires compatible versions (i.e. all applications are running the same major and minor version) of Mbox, Mbox Daemon, and Mbox Remote.

Important Notes:


- + Some or all of the functionality detailed here is intended to replace/override the default Output Master Keystone and Camera fixture control parameters. Mbox allows for multiple Output Masters, up to 16, depending on the license level.
- + The Mbox application has control parameters to enable/disable the DMX-controlled Output Master Keystone and Camera (where applicable) functionality. Each Output Master must have its Keystone and Camera DMX controls separately enabled or disabled
- + On the controller (console or Mbox Director), the Keystone > Mode/Curve parameter must be set to a value of 000 for remote keystone or warp to be applied. Likewise, in Mbox Director, the Camera > Enable Projection Camera parameter must be set to a value of 255 for projection camera settings to be applied. Other values will disable the remote keystone and camera settings, and revert to the default DMX control over Keystone and Camera parameters.
- + For outputs (i.e. output mixes), all projection properties can be edited. But only the 3D camera properties of non-output mixes can be edited, and not the keystone/warp and vignette properties.

Getting Started

- Step 1. To begin with, launch all three required applications - Mbox, Mbox Daemon, and Mbox Remote. Mbox and Daemon must be running on the same computer (the Mbox server), but Mbox Remote can be used on a separate, networked computer if desired. In a networked situation, make sure that the correct network interface is selected in the Mbox and Mbox Daemon applications, and that this interface is configured correctly to communicate with the networked computer (i.e. they are on the same subnet).
- Step 2. In the Mbox Remote application, make sure to add the server(s) that you want to configure projection mapping for. Press the Edit Servers button or press [⌘,] on the keyboard to open Remote's preferences window. (Refer to ["Adding Servers"](#) on page 4 for information)
- Step 3. If configuration beyond keystone and warp is desired, make sure to check the Advanced checkbox in the Projection Mode section of Remote's preferences window.



- Step 4. In the Server column of Remote, select a server. Press [⌘E] on the keyboard to open the Projection Editor window. At the top of the Projection Editor window, you will see the name of the selected server with its Identity value in parentheses - e.g. "Mbox123 (Identity 1)". On the left side of the Editor window you will see a column listing the outputs and mixes belonging to the selected server. To edit the settings for an output or mix, select the appropriate item in this column.

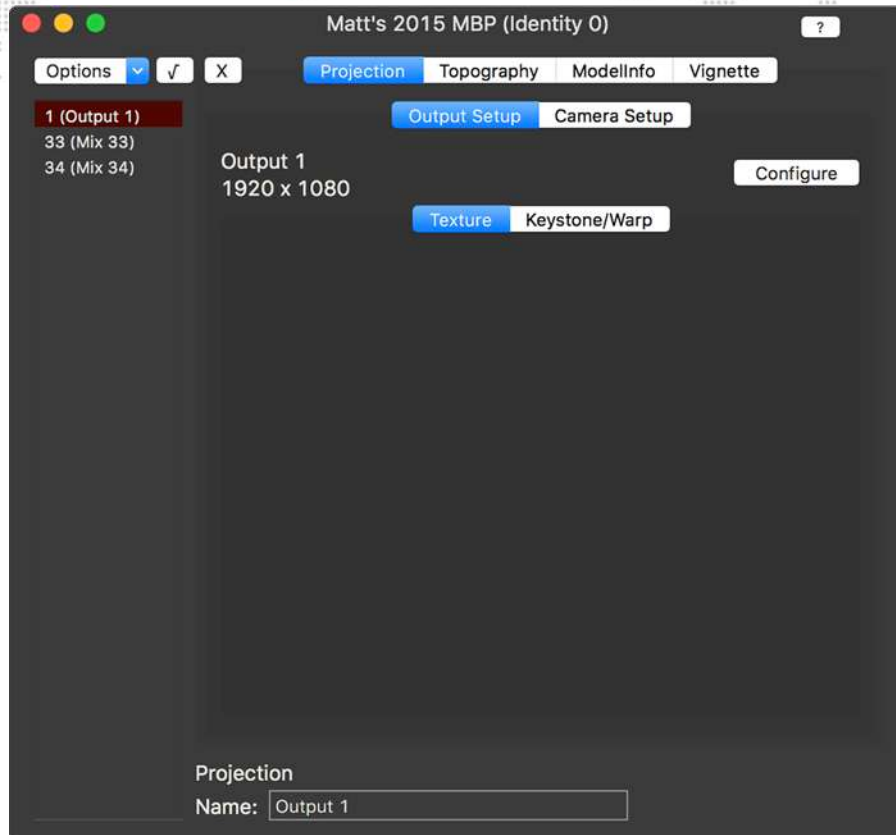

Note: The Mbox Studio and Mini license levels do not support changes to any settings for non-output mixes. And while non-output mixes can have their 3D camera properties edited, such changes have no effect unless the Designer license level is active.

The remainder of the Projection Editor window is devoted to the area where the settings will be configured. In Basic Mode, you will only see a tab called "Projection" on the primary level and a tab called "Output Setup" on the secondary level. In the illustration above all of the available tabs have been revealed because Advanced Projection mode is enabled and the selected server is licensed at the Designer level.

The tabs in the Projection Editor window are hierarchical, with different tabs being revealed on the lower level depending on which tab is selected at a higher level. The following examples use hierarchical notation to explain which tabs have been selected. For example, in the illustration above, the selected view would be referred to as Projection > Output Setup > Texture.

Basic Projection Mode

Setup of Outputs


In all cases, the first step for configuring outputs is to add the outputs to the Mbox server using the Outputs tab in either the Mbox application or in Mbox Remote. (Refer to the Mbox User Manual, Chapter 3: Configuration > Application Windows) It does not matter whether the outputs are discrete or part of a parent/child relationship (e.g. using a multihead adapter like a Datapath FX4) or whether they have an output master assigned to them or not.

Note: All output settings for layout, overlap, sampling, and multihead setup are now set on the Outputs tab. The Projection Editor window in Remote is only used for remote keystone, vignette (edge-blend), and camera configuration.

Setup of Keystone/Warp

Once all outputs have been added, the Projection Editor window will show the list of the selected server's outputs in the column at the left side of the window. If all of the server's outputs are not listed, click on another server or on the empty area below the last server in the Servers column of Remote's main window, and then click back on the server to be configured.


In Basic Projection Mode there are only two tabs to select from: Texture and Keystone/Warp. Depending on the previous usage of the Projection Editor window, either Texture or Keystone/Warp may be selected when the window opens.

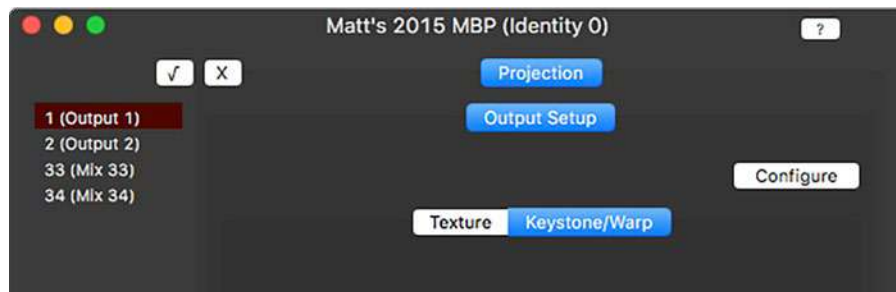

Important! To view the results of keystone/warp configuration created in Mbox Remote on an output, the output must either have no output master assigned, or must have the Output Master > Keystone Mode/Curve parameter set to a value of 0.


To setup Keystone/Warp:

- Step 1. Select Output 1 in the left column of the Projection Editor window. With an output selected, all configuration changes made in the pane to the right will apply only to that output of the server. Any other output(s) on the server must be configured separately by selecting them.




At the bottom of the Projection Editor window, the full name of the currently-selected item is shown. For an output this will be "Output" followed by the output's index number and an added suffix of "NO DMX MASTER" if no output master has been assigned to the output. This name is not editable in Remote, but it can be edited on the Outputs tab of Mbox or Remote.

- Step 2. Click the Configure button below the Output Setup tab to enable the editor for the selected output. The Output Setup tab will now show the selected output's name and size. The Options pop-up menu will be visible at the top-left of the window.

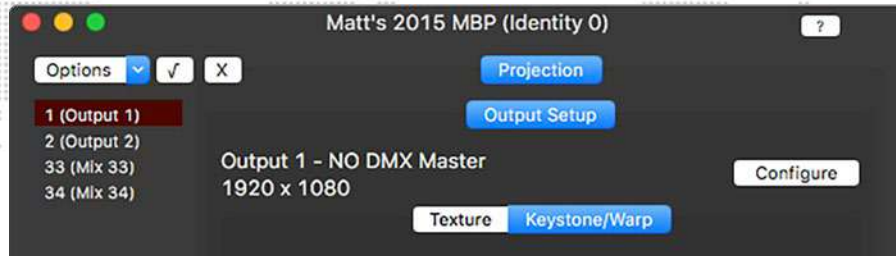


- Step 3. Click on the Options pop-up menu or right-click in the empty area below the Texture and Keystone/Warp tabs, then select Create Keystone/Warp. The area below the Keystone/Warp tab will now show the controls for editing the keystone and warp of the output.


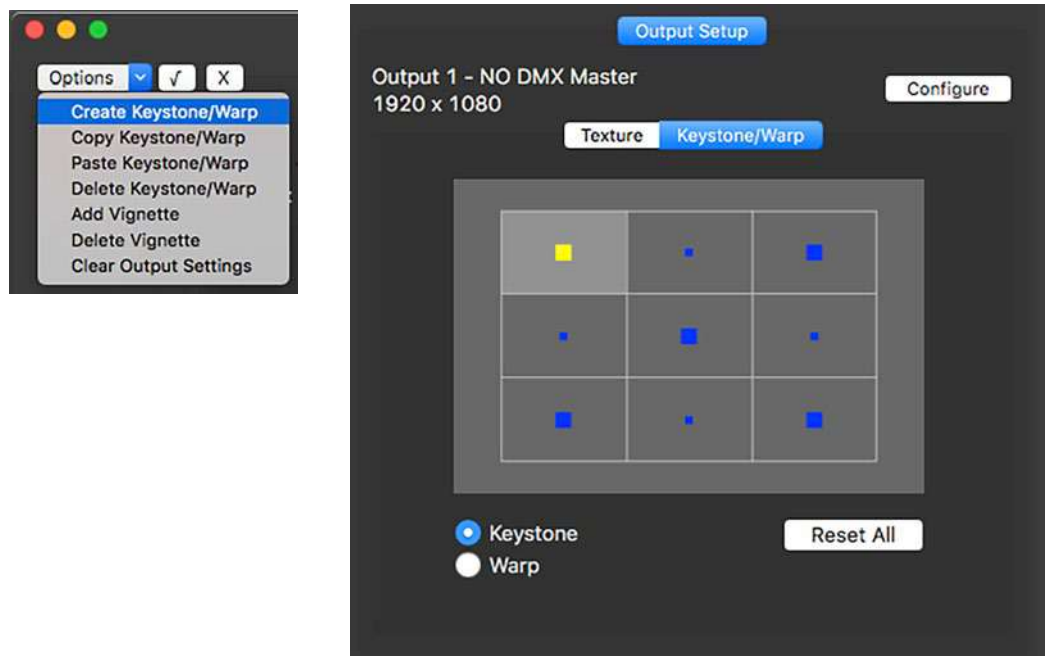


- Step 4. Either keystone or warp configuration is selected using the radio buttons below the gridded area. Only keystone or warp can be active, not both. In the gridded area, the larger blue squares represent the control points used to adjust the keystone or warp. The smaller blue squares on the keystone grid are not adjustable.
- For keystone configuration there are five adjustable points, one in each corner and one in the middle. The corner points represent the corners of the output and may be dragged inwards or outwards. The middle point is used to modify the linearity of the keystone correction. The smaller blue squares move automatically to represent the center points of the lines between their adjacent corner points.
 - For warp configuration there are nine points. As with keystone, the corner points represent the corners of the output. Each of the other five points represents the center point of a line between the points to either side (left/right or above/below). These five points can be adjusted to vary the center point of the bezier curve that is drawn between the points to either side.

Step 5. To adjust a control point, click anywhere inside the rectangle that contains the point to be adjusted. The corresponding point will turn yellow indicating that the mouse can be used (click and drag) to adjust the geometry. The keyboard arrow keys can also be used to move in a more precise fashion, using the [option] key for even finer control. Note that the points can move outside of their original rectangle in any direction, and that it is the selection of the original rectangle (their “home base”) that selects the point, rather than a selection of the blue square that represents the point.


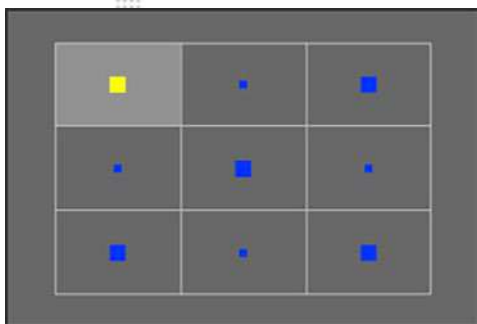


Keystone with default values

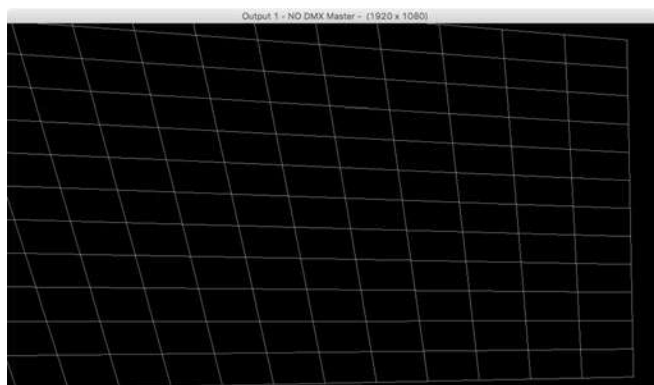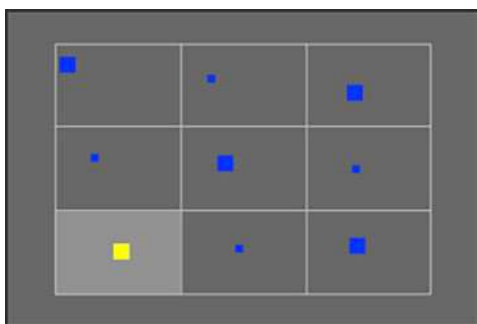

Keystone with modified values

 Double-clicking inside a rectangle will reset the geometry for that area of the output. Pressing the “Reset All” button will reset the geometry for all points.

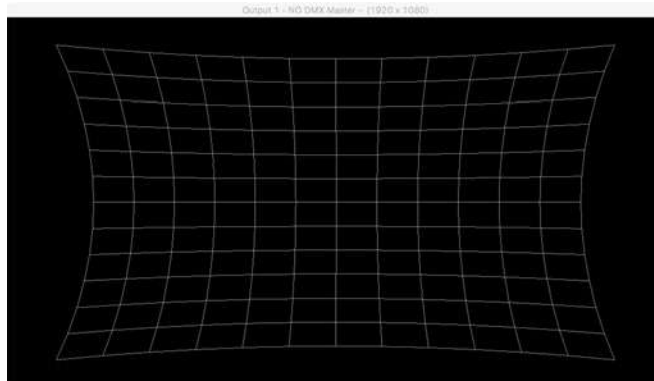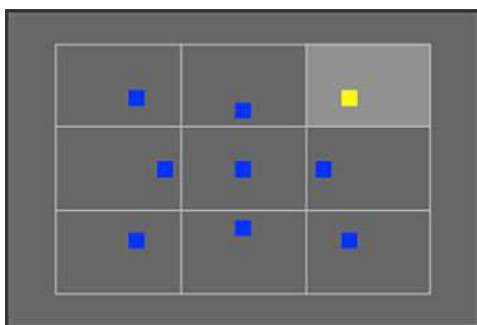

Warp with modified values

Setup of Vignettes


Vignettes can be used to create the soft-edge blending areas for overlapped outputs, or as simple vignettes to frame the edge of an output in black. Vignettes are essentially the same as the Mbox Keystone fixture's Edge Top/Right/Bottom/Left parameters. However, Vignettes can have separate curve types and gamma for each edge whereas the DMX-controlled Keystone fixture's edges must all use the same curve and gamma.

Vignettes are applied parallel to their corresponding edge, following the line or curve of the output's keystone/warp geometry. The vignette extends from the edge of the output towards the center. The area affected by the vignette may appear to fade to black onscreen when the output is viewed individually, but is actually fading to transparent. The transparency will become apparent if the output is used with another outputs as part of an overlapped and blended projection setup.


Important! To view the results of vignette configuration created in Mbox Remote on an output, the output must have an output master assigned, and must have that Output Master > Keystone Mode/Curve parameter set to a value of 0.

To set up Vignettes:

- Step 1. On the Outputs tab of the Mbox or Remote application, configure the Mbox server to have two equal-sized outputs. At the same time, make sure the Global Surface's width is equal to the combined width of the two outputs.

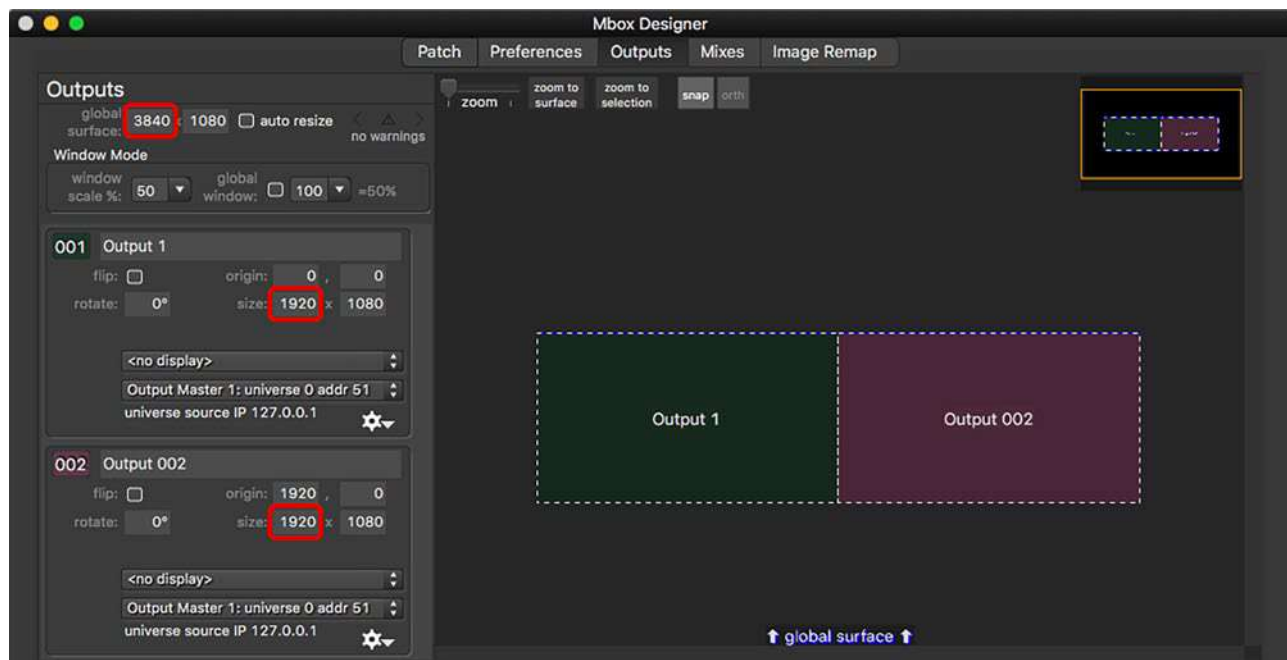

- Step 2. Assuming that this is going to be an overlapped and blended projection setup, change the X Origin of each of the outputs to give them a 400 pixel overlap:
- Output 1 will have an X Origin of 200 to move it 200 pixels to the right.
 - Output 2 will have an X Origin of 1720 to move it 200 pixels to the left.

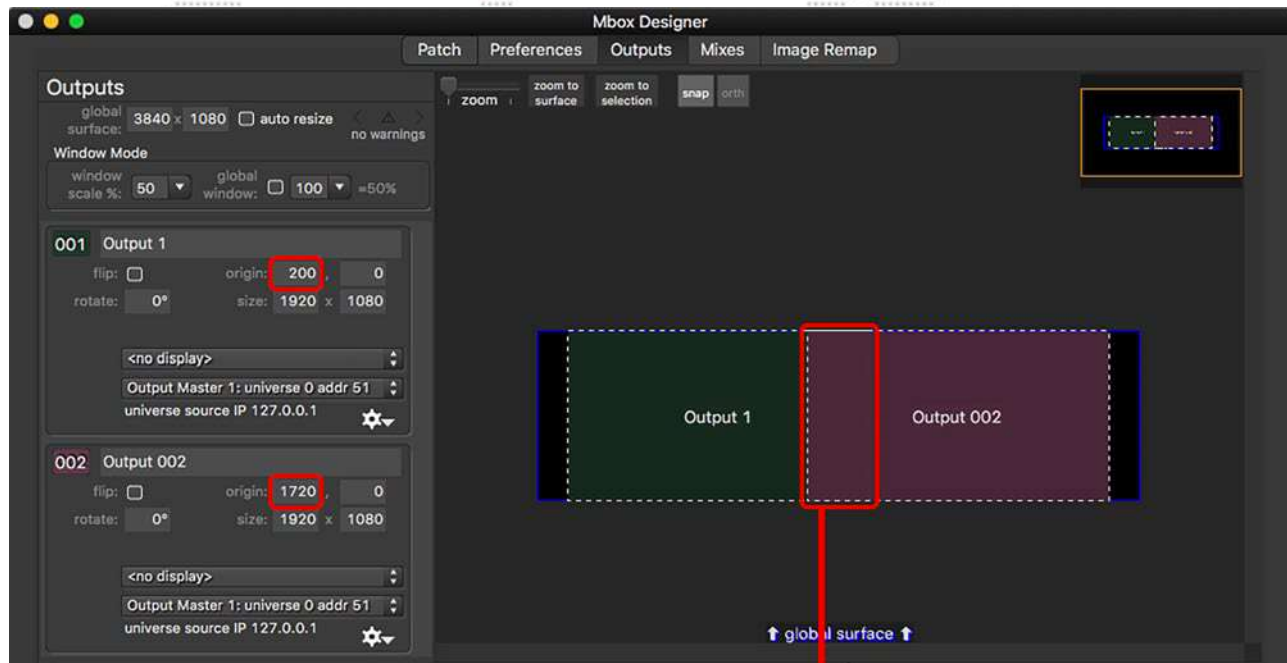


Overlap ares (400 pixels wide)



This will lead to the following result on the outputs from Mbox, note the repeated pixels caused by the overlap of the two outputs on the Global Surface:




- Step 3. Switch to the Mbox Remote application and open the Projection Editor window if it is not already open. Output 1 and Output 2 should be shown in the left-hand column of the window. Select each output in turn and perform the following:
- Click on the Configure button to enable the editor for the output.
 - Click on the Texture tab if it is not already selected.
 - Click on the Options pop-up or right-click in the empty area below the Texture tab then select Add Vignette.

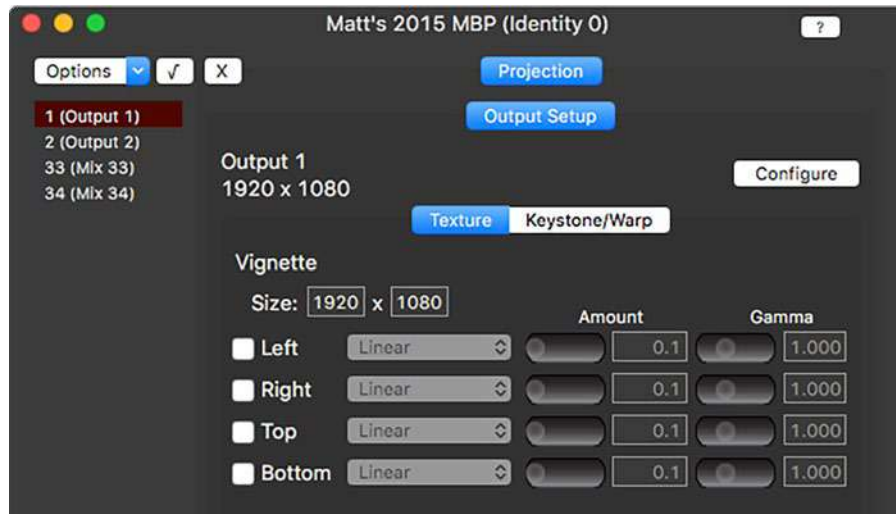

- Step 4. The Vignette editing tools provide separate vignette controls for each edge of the output.
- The Enable checkbox turns the vignette on/off.
 - The Curve pop-up selects from three available curves for the vignette: Linear, Raised Cosine, or Sine.
 - The Amount value sets how far the vignette extends (in pixels) inwards from the edge of the output.
 - The Gamma value sets the gamma (the linearity) of the vignette's transparency fade.
- Step 5. For Output 1, enable the right side vignette and set its Amount value to 400. For Output 2, enable the left side vignette and set its Amount value to 400. The following images show the result on the outputs of Mbox.

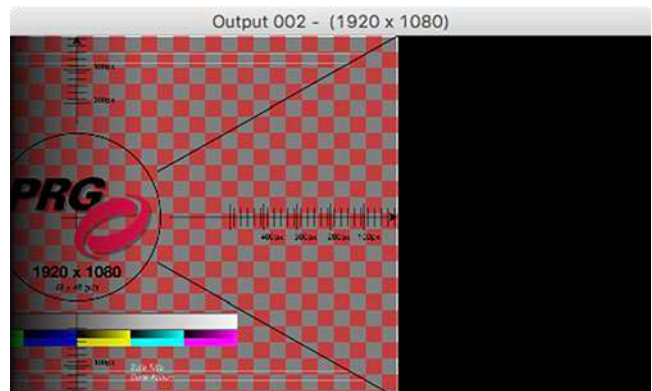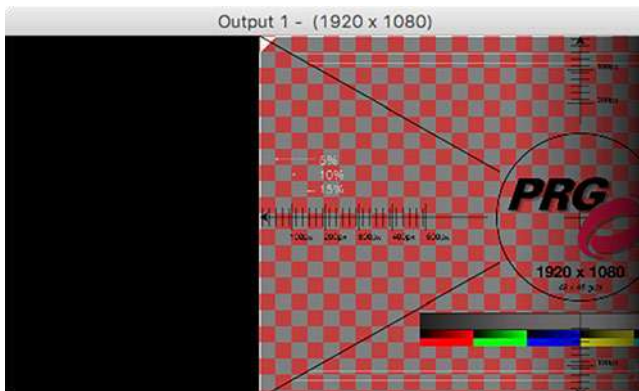

- Step 6. At this point the outputs from Mbox would need to be connected to a pair of projectors to continue to adjust the vignette settings (including curve and gamma) to get the best blend results.

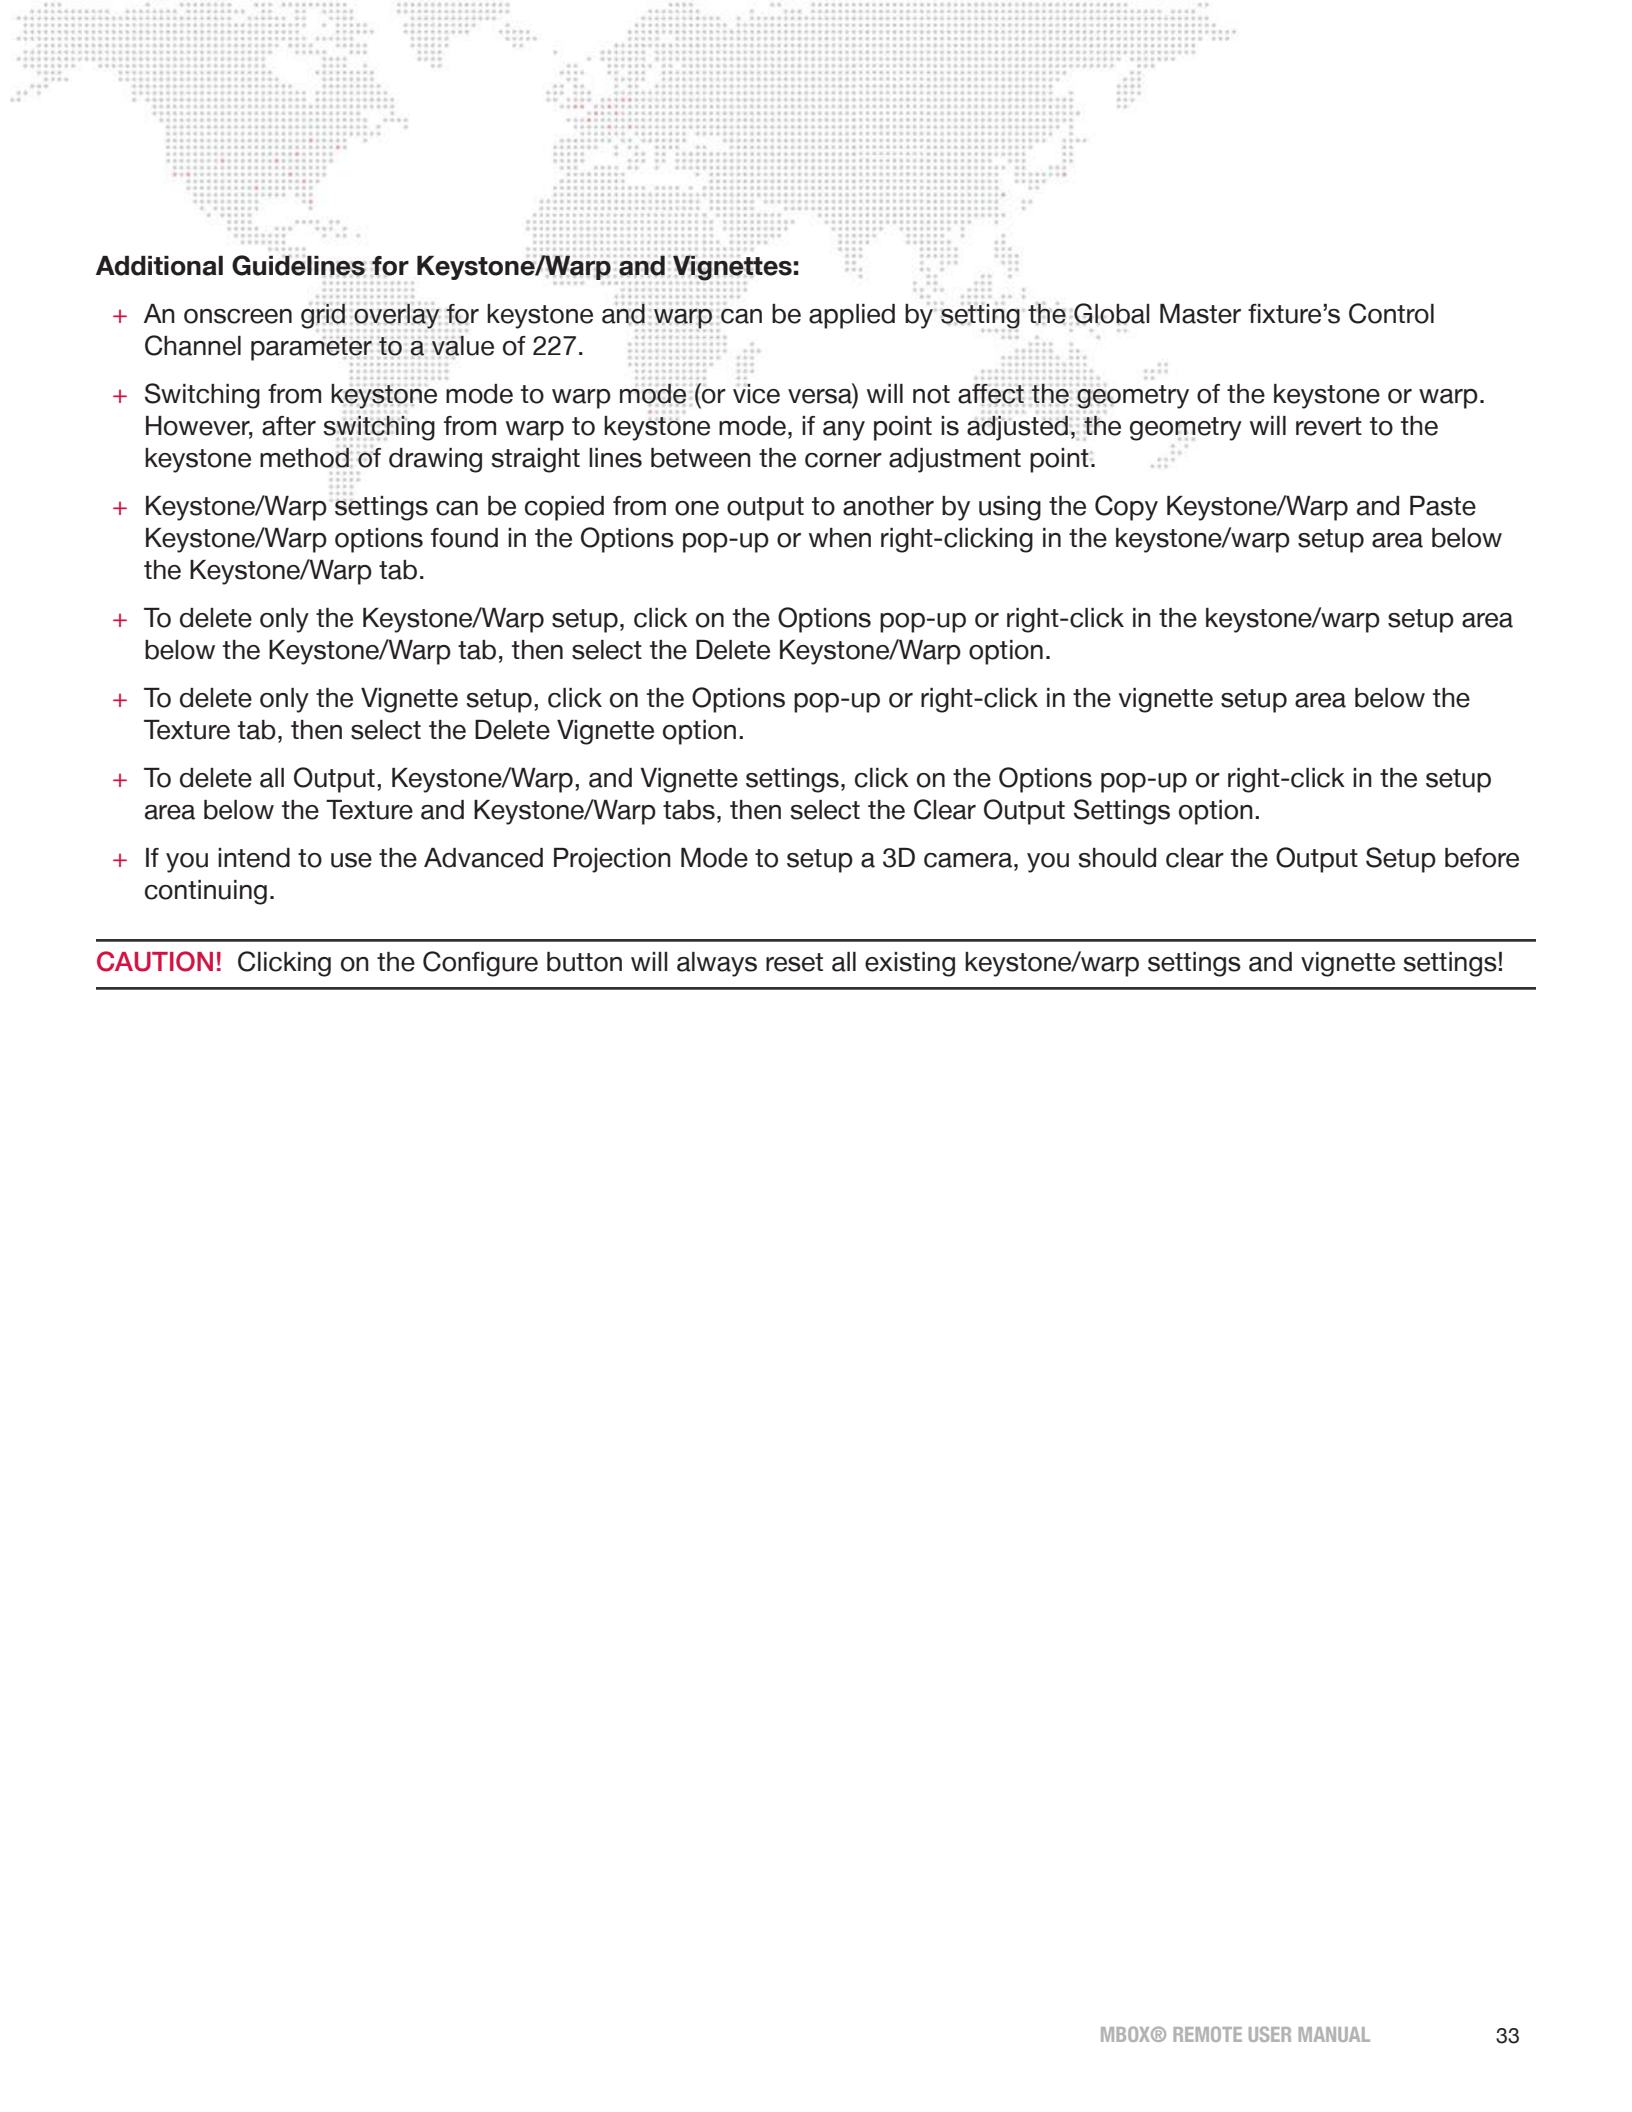

Additional Guidelines for Keystone/Warp and Vignettes:


- + An onscreen grid overlay for keystone and warp can be applied by setting the Global Master fixture's Control Channel parameter to a value of 227.
- + Switching from keystone mode to warp mode (or vice versa) will not affect the geometry of the keystone or warp. However, after switching from warp to keystone mode, if any point is adjusted, the geometry will revert to the keystone method of drawing straight lines between the corner adjustment point.
- + Keystone/Warp settings can be copied from one output to another by using the Copy Keystone/Warp and Paste Keystone/Warp options found in the Options pop-up or when right-clicking in the keystone/warp setup area below the Keystone/Warp tab.
- + To delete only the Keystone/Warp setup, click on the Options pop-up or right-click in the keystone/warp setup area below the Keystone/Warp tab, then select the Delete Keystone/Warp option.
- + To delete only the Vignette setup, click on the Options pop-up or right-click in the vignette setup area below the Texture tab, then select the Delete Vignette option.
- + To delete all Output, Keystone/Warp, and Vignette settings, click on the Options pop-up or right-click in the setup area below the Texture and Keystone/Warp tabs, then select the Clear Output Settings option.
- + If you intend to use the Advanced Projection Mode to setup a 3D camera, you should clear the Output Setup before continuing.

CAUTION! Clicking on the Configure button will always reset all existing keystone/warp settings and vignette settings!

Advanced Mode (Mbox Designer/Studio License Levels Only)

Advanced Projection Setup

The Advanced Projection mode is enabled by checking the checkbox in the Mbox Remote Preferences window. (Open the Remote Preferences window by clicking the Edit Servers button on the main window or pressing [⌘,] on the keyboard.)

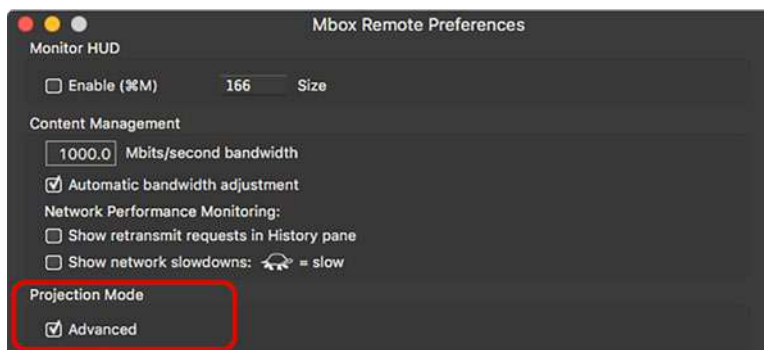

Projection > Output Setup


In Advanced Projection mode, the Output Setup tab is the same as it is in Basic Projection mode.


CAUTION! Using the keystone/warp or vignette features of the **Projection > Output Setup** tab will have an impact on the result of the camera's rendering of the 3D environment. To use the features on the **Projection > Camera Setup** tab to best effect, first remove any output settings by clicking on the **Projection > Output Setup** tab and selecting Clear Output Settings from the Options pop-up or from the menu shown when right-clicking in the setup area below the Output Setup tab.

Projection > Camera Setup (Mbox Designer License Level Only)

All three versions of Mbox have a default 3D camera that is used when rendering 3D objects. The default camera is assigned to the Global Surface and is not configurable. The Mbox Designer license level allows additional 3D cameras to be created - one for each output or mix. Each added 3D camera uses real-world measurements for its position, the point that it is looking at, and other adjustable parameters.

With an output or mix selected in the left-hand column of the Projection Editor window, clicking on the Camera Setup tab initially shows a blank work area. To add a camera, click on the Options pop-up or right-click in the empty setup area below the Texture tab, then select Add Camera.

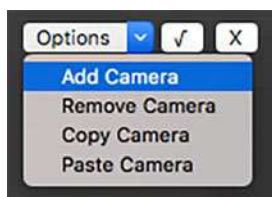

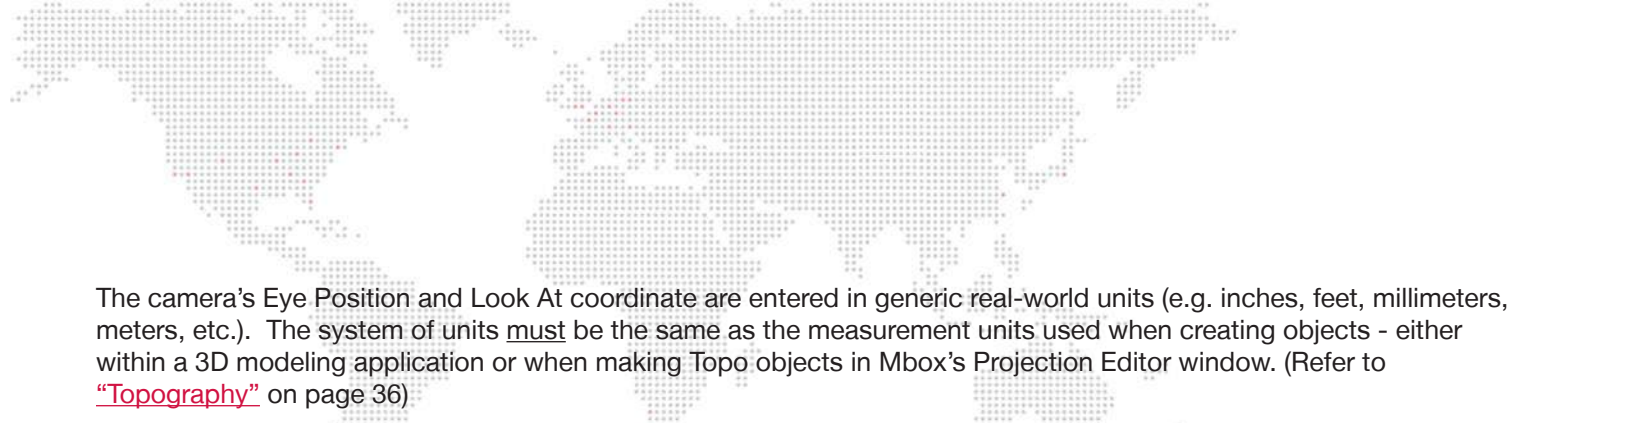

The camera's Eye Position and Look At coordinate are entered in generic real-world units (e.g. inches, feet, millimeters, meters, etc.). The system of units must be the same as the measurement units used when creating objects - either within a 3D modeling application or when making Topo objects in Mbox's Projection Editor window. (Refer to ["Topography"](#) on page 36)

For example, if the show requires projection upon a cube that is 1 meter on each edge, a 3D model of a cube that is one unit on each edge can be created in a 3D modeling application. Based on 1 unit equaling 1 meter, meters should be the units for measurements when entering values on the Camera Setup tab. If the 3D model cube is made to be 1000 units on each edge (as if using millimeters), then use millimeters as the units for measurements on the Camera Setup tab.

When setting up a projection mapping system and the objects used, also consider the 3D coordinate origin for the entire system - objects and projectors. The origin should be a real-world reference point that can be marked and used for measurements when physically setting up the objects and projector(s) in the performance venue. 3D models created for use in any projection mapping system must also be created with this origin in mind; as without correct placement and/or rotation they will not be in the correct place in Mbox's 3D environment.

Note: Measurements use decimal notation with an accuracy of three decimal places. It is recommended to use measurement units that are appropriate to realistic and accurate numbers. Ideally, large projection mapping setups should not be scaled in small units of measure like millimeters or inches. Use of metric units is recommended as they work far better than standard units with decimal notation.

CAUTION! By default all layers are rendered in 3D using the Global Surface's default 3D camera. In order to use the configurable 3D camera on a specific output or mix, the layer must be assigned to the correct mix number using the Mix Select parameter. Additionally, the layer's mix mode should be set to a mode that centers the layer within the mix. (Refer to the Mbox User Manual, Chapter 4: Operation > 3D Perspective Camera for more information)

Camera Property Descriptions:

- + Bearing: camera's horizontal angular offset from the Z axis, measured in degrees.
- + Distance: camera's horizontal distance from the origin, measured in generic units.
- + Eye Position: camera location, measured in generic units.
 - X: camera's distance from the origin along the X axis.
 - Y: camera's distance from the origin along the Y axis.
 - Z: camera's distance from the origin along the Z axis.
- + Link Eye Position & Look At Point checkbox: links Eye Position and Look At X and Y parameters to allow easy lateral shifting of the image.
- + Look At Point: focus point (along a line through the center of the lens) for the camera, measured in generic units.
 - X: look at point's distance from the origin along the X axis.
 - Y: look at point's distance from the origin along the Y axis.
 - Z: look at point's distance from the origin along the Z axis.

- + **Lens Adjust:** adjustments to correct the effects of lens zoom or distortion in the output device (typically a projector).
 - **Aspect:** widens or narrows the image to correct for aspect ratio differences between the video signal and the projector's native resolution.
 - **FOV:** adjusts the Field of View to match the camera's vertical FOV to that of the projector, measured in degrees.
 - **Roll:** rotates the camera around the axis drawn through the lens to the Look At Point.
 - **Shear X:** applies a horizontal rotation to the camera while maintaining both Eye Position and Look At Point. Used to correct the effects of lens shift or keystoneing.
 - **Shear Y:** applies a vertical rotation to the camera while maintaining both Eye Position and Look At Point. Used to correct the effects of lens shift or keystoneing.
- + **Image Offset**
 - **X:** moves entire image horizontally without affecting perspective.
 - **Y:** moves entire image vertically without affecting perspective.

 **Tip** Eye Position, Look At Point, and FOV, can be entered in advance from known measurements to set up projection mapping. To correct minor issues with perspective or line-up, other parameters like Aspect, Roll, or Shear may need to be adjusted manually once the projector is positioned.

FOV can be hard to calculate in advance as projector manufacturers don't always publish FOV numbers for their lenses. To determine FOV for an actual projector and lens combination:

- Step 1. Position the projector such that the lens is perpendicular to a flat projection surface.
- Step 2. Make sure the projector has no lens shift. Set all scaling/keystone/warp parameters to off.
- Step 3. Bring up a test pattern on the projector that is the same size as the projector's native resolution.
- Step 4. Measure the distance from the projector's focal point (this is sometimes marked on the body of the projector) to the projection surface.
- Step 5. Measure the height of the projected image.
- Step 6. The FOV will = $(2 * \arctan(0.5 * \text{height/distance}))$


Note: The FOV value of Mbox's 3D camera matches the FOV (vertical) value used in Cinema4D and is 1/2 the FOV value in Blender. (e.g. a FOV value of 25° in Mbox is equal to an FOV of 50° in Blender)

Topography

Mbox's Topography files (referred to as "topo objects") are 3D objects constructed programmatically within interactions between Mbox and Mbox Remote. Topo objects are intended primarily as projection surfaces to be used for simple projection mapping or 2D layout. Because topo objects can be created in Remote, there is no need for an external modeling application. UV mapping (texturing) coordinates for topo objects are automatically created and can be edited. There are several topo object types to choose from. Topo objects can be resized, positioned, rotated, and curved as required to create the desired shape or surface for projection.

Topo objects (with the exception of the Pixel Rect) use units of measure equivalent to the units of measure used for the Camera positioning. Therefore, when using meters for measurement in the projector locations in the venue, any projection objects should be measured in meters as well and their respective topo objects created with dimensions in meters.


The initial step in using topo file is to create the base object. With the Topography > Geometry tab selected, select New Topography... from the Options pop-up or from the menu show after right-clicking in the empty setup area below the Geometry tab. In the window that appears, there are five settings to configure for the new topo file.

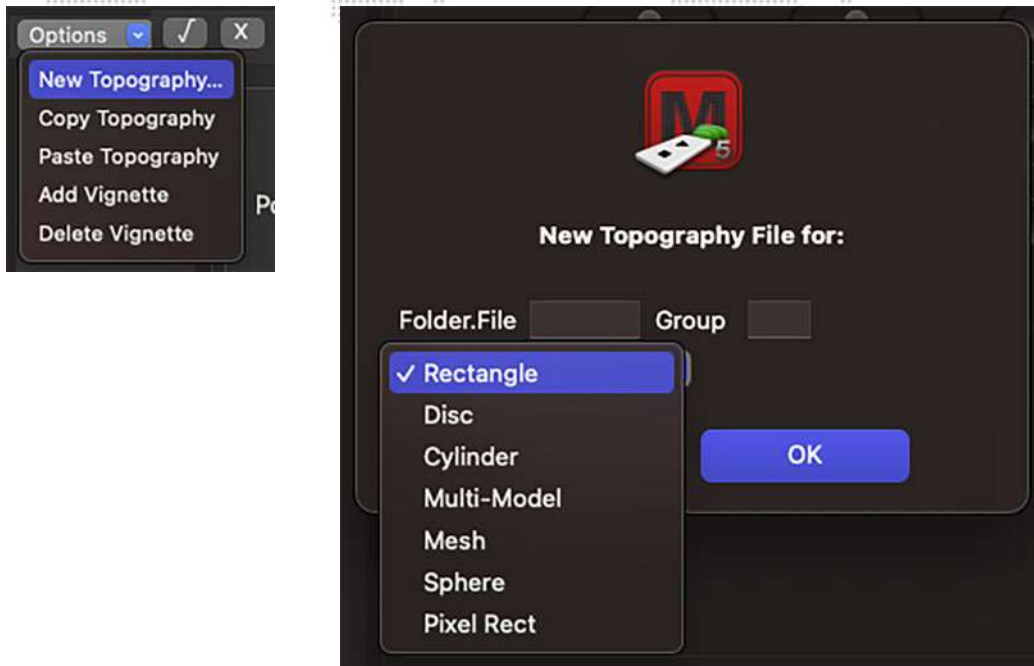

- + **Folder.File:** 8-bit index folder and file numbers for the topo object file that you are creating. This must be a unique index that does not currently exist. If the index already exists an error message will be displayed, and the topo item will not be created. The value must be formatted with the period between the two numbers but does not need leading zeros (e.g. 21.132). Note: With Mbox Studio or Mini license levels, the folder number MUST always be 0 as only one object folder (256 possible objects) is allowed.
- + **Group:** 8-bit number for the group this topo file should belong to. If this topo file is to be used on all servers, do not enter a group number. (Refer to the Mbox User Manual for more information about grouped content.)
- + **Type:** selection of one of seven different types of topo files.
 - Rectangle: rectangular shape with no thickness that can have a horizontal curvature
 - Disc: round shape with no thickness.
 - Cylinder: rectangular shape that can be bent into a cylindrical shape.
 - Multi-model: collection of object files (obj, topo, svg) that can be used together on one layer. (Mbox Designer license level only.)
 - Mesh: rectangular shape with no thickness and adjustable grid divisions for enhanced geometric correction.
 - Sphere: spherical shape with adjustable curvature.
 - Pixel Rect: rectangular shape with no thickness, drawn using orthographic projection (i.e. without depth). The Pixel Rect's dimensions use actual pixels rather than the generic units that all other topos use.
- + **Mesh dimensions:** horizontal and vertical divisions for the mesh. The divisions entered must use even numbers for best results. If an odd number of divisions is entered, the number will be increased by one to make it even.

Topography > Geometry

The Geometry tab allows you to define the position, rotation, size, and curvature of the selected topo file.

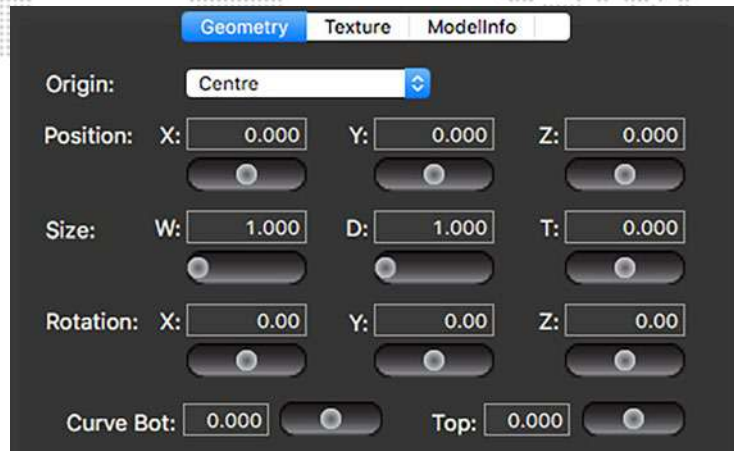

- + Origin: anchor point for the topo object's position coordinates.
- + Position: object's home position in 3D space.
- + Size: object's size. W refers to width, D refers to depth, T refers to thickness. The different topo objects make different use of the three dimensions depending on their geometry. (Note: the T setting is not used for Rectangles, Discs, Meshes, and Pixel Rects.)
- + Rotation: object's rotation around global X/Y/Z axes.
- + Curve (Bottom/Top): specific to rectangles. Curve refers to the curvature of two distinct edges of a rectangle. Top and Bottom refer those edges of the rectangle when the X Rotation value is set to 0°.
- + Curve (Arc/Angle): specific to discs and cylinders. Arc refers to the coverage of the object in degrees (e.g., 180° is half a disc/cylinder, 360° is a fully closed disc/cylinder). Angle refers to the rotation of the disc/cylinder around its axis.



- + Hole: specific to discs. The Hole parameter is used to create a hole (like a donut hole) in the center of the disc. The value entered is expressed as a percentage - i.e., the hole's diameter as a percentage of the disc's diameter - with 0.5 being 50%, etc.



- + Lune (Arc/Angle): specific to spheres. Lune refers to the curvature arc and coverage along the horizontal axis. i.e. as around the equator.



- + Zone (Arc/Angle): specific to spheres. Zone refers to the curvature arc and coverage along the vertical axis. i.e. as around a line of longitude.



Note: When editing topo objects, it may be helpful to turn on the onscreen grid overlay for topo objects by setting the Global Master fixture's Control Channel parameter to a value of 221.



Topography > Texture

The Texture tab allows you to define how a texture will be applied to the topo object. When a topo is used on a layer, the layer's 2D texture will be applied to the topo. Topo objects are typically created for specific texture sizes. Content having a size that is different to the topo's intent can be applied to a topo, but some amount of scale, aspect, and position adjustment may be required to get a proper fit.

The Texture settings define the manner in which the layer's texture gets applied to the topo. A layer's texture is defined here as the 2D content (movie, image sequence, or still image) on the layer and will be the same size (in pixels) as that content.

Each topo has a Context, which is defined as its rendered area. A topo also has a Sample, which is defined as the rectangular portion of the layer's texture that will be applied to the topo's context. The sample has properties that affect its size, origin, rotation, and flip value.

Sample properties:

- + Origin (X and Y): positions the texture on the context such that the point with these coordinates is placed at the top-left corner of the context - which corresponds to the top-left of the topo.
 - The origin values can be set such that portions of the texture are not visible on the topo, because they extend beyond the edges of the context.
- + Width and Height: dictates how much of the texture, beginning from the origin and extending to the right and downwards, is applied to the context.
 - As noted above, if the origin is shifted and the width/height of the sample is not reduced, portions of the texture will not be visible on the topo.
 - Reducing the Sample width or height will result in the image on the topo becoming larger on the corresponding axis. Although less of the texture is being displayed, since the topo's context has not changed size, fewer pixels will be stretched across the same area.
- + Flipped: reverses the texture (left to right) on the topo as if it is being viewed in a mirror.
- + Rotation: sets an arbitrary rotation of the texture around the center of the topo.

When a topo is first created, its context has a size of 1x1. The topo's sample has a width and height of 1x1 also, and an origin of 0,0, no rotation, and no flip. These default values result in the entirety of the layer's texture being force-fit (stretched or squished) to fit onto the topo's context. If the intention is that the layer's content, no matter its size, should always fit onto the topo, then no changes need be made to the topo's texture settings. However to provide the ability to have pixel-accurate sampling of the layer's texture and placement onto the topo, the context size must be edited to be exactly the size of the layer's texture, followed by editing the sample's properties so as to display the correct portion of the texture on the topo.

To set up the texture properties of a topo:

- Step 1. Create a new topo object. Edit its geometry properties as required. Make sure the aspect ratio of the topo matches the aspect of the content that will be shown on it.
- Step 2. On the Texture tab, edit the Context size (width and height) to be equal to the overall width and height of the content that will be used with the topo. The Sample width and height will change to the same values. This happens automatically to maintain the existing aspect ratio of the content.
- Step 3. Edit the Sample origin, width and height, rotation, and flip properties to display the correct portion of the content on the topo.

Note: Changing a topo's Context size width or height will result in the Sample origin, width, and height changing values automatically to maintain the existing aspect ratio and to continue to display exactly the same portion of the texture on the topo. In general, the Context size should not be changed, and any sizing should be handled by adjusting the Sample size.

As explained on the preceding page, topos can have a preset context size and sampling properties. Because the topo's texturing properties are set up to allow for pixel-accurate texture placement and scaling, it is important to explain what happens when a topo is used with a texture that is not the same size as the context size.

- + If the Context size and Sample width and height are equal to each other, the entire texture will be stretched or squished to fit the topo. Depending on the aspect ratio of the texture and the topo, this may result in a change in aspect ratio for the texture.
- + If the Context size and Sample width and height are not equal, then only a portion of the texture will be shown on the topo. The visible portion will be stretched or squished to fit the topo. At this point, the sampling of the texture is no longer pixel-accurate. The visible width/height of the texture can be determined by the following formulas:
 - Visible Width = Texture Width * (Sample Width/Context Width)
 - Visible Height = Texture Height * (Sample Height/Context Height)
- + Furthermore, when the Context size does not match the texture width and height, the Sample origin values also are no longer pixel-accurate. The actual X and Y origins can be determined using the following formulas:
 - Actual Origin X = Texture Width * (Origin X value/Context Width)
 - Actual Origin Y = Texture Height * (Origin Y value/Context Height)

Because the calculations involved in determining the texturing results when the Context size and the layer's texture are not the same, it is recommended that this situation be avoided whenever pixel-accurate texturing is required.

Vignettes on Topos

Similar to how they can be applied to outputs, Vignettes can be also applied to topos. While vignettes could be used as edge-blends between two different topos, they are more typically used to soften the hard edge of the topo, either as an effect or to provide a softened edge when projecting.

Important! As with vignettes on outputs, vignettes on topos cause the edge of the object to become transparent, not to become black.

Vignettes can be manually added to topos by clicking on the Options pop-up or right-clicking in the empty setup area below the Vignette tab, then selecting Add Vignette. The setup of vignettes on topos is the same as for vignettes applied to outputs. Refer to [“Setup of Vignettes”](#) on page 30 for detailed instructions on the setup of vignettes.


By default, the vignette is created with a size of 1x1. If the size is not altered, the Vignette amount properties will operate with a range of 0.0 to 1.0, with 0.0 being no vignette and 1.0 being a full vignette. If the Vignette size is edited to be the same size as the Context size (i.e. the size of the texture used on the topo) then the Vignette amount properties will have a range from 0.0 to a value equal to the width or height of the Vignette size. In this manner is possible to have pixel-accurate vignettes on the topo if desired.

Topography > ModelInfo

ModelInfo settings for a topo files are used to define properties for how the topo object reacts to layer positioning, rotation, and scaling, special case projection mapping, external Art-Net or sACN control (e.g. for remote control of position or rotation), and keystone/warp.

The Topography > ModelInfo tab shares its tabs with the main ModelInfo tab. The Topography > ModelInfo tab is used to set ModelInfo properties for topo objects only, while the main ModelInfo tab is used to set ModelInfo properties for .svg or .obj object files. The controls found on both tabs are identical, but some controls work with exclusively with .svg and .obj files and not with topos, and vice versa. The differences will be noted in the following sections.

Topography > ModelInfo > Properties

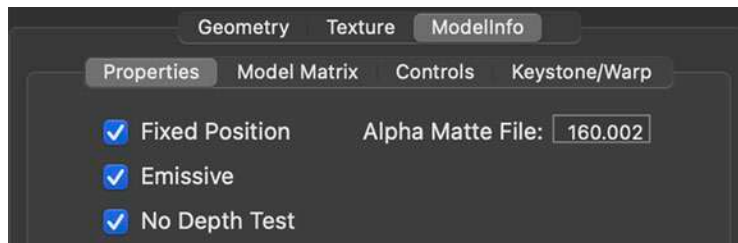

The Properties tab has four settings:

- + **Fixed Position:** causes the object's position, rotation, and scale to be disconnected from the normal layer position, rotation, and scale parameters. The layer's position and scale parameters will control the position and scale of the texture on the object instead. The layer's Z rotation parameter will control the rotation of the texture on the object.
 - The position, rotation, and scale of a topo may still be adjusted using the Projection Editor.
 - The position, rotation, and scale of .svg or .obj objects must be adjusted in the file itself.

CAUTION! Projection mapping will not be accurate unless the objects used have their fixed position checkbox checked!

- + **Emissive:** causes the object to be fully lit as if from a fully ambient lighting fixture with no color. This setting overrides the output of any of the standard Art-Net/sACN controlled lighting fixtures.
- + **No Depth Test:** causes depth testing to be disabled for the object. This setting stops the object from interacting with other objects on the Z axis. Models using the .svg format may benefit from enabling this setting. Topo Pixel Rects require this setting to be enabled for correct rendering results.
- + **Alpha Matte File:** 8-bit Media folder Folder.File index of a .vign, .jpg, or .png file to be used as an alpha matte only for topo objects (except pixrects), but not for .svg or .obj file. The matte is force-fit onto the topo based on the topo's size not the matte file's size.
 - Simple, four-sided edge-only mattes can be created as vignettes on the Vignette tab. More-complex mattes can be created and applied using JPEG or PNG files. When using JPEG/PNG files, the alpha value that results from applying the matte is based on the brightness of the matte image - black being transparent and white being opaque, with values in between being partially transparent - and not on any alpha channel in the image.

Note: When adjusting the ModelInfo properties for any objects other than topos, it may be necessary to perform a rescan [%R] after setting the property, as some changes will not take effect immediately.

Topography > ModelInfo > Model Matrix (Mbox Designer License Level Only)


The Model Matrix functionality allows an object to have its own unique perspective camera that is separate from the Global Surface's default camera and any output or mix cameras. If an object has a Model Matrix, the Model Matrix will override any other camera's influence on the perspective view of the object.

Model Matrices can make it easier to give multiple objects differing perspectives while keeping them all within the same output or mix. This is especially useful in the case of Multi Models, where several objects are combined on the same layer and must therefore always be in the same output or mix. (Refer to [“Topography > Multi Model”](#) on page 44) Using separate matrices allows multi-angle projection onto a single object to be completed using fewer layers and a less-complex programming setup.

An object’s Model Matrix properties are the same as those used for projection camera’s and therefore the controls on the Model Matrix tab are the same as those on the Projection > Camera Setup tab. Refer to [“Projection > Camera Setup”](#) on page 34 for information on setting up these properties.

Topography > ModelInfo > Controls (Mbox Designer License Level Only)

ModelInfo controls can be added to an object to allow additional Art-Net/sACN patched into the Mbox server to modify four aspects of the topo or object - position, rotation, texture position, and opacity.

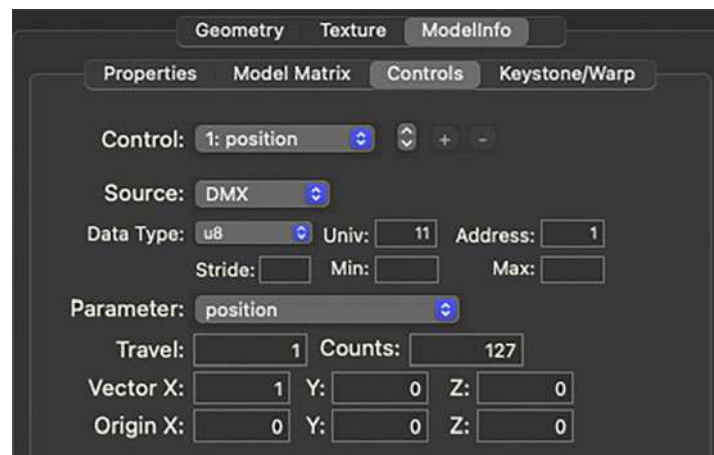


To add a control, click on the [+] button. To remove the currently selected control, click on the [-] button. If more than one control exists, use the Control pop-up to select a control and the up/down arrows to move the selected control up/down in the list of controls. Use the Source pop-up to select the type of control data being received - CONST (constant value) or DMX (Art-Net or sACN).

- + CONST: constant, manually entered offset values set on the Controls tab can be used to affect the parameter, but do not all for external control.
- + DMX: additional Art-Net or sACN can be sent to the Mbox server to control the parameter. By default, controls use the control protocol (Art-Net or sACN) that Mbox is using for overall control. The Remap/ModelInfo Protocol preference in Mbox can be used to override this and manually select one protocol or the other.

Constant controls can be used to make adjustments to an object or the texture on the object without affecting the Geometry or Texture settings of the original file. Using controls with external Art-Net/sACN control is where the power and flexibility lies. When you select DMX as the source for data, additional settings will be available for setup.

- + Data Type: refers to the format of the incoming Art-Net data.
 - u8: unsigned 8-bit integer, 0 to 255 with a default of 0.
 - o8: offset 8-bit integer, 0 to 255 with a default of 127.
 - s8: signed 8-bit integer, -128 to 127.
 - u16: unsigned 16-bit integer, 0 to 65535 with a default of 0.
 - o16: offset 16-bit integer, 0 to 65535 with a default of 32767.
 - s16: signed 16-bit integer, -32768 to 32767.
 - s32: signed 32-bit integer, -2,147,483,648 to 2,147,483,647.

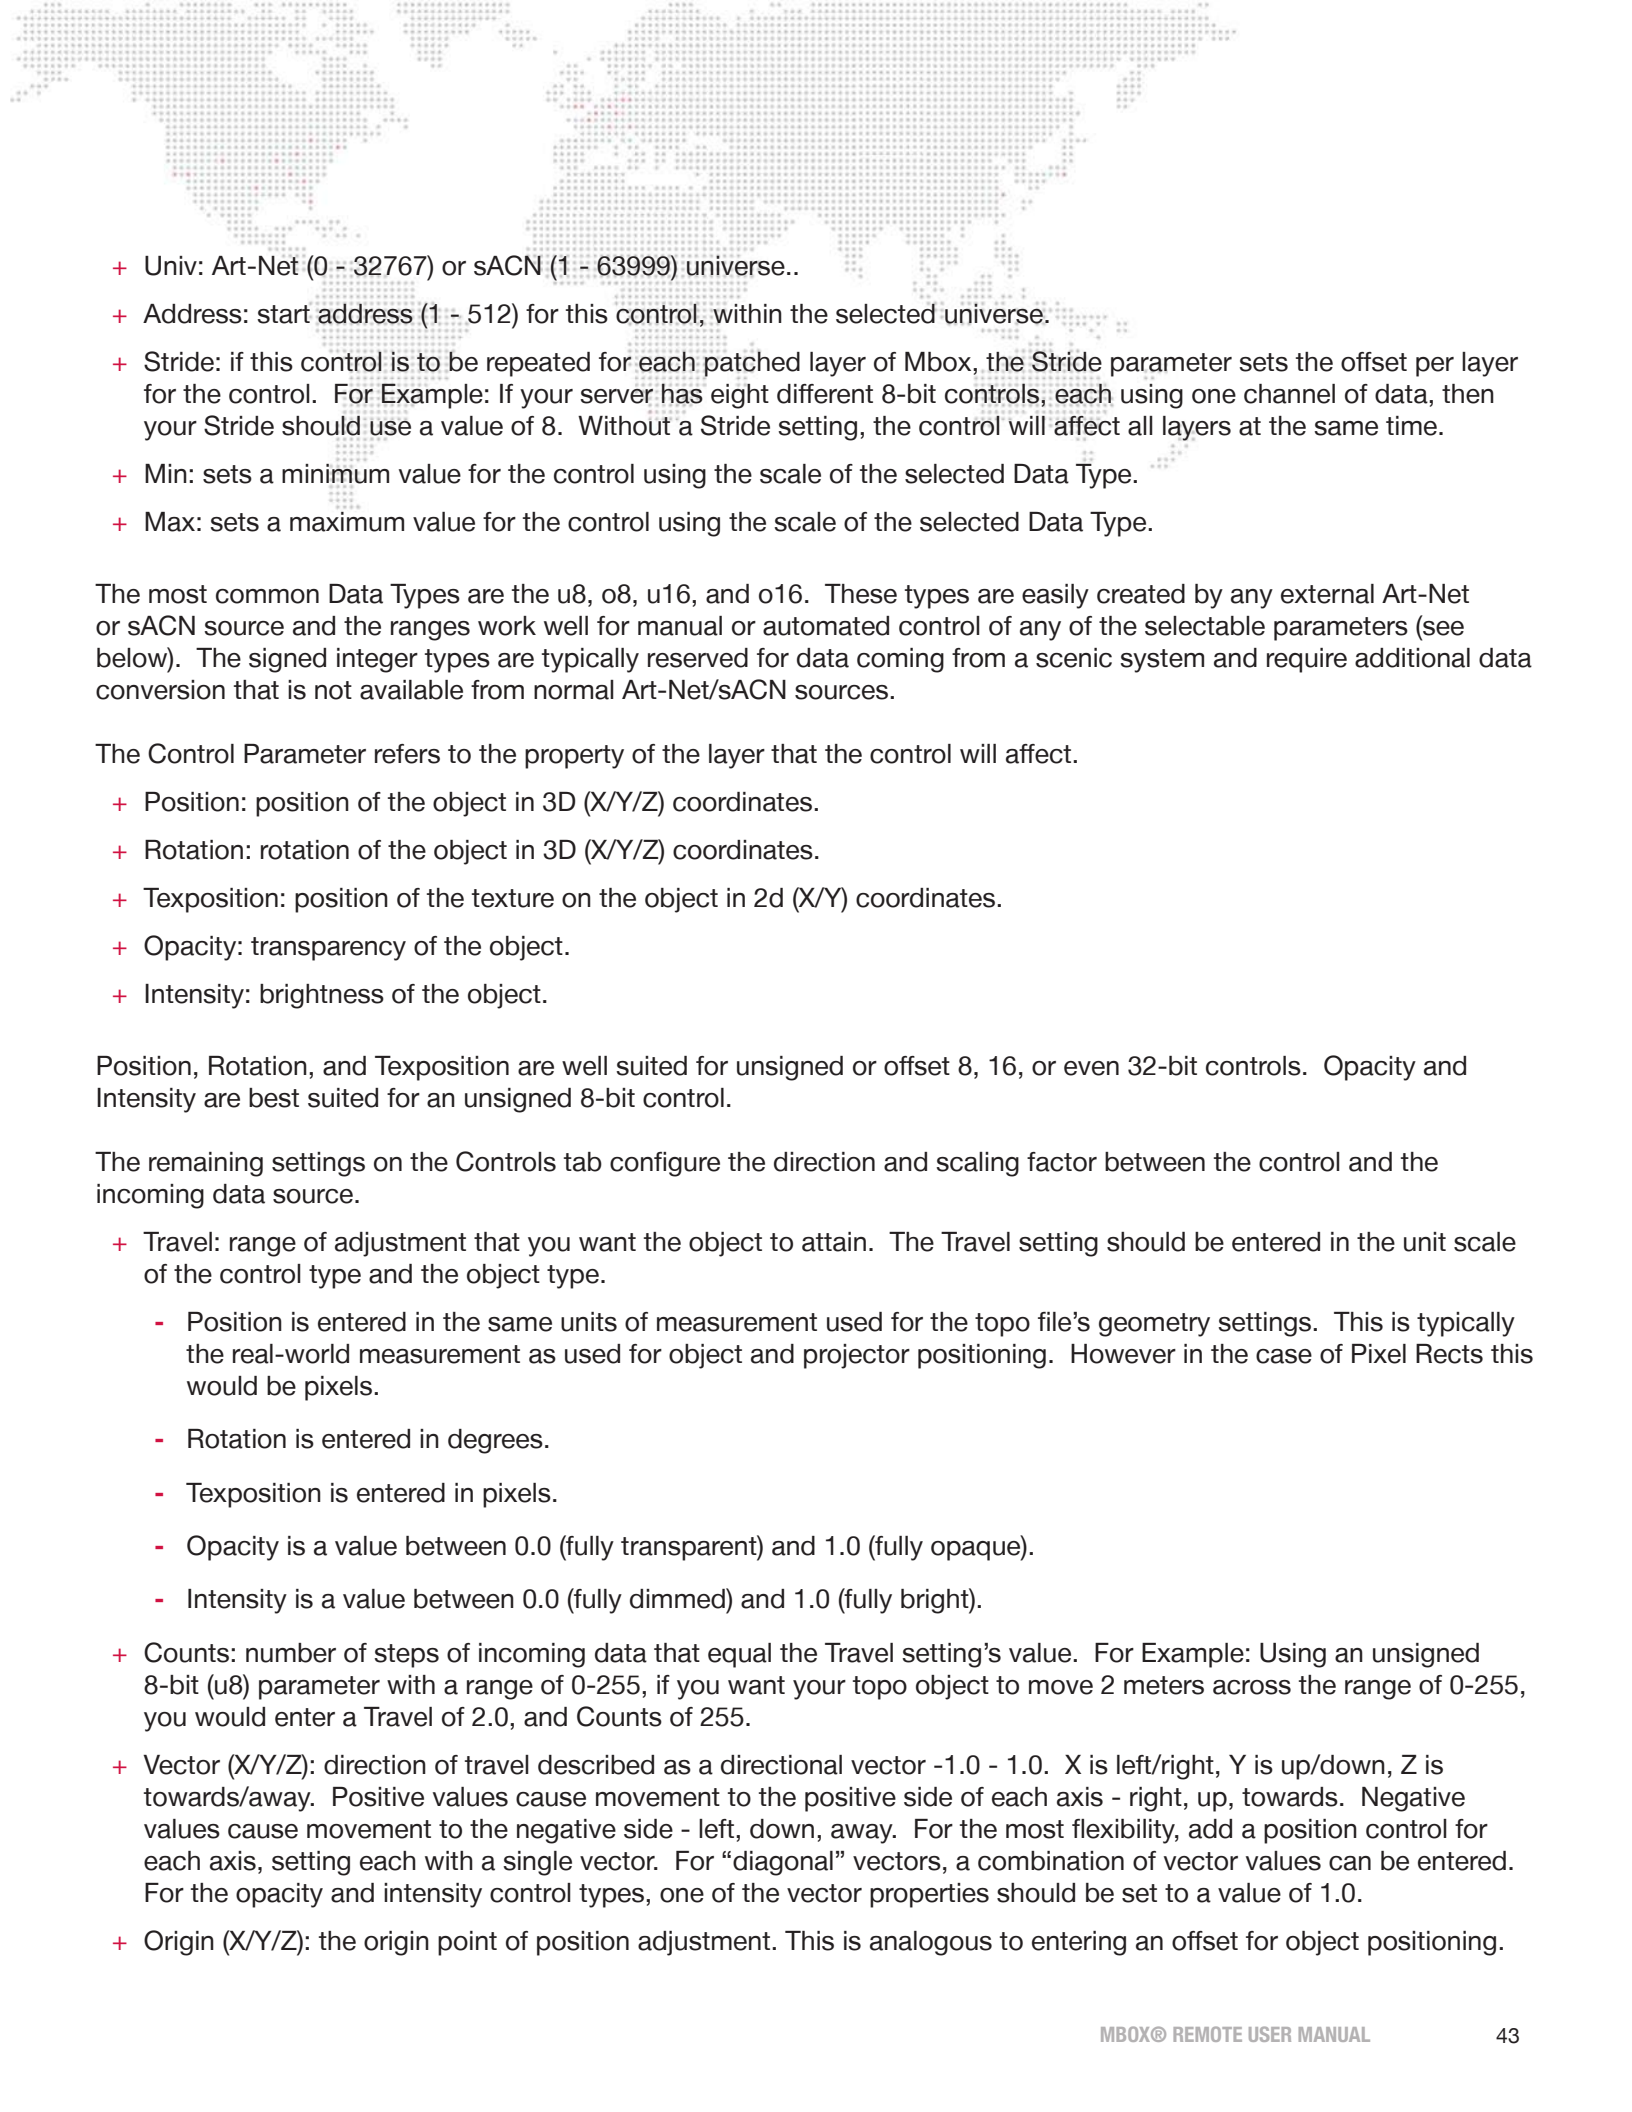- 
- + Univ: Art-Net (0 - 32767) or sACN (1 - 63999) universe..
 - + Address: start address (1 - 512) for this control, within the selected universe.
 - + Stride: if this control is to be repeated for each patched layer of Mbox, the Stride parameter sets the offset per layer for the control. For Example: If your server has eight different 8-bit controls, each using one channel of data, then your Stride should use a value of 8. Without a Stride setting, the control will affect all layers at the same time.
 - + Min: sets a minimum value for the control using the scale of the selected Data Type.
 - + Max: sets a maximum value for the control using the scale of the selected Data Type.

The most common Data Types are the u8, o8, u16, and o16. These types are easily created by any external Art-Net or sACN source and the ranges work well for manual or automated control of any of the selectable parameters (see below). The signed integer types are typically reserved for data coming from a scenic system and require additional data conversion that is not available from normal Art-Net/sACN sources.

The Control Parameter refers to the property of the layer that the control will affect.

- + Position: position of the object in 3D (X/Y/Z) coordinates.
- + Rotation: rotation of the object in 3D (X/Y/Z) coordinates.
- + Texposition: position of the texture on the object in 2d (X/Y) coordinates.
- + Opacity: transparency of the object.
- + Intensity: brightness of the object.

Position, Rotation, and Texposition are well suited for unsigned or offset 8, 16, or even 32-bit controls. Opacity and Intensity are best suited for an unsigned 8-bit control.

The remaining settings on the Controls tab configure the direction and scaling factor between the control and the incoming data source.

- + Travel: range of adjustment that you want the object to attain. The Travel setting should be entered in the unit scale of the control type and the object type.
 - Position is entered in the same units of measurement used for the topo file's geometry settings. This is typically the real-world measurement as used for object and projector positioning. However in the case of Pixel Rects this would be pixels.
 - Rotation is entered in degrees.
 - Texposition is entered in pixels.
 - Opacity is a value between 0.0 (fully transparent) and 1.0 (fully opaque).
 - Intensity is a value between 0.0 (fully dimmed) and 1.0 (fully bright).
- + Counts: number of steps of incoming data that equal the Travel setting's value. For Example: Using an unsigned 8-bit (u8) parameter with a range of 0-255, if you want your topo object to move 2 meters across the range of 0-255, you would enter a Travel of 2.0, and Counts of 255.
- + Vector (X/Y/Z): direction of travel described as a directional vector -1.0 - 1.0. X is left/right, Y is up/down, Z is towards/away. Positive values cause movement to the positive side of each axis - right, up, towards. Negative values cause movement to the negative side - left, down, away. For the most flexibility, add a position control for each axis, setting each with a single vector. For "diagonal" vectors, a combination of vector values can be entered. For the opacity and intensity control types, one of the vector properties should be set to a value of 1.0.
- + Origin (X/Y/Z): the origin point of position adjustment. This is analogous to entering an offset for object positioning.

Important! Controls must have at least one vector property with a non-zero value for the control to work!

 **Tip** To reverse the direction of motion for any incoming value, flip the sign on the appropriate vector. For example, if the vector is 1.0 and the direction needs to be reversed, make the vector value -1.0 instead.


Topography > ModelInfo > Keystone/Warp

A keystone/warp can be added to topography files. Refer to [“Setup of Keystone/Warp”](#) on page 27 for information on how to create and configure a keystone or warp for a topo object.

Topography > Multi Model (Mbox Designer License Level Only)

As mentioned previously in the Topography > Geometry section, one of the topo objects that Remote can create is a Multi Model. A Multi Model is made up of references to more than one object file, which become grouped together so they can be recalled as one rather than separately. Multi Models are very powerful as they provide the means to use more than one object on a layer, sharing the same texture (or a portion thereof) but with each object having its own projection mapping properties.

The object files that make up a Multi Model are assigned on the Multi Model tab. The Multi Model must be created first and will have its own unique Folder.File index. To assign an object to a Multi Model, first select the Multi Model in the left-hand column, then double-click within the empty gray field immediately below any existing object index references to enter editing mode, then type in the object's index (using Folder.File syntax, leading zeros are not necessary) and press the [return] key to accept the edit.

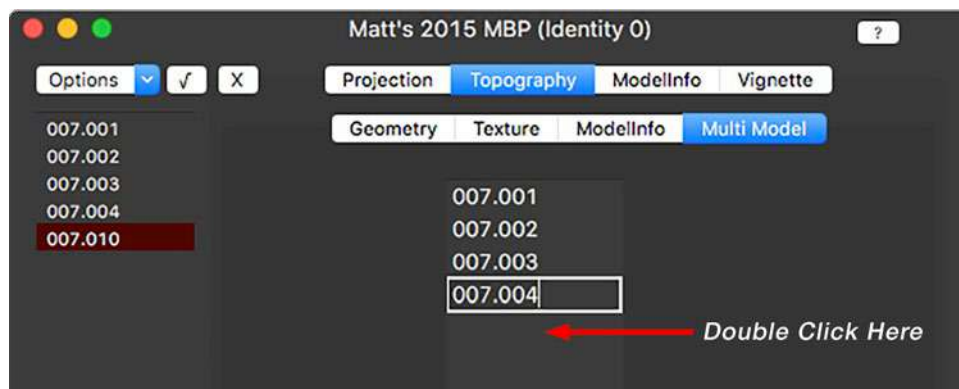

Important! Because Multi Models use references to the original objects, changes to the properties of the original, referenced objects will affect the Multi Model.



ModelInfo

In addition to being able to affect the ModelInfo properties of Mbox-created topo objects, Remote also allows you to add modelinfo properties to other object files (i.e. obj and svg). This functionality provides the means to set fixed and emissive properties, override existing camera perspective, add controls, and apply a keystone/warp.

Note: When editing the ModelInfo properties of .obj and .svg objects, it may be necessary to perform a rescan [⌘R] in the Mbox application in order for the changes to take affect.

ModelInfo > Properties

Refer to [“Topography > ModelInfo > Properties”](#) on page 41 for information.

- + Alpha Matte files are not available with .obj or .svg files.

ModelInfo > Model Matrix

Refer to [“Topography > ModelInfo > Model Matrix”](#) on page 41 for information.

ModelInfo > Controls

Refer to [“Topography > ModelInfo > Controls”](#) on page 42 for information.

ModelInfo > Keystone/Warp

Refer to [“Setup of Keystone/Warp”](#) on page 27 for information.

- + Keystone and warp are not currently available with .obj or .svg files.

Vignettes

The Vignette tab provides the controls to create custom four-sided edge masking that can be used on any topo object. Refer to [“Setup of Vignettes”](#) on page 30 for more detailed information on the adjustment of vignette settings.

Vignettes created on the Vignette tab have a default size of 1x1. If the size is not altered, the Vignette amount properties will operate with a range of 0.0 to 1.0, with 0.0 being no vignette and 1.0 being a full vignette. The vignette size can use any arbitrary values, and can be set to match the pixel dimensions of the topo if desired. The blend amount values are automatically recalculated when the vignette size is changed. Therefore, there is little or no visual difference between a vignette size of 100 x 100 with an amount of 5.0 and a vignette size of 1 x 1 with a size of 0.05.

When vignettes are created on the Vignette tab, a file is created and saved in the Mbox/Media folder of the Mbox server. Vignette files follow the standard Folder.File index structure and use the .vign file extension.

3D Object Creation Guidelines

Recommendations for 3D object creation for use with the Mbox projection mapping features.

Use the .noscale compile switch

When using .obj files for projection mapping with Mbox, it is absolutely necessary that the .noscale filename “switch” be used with the object. The .noscale switch will force the object to appear at the designed scale rather than being rescaled (normalized) by Mbox when it is compiled into a vertex array file. To apply the .noscale switch, add “.noscale” to the object’s file name, before the file extension. (Refer to the Mbox User Manual, Chapter 4: Operation > 3D Objects: Normalization)

For example: 001.MyObject.obj becomes 001.MyObject.noscale.obj

Use .obj & topo objects

For simple projection mapping, topo objects are recommended. For more complex mapping, .obj files can be used.

Avoid using .svg and .svge objects


Mbox can use .svg files for projection mapping, but topo files are far more useful and flexible. [Note: to work with the thumbnail generator for Mbox, the svg file extension must be changed to "svge".]

Axes - Mbox's XYZ axes are different to most modeling applications' XYZ axes


Mbox labels its 3D axes differently than most 3D modeling applications. Mbox uses a front view version of the axes and most modeling applications use a top view version.

In Mbox:

- + X axis is left<->right, left is negative and right is positive.
- + Y axis is down<->up, down is negative and up is positive.
- + Z axis is away from<->towards the viewer, away from is negative and towards is positive.

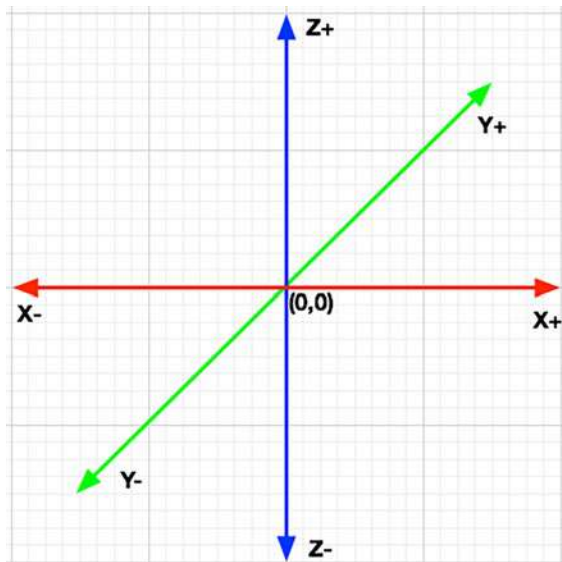

3D Modeling Application (e.g. Blender)

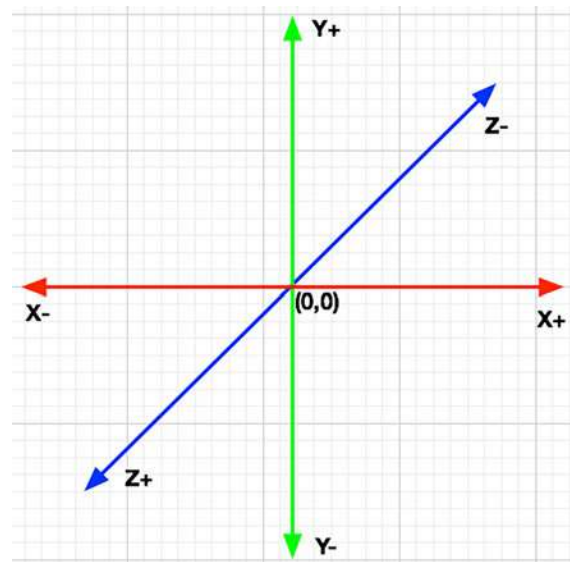


Mbox

Most 3D modeling applications swap the Y and Z axes when compared to Mbox. The Y axis now being the towards <-> away axis and the Z axis being the up <-> down axis. When exporting .obj files from your modeling application for use in Mbox, make sure to swap the appropriate axes to ensure the model appears with the correct orientation within the Mbox 3D environment.

Unit scale

While many 3D modeling applications allow you to create objects using real-world units such as feet or meters, the .obj file format does not support specific units of measure. Therefore, a cube having sides that are 1 meter square will typically export as an .obj with sides that are 1 unit square. The same cube could also be designed with sides being 3.3 feet square in the modeling application, which would then export as an obj with sides that are 3.3 units square.

While these two objects would appear to be the same size within the original 3D modeling application, they will not be the same size when used for projection mapping purposes in Mbox. Assuming the .noscale switch has been applied to both .obj files, one of them is going to appear to be 3.3x larger than the other.

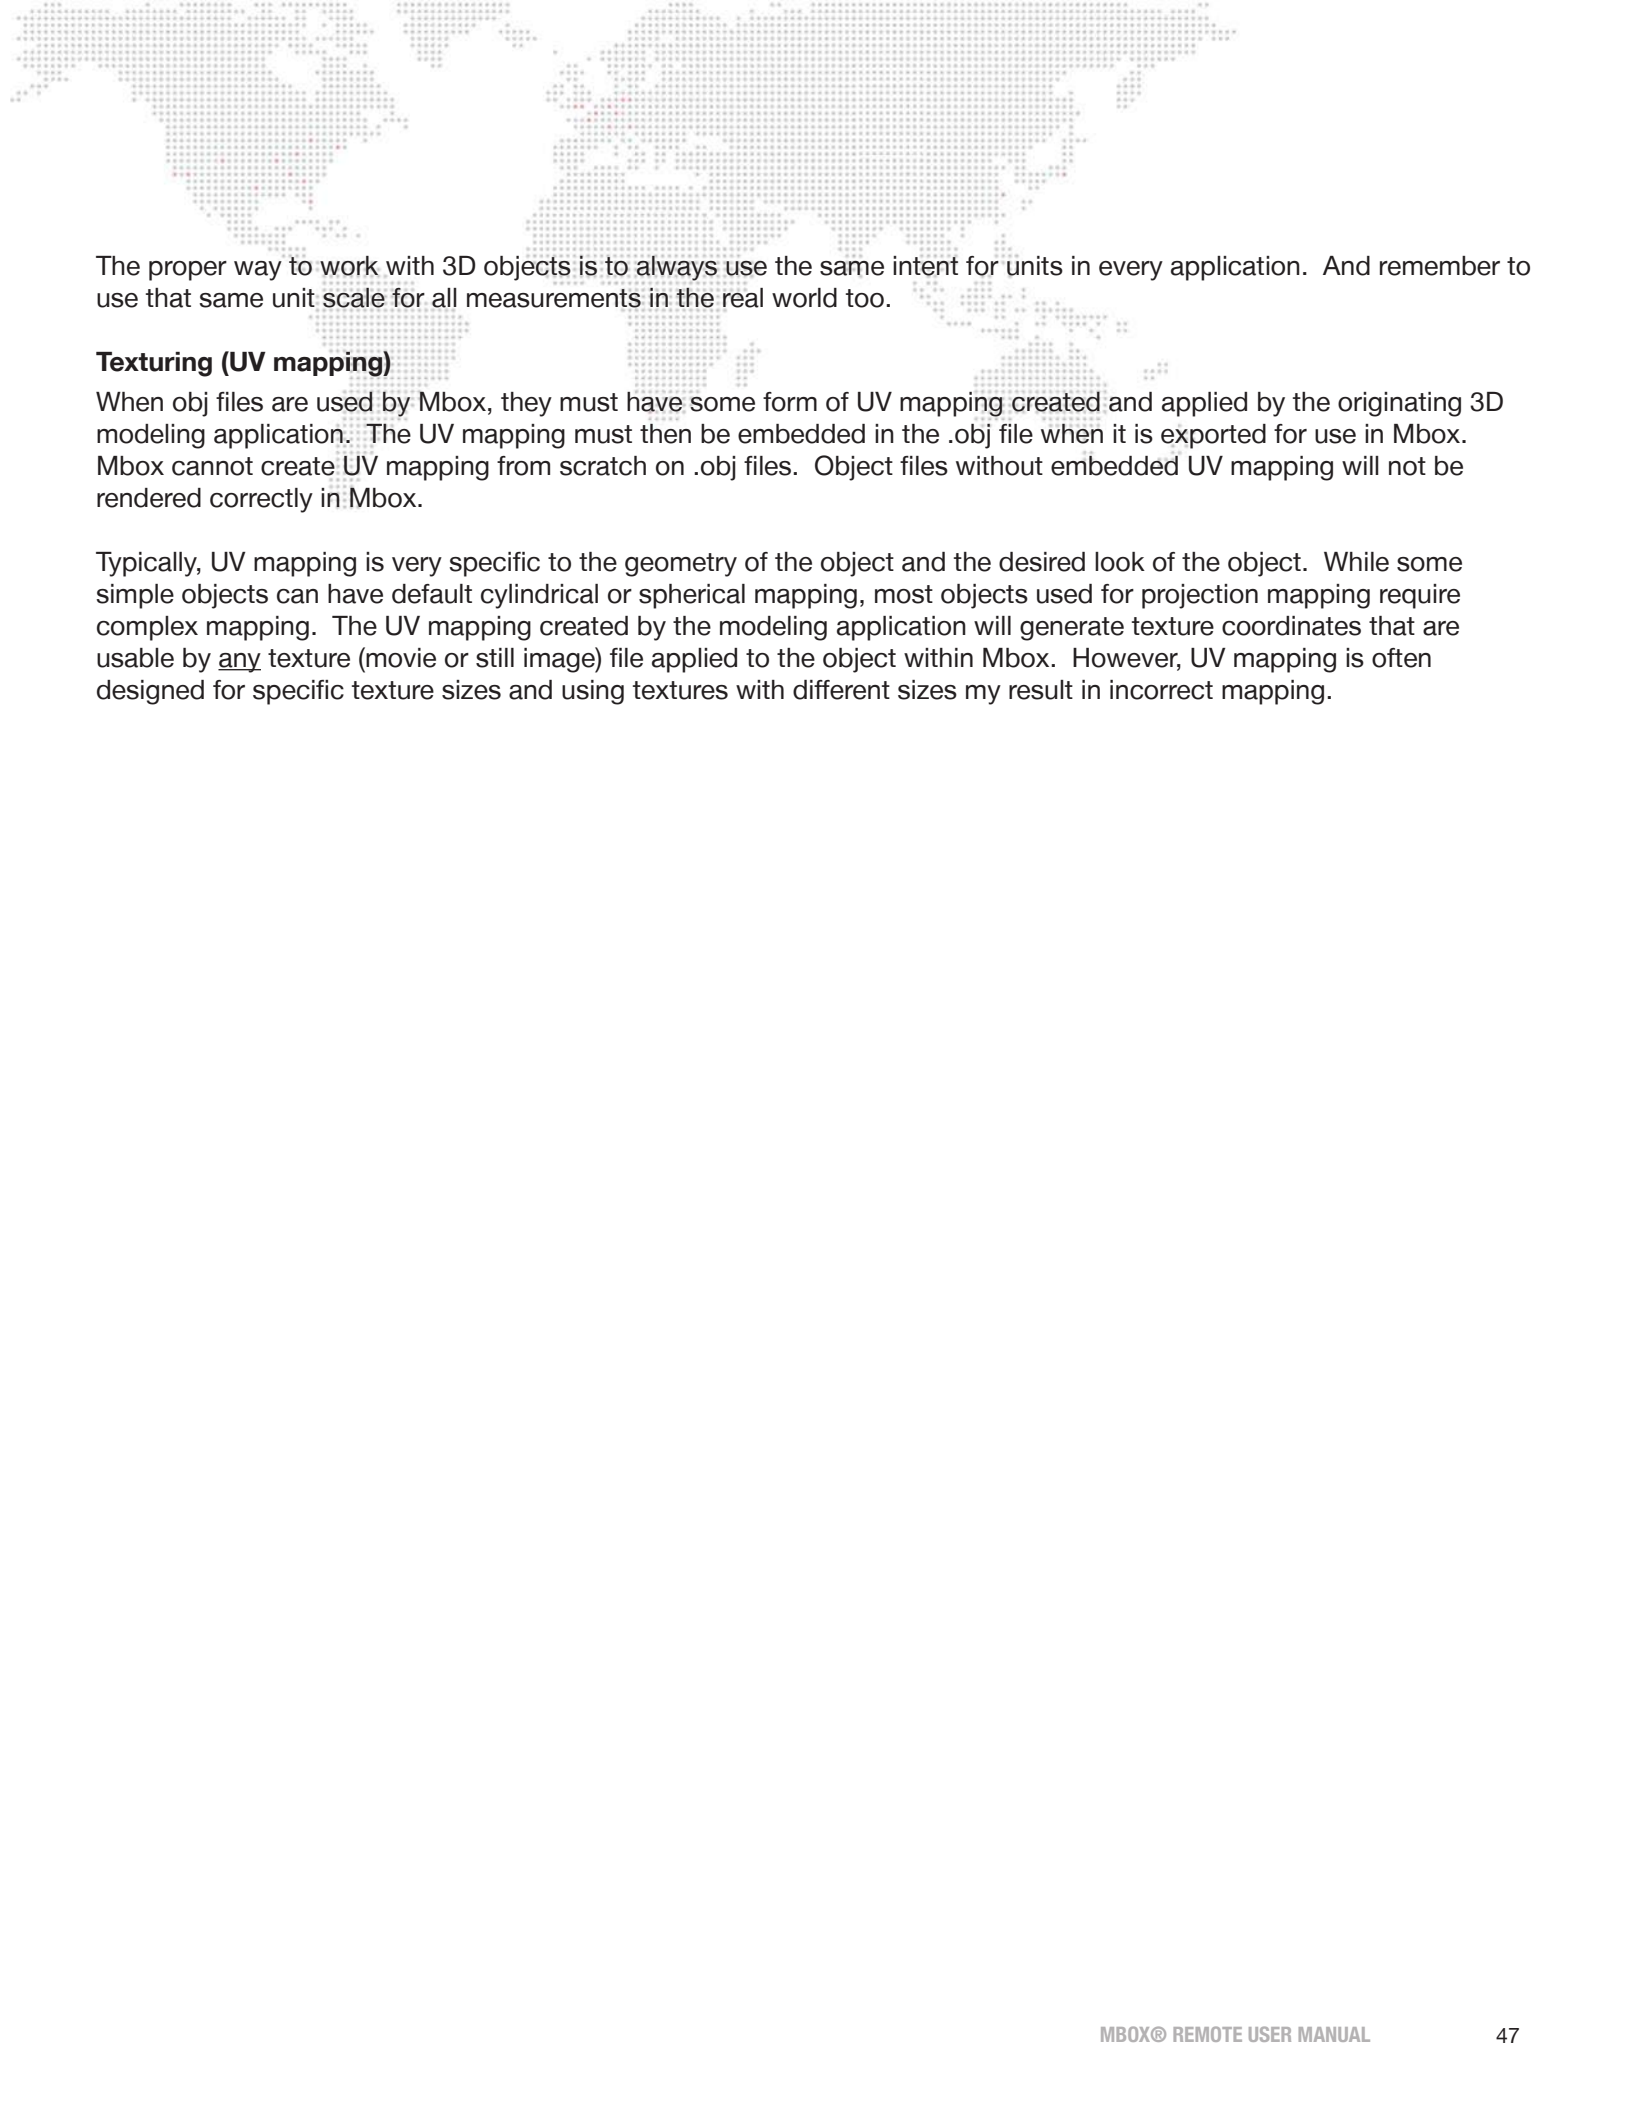


The proper way to work with 3D objects is to always use the same intent for units in every application. And remember to use that same unit scale for all measurements in the real world too.

Texturing (UV mapping)

When obj files are used by Mbox, they must have some form of UV mapping created and applied by the originating 3D modeling application. The UV mapping must then be embedded in the .obj file when it is exported for use in Mbox. Mbox cannot create UV mapping from scratch on .obj files. Object files without embedded UV mapping will not be rendered correctly in Mbox.

Typically, UV mapping is very specific to the geometry of the object and the desired look of the object. While some simple objects can have default cylindrical or spherical mapping, most objects used for projection mapping require complex mapping. The UV mapping created by the modeling application will generate texture coordinates that are usable by any texture (movie or still image) file applied to the object within Mbox. However, UV mapping is often designed for specific texture sizes and using textures with different sizes may result in incorrect mapping.

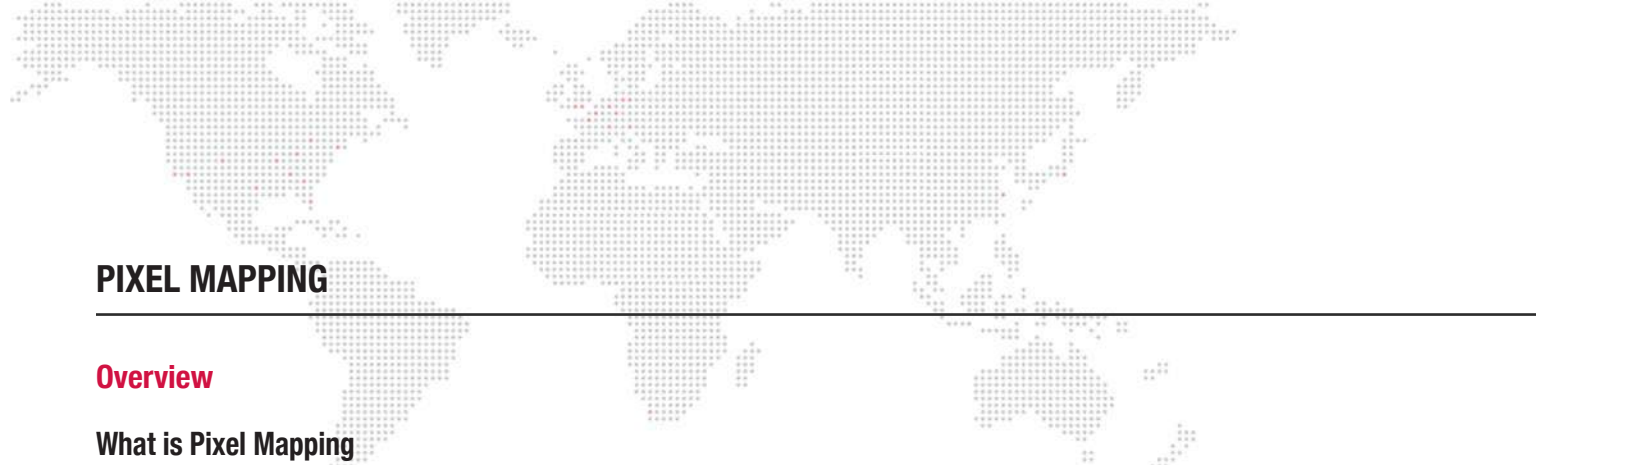

PIXEL MAPPING

Overview

What is Pixel Mapping

Pixel Mapping is a feature that allows the mapping of specific functions of sACN, Color Kinetics KiNET, or Art-Net controlled fixtures (RGB, Intensity, CMY, etc.) to each of the pixels in Mbox's composite video image. Pixel mapping data is generated from the onscreen imagery of the server and may be output from one or more ethernet interfaces of the Mbox computer. While pixel mapping, Mbox retains its normal video output(s) allowing a video signal to be sent to a display device.

At the Designer license level, Mbox v5 can output data for an unlimited number of pixel mapping output pixels, at the Studio+ level it can output data for up to 20,000 output pixels, at the Studio level 10,000, and at the Mini level 5000.

Pixel mapping data is typically used to apply color to LED or moving light fixtures by taking color info from a video source rather than programming the fixtures as discrete light sources using a lighting console.

What Can Be Mapped

Any pixel data from the Mbox final composite rendering surface (pre-dimming and pre-keystone/warp) can be mapped. Pixel mapping can sample directly from the entire Global Surface, or be limited to one or more outputs, mixes, or layers. Pixel color data from these sources can be sampled (individually or in averaged, rectangular groups) to determine an RGB value for the sample. The RGB value can then be used as-is (RGB) or converted to a different color format (CMY, Intensity, CIE 1931 xy, etc.) and output as one of four different entertainment protocols.

Depending on how the Mbox software is configured, the following items can be used as sources for pixel mapping:

- + Global Surface: the entire rendering area of the Mbox software can be mapped.
- + Outputs: one or more of the server's outputs can be mapped.
- + Mixes: one or more of the server's mixes can be mapped.
- + Layers: one or more of the server's layers can be mapped.

A simplified outline of how pixel mapping data is sampled, generated, and output would look like:

Rendering Surface > Source > Context > Sampling Rectangle > Color Information > Patch > Output

How Does Mbox Convert Onscreen Color to Pixel Map Data

Pixel mapping data is generated from the color of pixels rendered on Mbox's Global Surface, outputs, or layers. Which pixels are used depends on the pixel mapping configuration - the pixel mapping source, the context size/location, and where patched pixels are placed on the context. Each patched output pixel designates an area of the source to be sampled and if necessary, averaged, in order to generate RGB color data for that area.


After the RGB color data for each output pixel has been generated, that RGB data is converted (if necessary) to the data type specified for the pixel. Mbox supports many different pixel types including - RGB, CMY, RGBW, RGBAmber, and CIE 1931 xy - with most types having both 8-bit and 16-bit variants.

Note: Mbox v5 generates true 16-bit output values for 16-bit pixel types provided the "Deep Color" preference is enabled.

Depending on the pixel type, output data is converted in different ways:

- + **RGB** - The sampled RGB value is converted directly to three values - R,G,B - which are then output. Pixel types with RGB in alternate orders are generated in the same way, but with the R, G, and B components rearranged.
- + **RGB+1/RGB+2** - The sampled RGB value is converted directly to three values - R,G,B. Either one or two additional output channels, fixed at 0, are added to the end of the RGB values.
- + **Luma601/Luma709** - The sampled RGB value is converted to one value - Luma - by performing a Rec601 or Rec709 Luma calculation. In this calculation, each of the values R, G, and B are multiplied by a coefficient and the three resulting values are added together and then output as a single value.
- + **CMY** - The sampled RGB value is converted directly to three values - R,G,B - which are then inverted and output.
- + **CYM** - As with the CMY pixel type, but with the Yellow and Magenta values swapped.
- + **RGBW** - The sampled RGB value is converted directly to three values - R,G,B - which are output as-is and also used to generate the White output value. The RGB values are compared, and the lowest value is multiplied by the luma value for the pixel (see Luma above) with the result being output as the white value. This conversion method results in a white component that is full when the RGB value is equal to white, but which gets dimmer and dimmer proportional to the overall brightness of the pixel. This pixel type can be useful in achieving greater brightness when white, while not washing out more saturated colors, but the trade-off can be white output with a color shift.
- + **RGBW_2** - The sampled RGB value is evaluated to determine the predominant hue and luma value. The luma value is output as the white value and is also subtracted from the R, G, and B output values. This conversion method results in an output that only includes white when the RGB value is white, and reduces the white output when mixing down to saturated colors. This pixel type can be useful in achieving better color accuracy than the RGBW pixel type, but the trade-off is less overall brightness. The RGBW_2 White Tuning preference allows the actual shade of white to be tinted with some amount of red, green, or blue. Refer to [“RGBW 2 Pixels”](#) on page 107 for more information on the RGBW_2 White Tuning preference.
- + **RGBAmber/Lime** - The sampled RGB value is evaluated to determine how “amber” or “lime” it is, and in similar fashion to the RGBW_2 pixel type, the amber/lime output is adjusted while also being proportionally mixed with the R, G, and B output values. The RGBAmber/Lime White Point preferences allow the actual value used as amber/ lime to be adjusted based on a test fixture. Refer to [“RGBAmber and RGBLime Pixels”](#) on page 107 for more information on the RGBAmber/Lime White Point preferences.
- + **RGBxW/RGBAx** - The sampled RGB value is converted to RGBW or RGBA as for the RGBW or RGBA types. One additional channel, fixed at 0, is added between B and W or after A, allowing RGBAW fixtures to be controlled without conflicting Amber and White values.
- + **HSV/HSI** - The sampled RGB value is converted directly to three values - Hue,Saturation,Value/Intensity - which are then output. This pixel type can be useful for HSV/HSI-only fixtures or fixtures that provide better internal color mixing with HSV/HSI input as compared to the their color mixing when receiving RGB or RGBW input.
- + **CIE Yxy** - The sampled RGB value is linearized using a specified gamma function and is then converted to CIE 1931 XYZ values. The XYZ values can optionally be converted to an alternate reference white point. The XYZ values are then converted to the xy coordinate values that match the color on the CIE 1931 chromaticity diagram. Finally, the Y, x, and y values are converted to 8/16-bit values for output using a specified max range value. The CIE Yxy pixel type outputs both luma and chromaticity values for the pixel.
- + **CIE xy** - As for the CIE Yxy type, but only x and y values are output.
- + **CIE Y** - As for the CIE Yxy type, but only the Y value is output.
- + **Maximum** - The sampled RGB values are compared, and only the highest value is output as a single value.
- + **Parked** - Parked pixels do not use sampled RGB values. Their output is fixed, set by editing the profile/fixture data.

Note: All pixel types are generated from rendered RGB data by converting that RGB data to the correct color model, then selecting only the relevant value(s) for output.

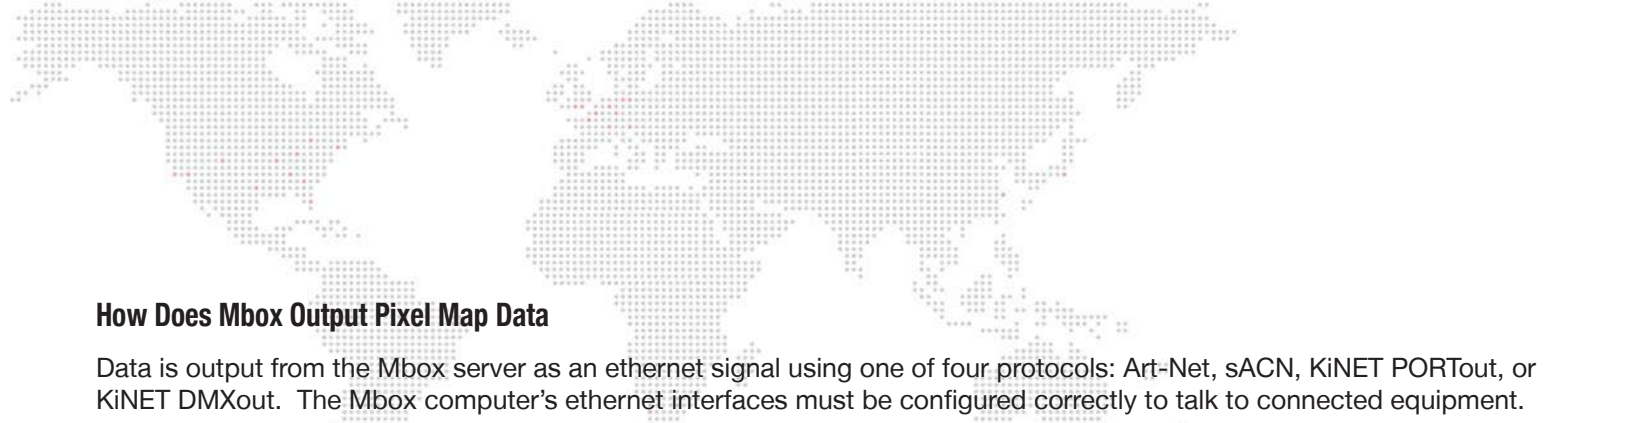

How Does Mbox Output Pixel Map Data

Data is output from the Mbox server as an ethernet signal using one of four protocols: Art-Net, sACN, KiNET PORTout, or KiNET DMXout. The Mbox computer's ethernet interfaces must be configured correctly to talk to connected equipment.

When pixel mapping, it is not necessary to use more than one ethernet interface for control input and pixel mapping output. However, in some cases - e.g. different IP schemes - it may be necessary to use additional ethernet interfaces on the computer to output pixel mapping data.

Ethernet Interface Guidelines

If it is necessary to use two different interfaces for control input and pixel mapping output, the interfaces will need to be set up correctly.

- + When receiving one protocol for control input and using a different protocol for pixel mapping output, two separate ethernet interfaces may be required, as the different protocols may require different subnets.
- + When using more than one protocol for pixel mapping output, different ethernet interfaces may be required for each protocol, as the different protocols may require different subnets.

Knowledge of IP addressing and subnetting practices is required to set up a proper pixel mapping configuration. (Refer to [“Appendix A. Mbox Networking Guidelines”](#) on page 139 for more detailed information) The computer's network settings can be changed from the Mac's System Preferences > Network preferences pane. The following guidelines assume that the computer's first ethernet interface is set to receive Art-Net to control Mbox and a second ethernet interface is being used to output pixel mapping data.

- + Art-Net is typically sent to the broadcast destination IP address for the local network being used. For Art-Net this destination address is usually 2.255.255.255. Art-Net can also be unicast (sent to specific IP addresses).
- + sACN is a multicast protocol that can be sent to any/all devices on the same subnet provided they are members of the appropriate multicast group.
- + KiNET (PORTout & DMXout) devices have user-configurable IP addresses. One of the computer's ethernet interfaces will need to be configured to use the same subnet as the KiNET devices that is being controlled. Destination IP addresses for KiNET are always unicast.
- + If the computer uses an overlapping or ambiguous IP/subnet scheme for two more ethernet interfaces (e.g. the interfaces are on the same subnet), then the pixel mapping output may not be routed from the correct ethernet interface on the computer. This can result in the pixel mapped fixtures not receiving the data. Ensure that the computer's ethernet interfaces have settings that allow Mbox to send the data from the correct interface.
 - If two interfaces are on the same subnet, then Mbox can't guarantee the pixel mapping data will leave the computer from one interface vs. the other.
 - For example: The interface with the IP address of 2.0.0.1 and a subnet mask of 255.0.0.0 is on the same subnet as the interface with an IP address of 2.23.45.134 and a subnet mask of 255.0.0.0. If the pixel mapping destination is set to 2.255.255.255 then the data may leave the computer on either one of these interfaces.
- + You must coordinate the IP/subnet of the pixel mapping output interface to be compatible with the destination IP address(es) entered on the Destination tab of the pixel mapping editor in Mbox Remote (Refer to [“Appendix A. Mbox Networking Guidelines”](#) on page 139.). If a destination uses an IP address that the computer's ethernet interfaces cannot communicate with, then that destination's data will not be output.
 - For example: If the destination is 10.45.255.255 and the computer has no ethernet interfaces with an IP address that is 10.45.x.x with a subnet mask of 255.255.0.0 then the pixel mapping data will not be output.
- + Mbox pixel mapping output is structured using Universes for Art-Net and sACN. For KiNET output, Mbox uses Devices (DMXout) or Devices and Ports (PORTout)

- + For Art-Net, the universes are numbered 0 - 32767, with each universe having a total of 512 addresses.
- + For sACN, the universes are numbered 1 - 63999, with each universe having a total of 512 addresses.
- + For KiNET DMXout, the device may have a number 1 - 65,535, with each device having a total of 512 addresses. [DMXout power supplies can have either one or two ports, but the ports are not addressable as with PORTout.]
- + For KiNET PORTout, the device may have a number 1 - 65,535, with each device having up to 16 physical ports, and each port having a total of 512 addresses. PORTout destinations use the following notation in the fixture patch editor: "device #.port #"

Protocols

As part of the pixel mapping process, RGB data is sampled, averaged, converted, and then output. The data leaves the Mbox server computer as an ethernet signal using one of four protocols: Art-Net, sACN, KiNET PORTout, or KiNET DMXout. The operational principles of each protocol within Mbox is discussed in the sections below. (Refer to ["Appendix A. Mbox Networking Guidelines"](#) on page 139 for more detailed information about these protocols.)

Note: Because some equipment cannot receive typical ethernet control protocols, other conversion devices may be required to convert the data into other protocols (for example, DMX).

Art-Net - Art-Net can be broadcast or unicast, but is typically broadcast. By default, Mbox will use ArtPOLL to set up automatic unicasting to compliant devices. The ArtPOLL functionality can be disabled if necessary (e.g., when using both ArtPOLL compliant and non-compliant devices that need to receive the same universe). Art-Net has no priority structure and up to 32767 universes available.

sACN - sACN is multicast by default in order to reduce bandwidth (though it can be broadcast or unicast). Up to 63999 universes are available, with each universe having a priority value to allow devices to receive multiple universes of the same number and use the one deemed most important.

Guidelines:

- + Mbox supports a single, global priority setting for all pixel mapping output via sACN. The value can be changed in the Source settings for each pixel mapping configuration.
- + The priority value can be between 0 and 200, with 100 being the default.

KiNET - KiNET is unicast and specific to Color Kinetics power supplies only. Due to the unicast nature of this protocol, universes aren't used. In this case, data is sent to a specific device or a specific port on a specific device.

Ethernet interfaces on both the Mbox server computer and the receiving device must be set up correctly for the desired protocol to 1) leave the Mbox, and 2) pass through the physical network (cables and switches), and 3) be received by the device on the other end.

Guidelines:

- + Both transmitter and receiver must be on the same subnet. (Refer to ["Appendix A. Mbox Networking Guidelines"](#) on page 139 for more information regarding the setup of an IP address and subnet)
- + Switchgear in between may require some or all of the following features to pass the data:
 - Allow broadcasts (broadcast storm control off).
 - Allow multicast (multicast aware).
 - Ability to en/disable IGMP snooping.
 - VLANs, if desirable, to segregate different data types.

Fixture Profile Model

The fixture reference model used with Mbox pixel mapping allows for rapid global changes to all patched fixtures of one type. This concept is similar to the reference models used by lighting consoles for fixture profiles and presets. Mbox provides built-in fixture profiles, as well as the ability to create custom fixture profiles.

File Structure

Applications in the Mbox family use Property List files for saving data, but instead of the .plist file extension, Mbox uses the .pmap file extension for pixel mapping configuration files. The .pmap files can be uncompressed or compressed. While the uncompressed files can be read by Xcode (and others such as PrefSetter, Plist Pro, etc.), the compressed files can only be read by Mbox and Mbox Remote.

Pixel mapping files must be placed in the Mbox/PixelMapping folder for Mbox to use them, or for live editing from Mbox Remote. For offline editing with Mbox Remote, the files can be stored anywhere.

Name	Date Modified	Size	Kind
000.Drake 7-7-16.pmap	January 25, 2017 at 7:19 PM	216 KB	pmap
001.Drake 1-24-17.pmap	January 24, 2017 at 5:56 PM	311 KB	pmap
002.HES Sola fixtures.pmap	May 6, 2016 at 2:08 PM	61 KB	pmap
003.Untitled.pmap	Today at 11:00 AM	13 KB	pmap
004.For Robb.pmap	May 10, 2016 at 2:16 PM	2 KB	pmap
005.Untitled.pmap	November 1, 2016 at 3:13 PM	34 KB	pmap
006.Drake fixtures.pmap	January 19, 2017 at 11:02 AM	67 KB	pmap
007.Testing n...pixmap.pmap	September 14, 2016 at 5:53 PM	10 KB	pmap
008.Drake.pmap	June 15, 2016 at 12:57 PM	282 KB	pmap
009.DeadMa...Fixtures.pmap	July 18, 2016 at 1:25 PM	6 KB	pmap
010.Drake 7-6-16.pmap	July 7, 2016 at 12:24 PM	216 KB	pmap
011.DeadMa...Fixtures.pmap	July 18, 2016 at 2:32 PM	23 KB	pmap
012.FM_PixelMap_FA.pmap	May 10, 2016 at 12:31 PM	745 KB	pmap
100.robby.pmap	November 1, 2016 at 3:26 PM	115 KB	pmap
101.robby.pmap	November 1, 2016 at 3:21 PM	115 KB	pmap
200.Untitled.pmap	April 4, 2016 at 4:40 PM	215 KB	pmap

Like all 2D and 3D content for Mbox, pixel mapping files must be given an 8-bit numerical index as prefix to the file name. The index ensures that the files can be synced using the Content Management features, and also that they can be switched on the fly without reconfiguring the server or leaving Fullscreen mode (the switch can be made using Mbox Remote, Director, or a lighting console).

Pixel mapping files can also be imported or exported in a comma separated values format (csv).

Compatibility Between Mbox License Levels

No matter the licensed level of the Mbox software the same configuration files may be used for pixel mapping. While each license level has a different maximum number of pixels (a Designer license has no limit, Studio+ is limited to 20000 pixels, Studio to 10000, and Mini to 5000), there are no other restrictions or differences between the pixel mapping functionality between the various Mbox license levels.

Pixel mapping (.pmap) files created by Mbox v5 are not compatible with versions of Mbox software prior to Mbox v4. Some Mbox v5 pixel mapping files are not 100% compatible with Mbox v4 - if the v5 file uses pixel types that are new in Mbox v5 and not found in Mbox v4.

Mbox v5 can attempt to import .plist files created by Mbox v3. If possible, old profiles and fixtures from Mbox versions prior to v3.9 will be upgraded to the new format, but all fixtures may not import correctly. The imported fixtures will appear as if every parameter is overridden, since the old .plist files had no concept of profile reference (which will be explained later in this manual). Fixtures and contexts imported from pixel mapping files created by previous versions of Mbox will all use the Global Surface as their sampling source.

Syncing Between Servers

Pixel mapping files can be synced between servers using the Content Management file synchronization features. For the file syncing to work, ensure that the pixel mapping files are placed in the Mbox/PixelMapping folder and are indexed.



Refer to [“Content Management”](#) on page 11 for more information about this feature.


Important Pixel Mapping Preferences in Mbox

The following preferences for Mbox are related specifically to pixel mapping. They can be adjusted on the Preferences tab of either the Mbox application or the Mbox Remote application.

- + **PixelFormat Enable:** enables the processing required for pixel mapping and also the actual output of pixel mapping data as Art-Net, SACN, or KiNET.
- + **PixelFormat File Index:** selects (by 8-bit by index) which pixel mapping configuration file is used by Mbox.
- + **PixelFormat Constant Update:** enables constant maximum rate output rather than the default rate. The default rate is variable based on the amount of onscreen changes in areas that are being sampled for pixel mapping output. The variable rate may be reduced if the current content is a still image or does not have constant motion.
- + **PixelFormat Delay:** sets added interpacket gap time between universe data packets from Mbox's pixel mapping output. While extra time between packets can give time for slower receivers to process the data, this value must be reduced from its default (100µs) for best output rate when attempting to output a large number of universes.
- + **PixelFormat Merge Protocol:** selects control protocol for pixel mapping merge data input
- + **PixelFormat Disable ArtPoll:** disables the default ArtPoll functionality which enables Mbox to unicast universe data to devices that reply to the ArtPoll. This default behavior can reduce network congestion, but with a mix of ArtPoll compliant and non-compliant devices, it may be necessary to allow broadcast even in the presence of ArtPoll devices.
- + **RGBAmber White Point:** sets the custom white point used for the RGBAmber pixel type. This pixel type uses a calculation of the amber component of onscreen color to derive RGB and Amber output values. The white point represents the individual RGB component amounts added to full Amber to mix to visible white on the RGBAmber fixtures being used. This value is entered as R,G,B with values from 0-255 and the value for Amber is automatically set to 255.
- + **RGBLime White Point:** as above, but for RGBLime pixel type, substituting Lime for Amber.
- + **RGBW_2 White Tuning:** as above but for RGBW_2 pixel type. The white tuning represents the individual RGB component amounts added to full white to mix to visible white on the RGBW_2 fixtures being used.

Enabling Mbox Pixel Mapping

To enable the processing of pixel mapping configurations and the output of pixel mapping data, the PixMap Enable checkbox must be checked in the Preferences tab of the main Mbox window.

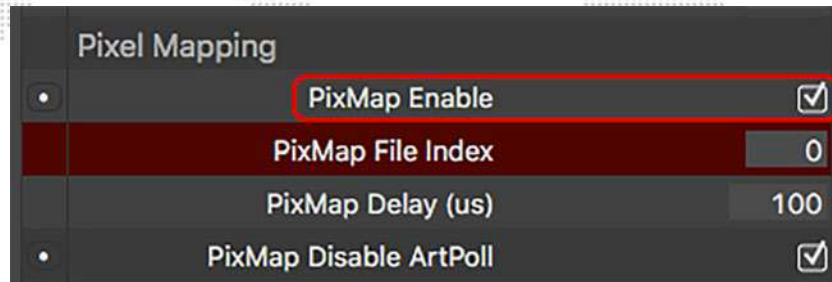

Note: When this checkbox is not enabled, it is still possible to create and edit pixel mapping configurations in both offline and live modes.

When Pixel Mapping is enabled on the Preferences tab, the Global Master Control parameter can be used to stop or start overall pixel mapping output, and to enable or disable the pixel mapping mask feature.

To enable/disable these features, set the Global Master Control channel to the value noted below, then send it directly to a value of 0, not hitting any values in between.

Global Master Control parameter settings are as follows:

- + 244 = start pixel mapping output
- + 245 = stop pixel mapping output
- + 246 = disable masked fixtures
- + 247 = enable masked fixtures

Stopping output using the Global Master Control parameter is not the same as unchecking the PixMap Enable checkbox, and is only intended to be a temporary state where the output can be turned off and back on again from the control console or Mbox Director. In this case, “stopping” the output means that no data will be output at all. If the Mbox application is quit while pixel mapping has been stopped using this method, pixel mapping will restart when the Mbox application is restarted, and pixel mapping data will be output.


The pixel mapping mask feature can be used to turn off a single subset of pixel mapping fixtures - those with the mask function enabled. “Turn off” in this case means that the fixtures will continue to output data, but that their output data will be forced to a level of 0.

Note: For more information about the Global Master Control parameter, refer to the Mbox software user manual.

Getting Started

Pixel Map Tab

Pixel maps are created using the controls available on Remote's Pixel Map tab. The example below illustrates a basic pixel map configuration:

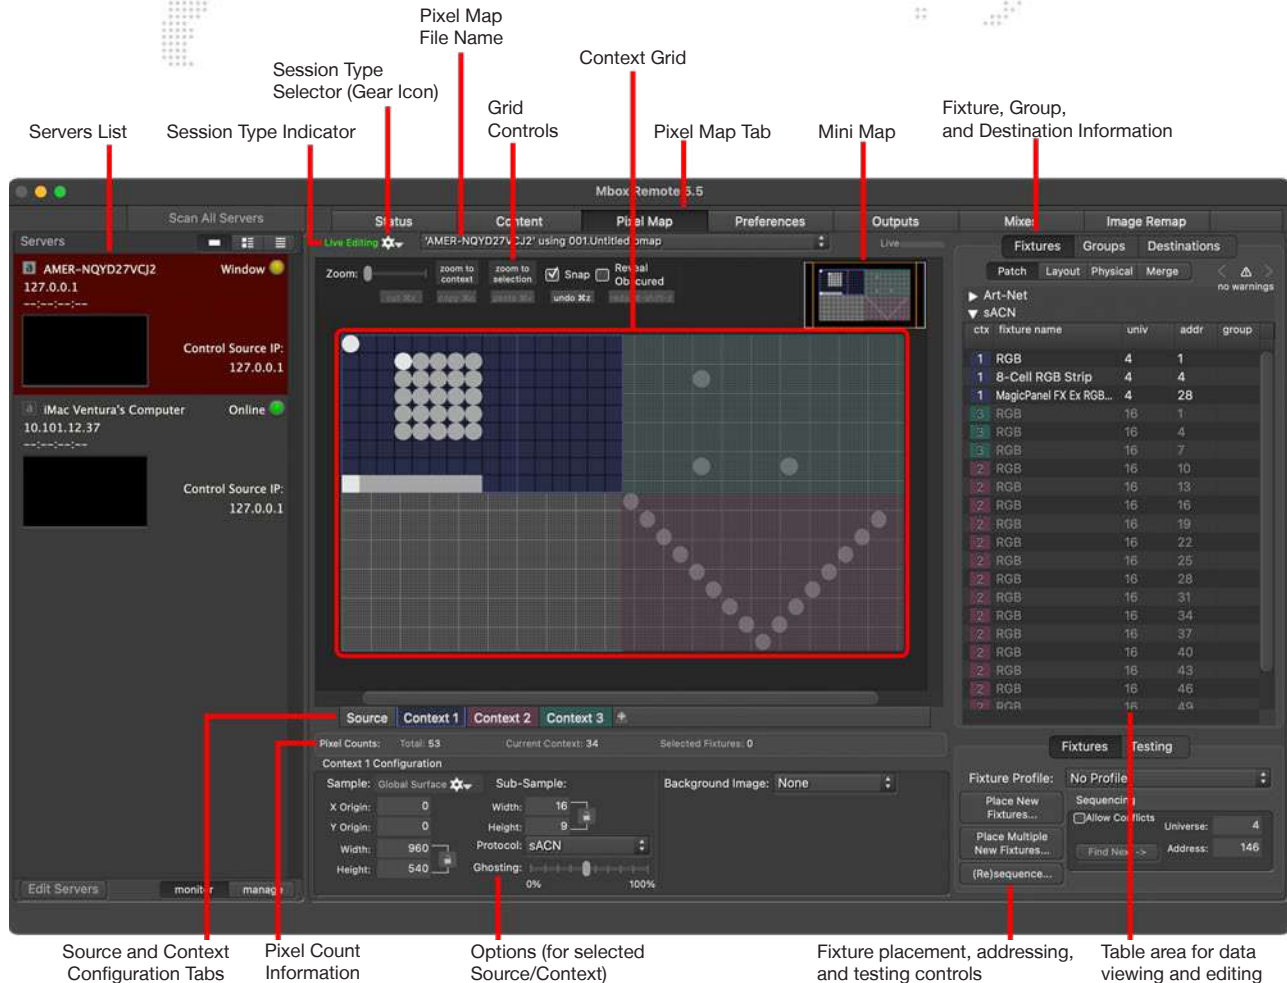


The grid area is the pixel mapping context. This is where fixtures can be arranged in order to assign their pixels to various areas of the screen image. The grid lines are colored white every tenth division. The fixture table to the right of the grid shows fixture patch and destination information. Fixtures can be selected on either the grid or in the table (they will become highlighted in both places). Other controls allow auto-addressing and testing fixtures.

Pixel Map Menu


The Mbox Remote application's Pixel Map menu can be used in combination with the Pixel Map interface window. Many of the options provide an alternate method for the same functionality available in the window (via keyboard shortcuts, buttons, or pop-up menus). Some, such as New Pix-Map File, Open, Save, and Save As are intended only for use with offline editing of files. Refer to ["Offline Editing"](#) on page 57.

The Import/Export option is covered in detail later in this document. Refer to ["Import/Export"](#) on page 128.

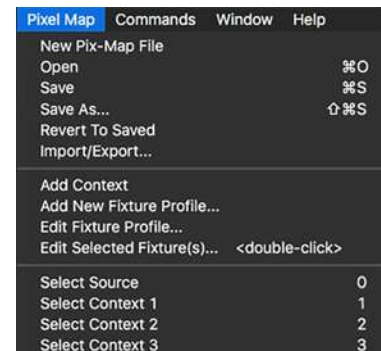


Session Types

There are three different session types: Offline, Live Editing, and Test Only. The session type defaults to Offline. The session type can be changed by clicking on the gear icon next to the Session Type Indicator. The indicator text will display the current session type (Offline, Live Editing, or Test Only), as applicable.

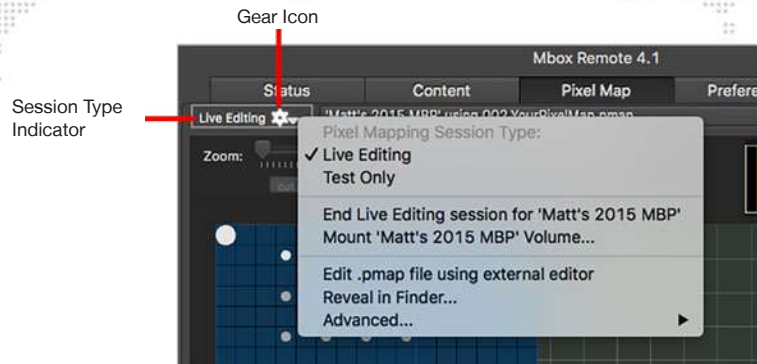


- + **Offline** - allows pixel mapping configuration files to be created and edited without running Mbox software or being connected to an Mbox server. Refer to [“Offline Editing”](#) on page 57 for more information.
- + **Live Editing** - allows pixel mapping configuration files to be created and edited while the Mbox Remote application is connected to an Mbox server. Refer to [“Live Editing”](#) on page 58 for more information.
- + **Test Only** - allows pixel mapping fixtures to be tested while locking out changes to the configuration. Refer to [“Testing”](#) on page 126 for more information.
- + **Begin Live/Test session for Mbox** - click to begin the session. (This will either be “Live Editing” or “Test Only” depending on which type of session is currently selected.)
- + **Mount Mbox Volume** - remote volumes (hard drives on remote Mbox servers) can be mounted on the computer running Mbox Remote so that files on that computer may be edited and saved in an offline session.
- + **Edit .pmap file using external editor** - allows the current pixel mapping file to be edited in an external application.
- + **Reveal in Finder** - shows the current pixel mapping (.pmap) file in the Mac Finder.
- + **Advanced** - advanced options for selecting editing applications:

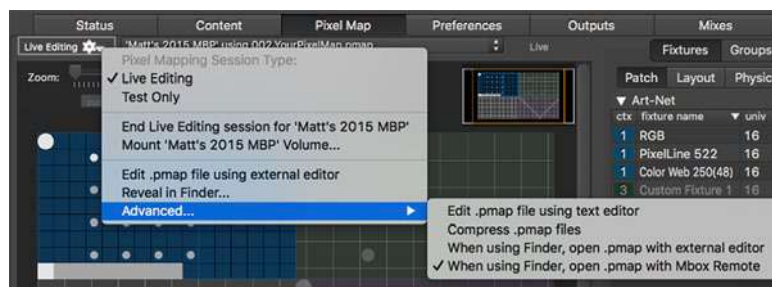

- **Edit .pmap file using text editor** - opens the current pixel mapping file using the default text editor application on the computer (e.g. TextEdit).
- **Compress .pmap files** - allows the use of compressed .pmap files instead of standard XML. Enabling compression helps reduce the transfer time of very large pixel mapping configuration files from Remote to Mbox during a live editing session. Compressed files can only be opened by Mbox or Remote, and not by a text editing application or a plist editing application.
- **When using Finder, open .pmap with external editor/Mbox Remote** - selects which application opens the .pmap file when it's double-clicked in the Mac Finder. Selecting both is allowed.

Offline Editing

Offline editing allows pixel mapping configuration files to be created and edited without running Mbox software. In this case, a new or existing pixel mapping configuration file (.pmap) can be opened on the computer that is running Mbox Remote. This mode is useful for creating a configuration in advance without the need for an Mbox server (or license).





Guidelines:

- + The .pmap file to be opened can be local or on any network-connected drive.
- + Changes to the file may be saved locally or to any network-connected drive. Saving must be done manually using the Pixel Map menu, since it is not automatic.
- + When making changes with offline editing, the changes will not be immediately apparent on an Mbox server, even if it is networked to the Mbox Remote computer and the configuration file is stored on the Mbox in the proper location.
- + Content can be manually rescanned on an Mbox server by pressing [⌘R]. This will reload the current pixel mapping configuration from disk. If changes have been made using the offline editing and these changes have been saved, then these changes will be applied.

To create a new pixel mapping file on a local computer or network drive:

- Step 1. On the Pixel Map menu, select New Pix-Map File.
- Step 2. In the Save As dialog, enter a file name and choose a location to save.
- Step 3. Click Save.

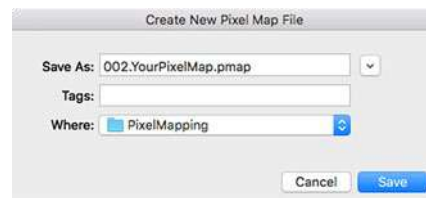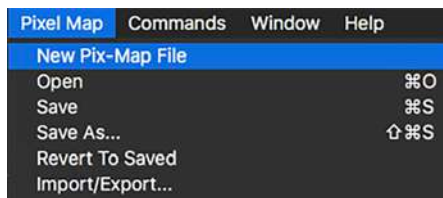

To open a pixel mapping file:

- Step 1. On the Pixel Map menu, select Open.
- Step 2. Using the Open dialog, locate and open the desired file.

The Save and Save As options can also be used with the local or network file.

CAUTION! Before using the pixel mapping configuration file with an Mbox server, or attempting to edit it in a live session, the file must be copied to the correct folder on the Mbox server. Refer to [“Copy To Mbox”](#) on page 61.

Live Editing

The Live Editing session allows pixel mapping configuration files to be created and edited while the Mbox Remote application is connected to an Mbox server. In this case, changes made to the file have an immediate effect on the output of the Mbox's pixel mapping engine. This mode is useful so that the configuration can be tested and adjusted without having to go back and forth between offline editing and live playback to view the results.

Live Editing 

To operate in Live Editing mode, a server must be selected from the server list at the left side of the window and the Mbox application itself must be running along with Mbox Daemon. The selected server is indicated with a red highlight.



IMPORTANT! For live editing to work on a remote server, File Sharing must be enabled on the remote server. Remote attempts to connect using an SMB connection. SMB sharing is the only option for file sharing with macOS 11 and above, therefore SMB is no longer available.

Guidelines:

- + For remote Mbox systems that have the actual Mbox content folder located on a secondary drive and use a link or alias on the boot drive, both the boot drive and the secondary drive must be mounted to edit in a live session.
- + Editing in a Live Editing session from more than one computer at the same time is not recommended. Likewise, editing the a file in offline mode while the same file is being edited in a live session is not recommended and will lead to the loss of some data.
- + During a Live Editing session, the current, active .pmap file is loaded into the editor.
- + Changes may be made to the file, or fixtures may be tested, with the changes having immediate effect on the output of the Mbox pixel mapping engine.
- + The edited file does not need to be saved on the connected computer, but may be saved locally for backup.



CAUTION! No manual rescan on the Mbox server is needed, but live edits will cause a slight pause in playback. Therefore, it is not recommended to make live updates during a show.

Whenever a Live Editing session is started with an Mbox server that is not local, Mbox Remote must connect to the remote computer. Make sure that both computers are on the same physical network and same subnet, and that File Sharing is turned on. Remote attempts to connect using an SMB connection. During the connection process, OS alerts may appear if there is an issue.


If a connection is possible, the username and password for the Mbox computer must be entered. Finally, if the username and password are accepted, the correct drive(s) need to be mounted: **Always make sure to mount both the boot drive and the drive that the actual Mbox content folder is on if they are not the same drive!**

To begin a Live Editing Session and create a new file:


- Step 1. In the Servers list, select the required server.
- Step 2. Click on the gear icon and select Begin Live Editing session for...
- Step 3. On the Begin Session window, click the Create New button.

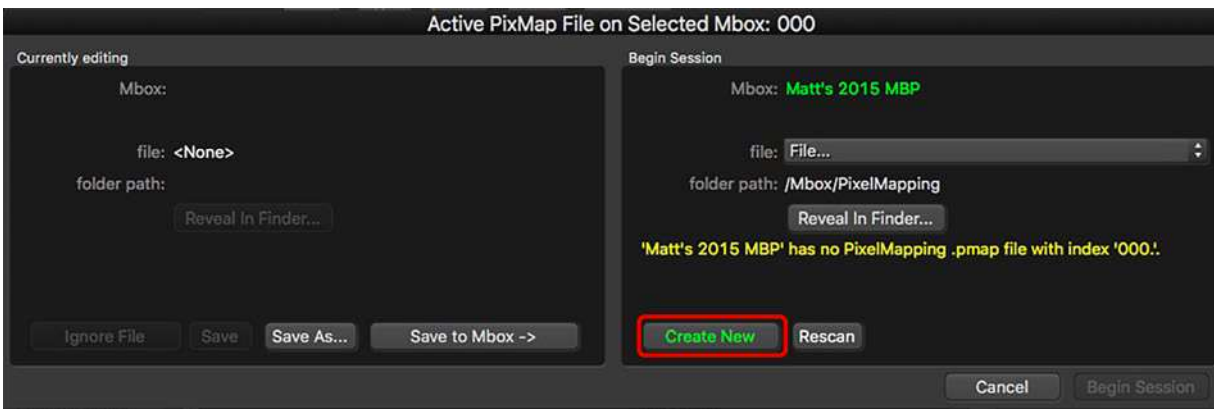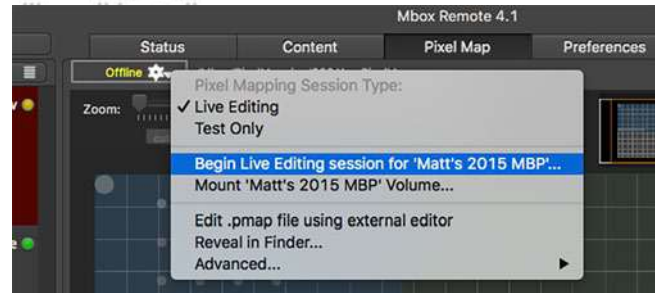

- Step 4. In the Save dialog, enter a file name and choose a location to save to.

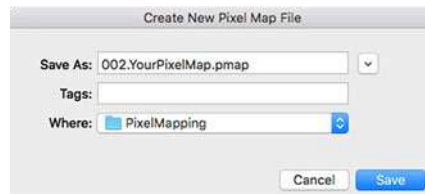

- Step 5. Click Save.
- Step 6. On the Begin Session window, click Begin Session. (Once the file is created, the button will no longer be grayed out)

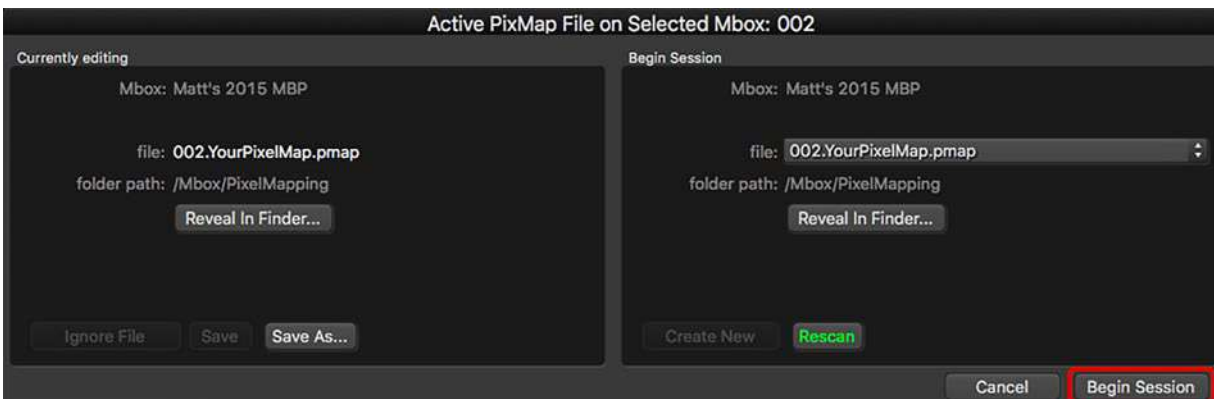


To begin a live editing session and choose a different file:


In this step-by-step example, a pixel mapping file different than the one Mbox is currently using has been edited in Offline mode. Changes to the file have not been saved.

Step 1. In the Servers list, select the desired server.


Step 2. Click on the gear icon and select Begin Live Editing session for...

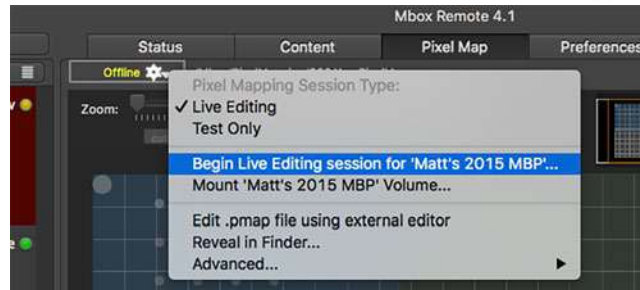


Step 3. On the Begin Session window, save or discard changes to current file by clicking either Discard Changes, Save, or Save As on the left side of the window. If saving, follow Save dialogs to save file.

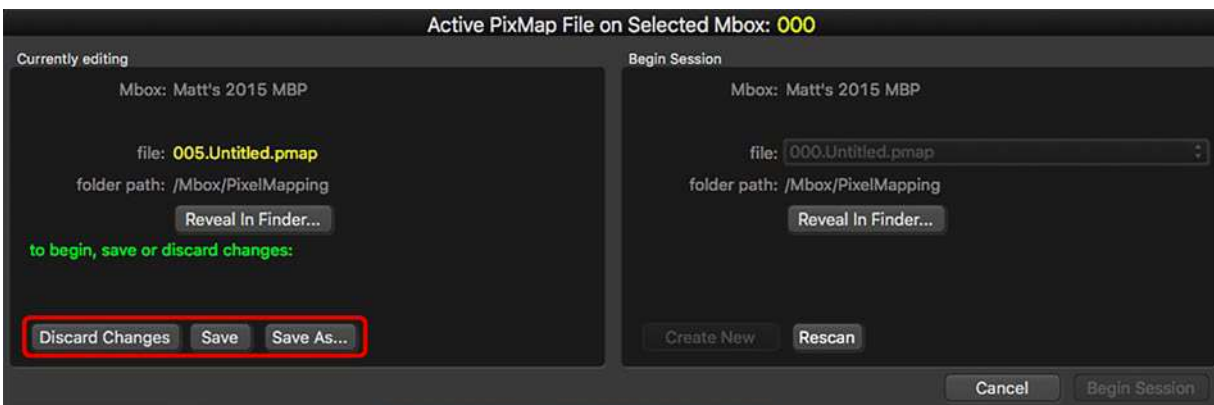

Step 4. In the "Begin Session" section of window, choose a new pixel mapping file using the File pop-up menu.

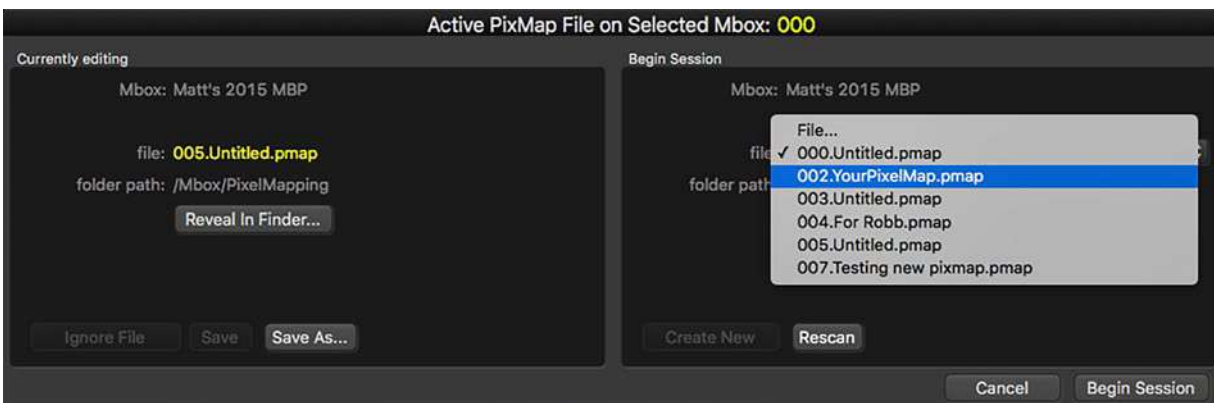


Step 5. Once selected, the file will be displayed in the window. Click Begin Session to begin live editing.

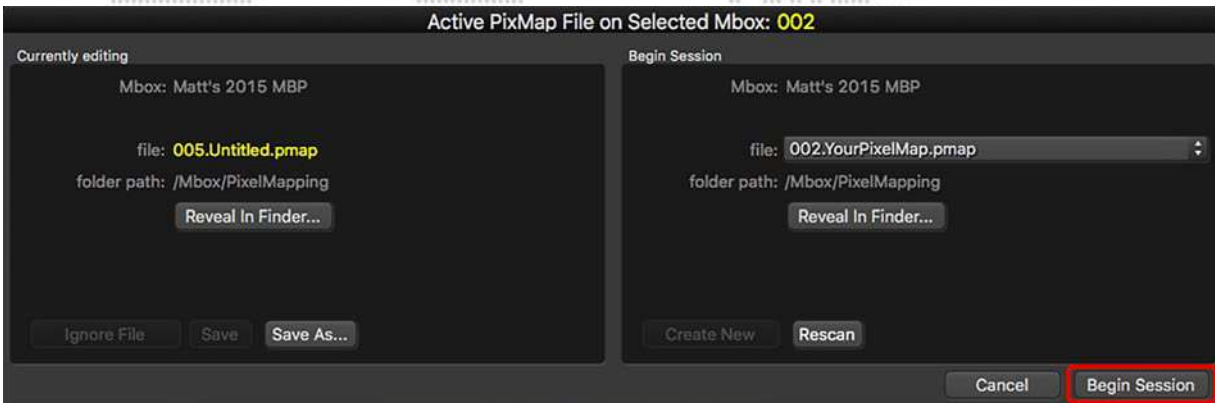


Copy To Mbox

If the current pixel mapping configuration file does not reside on the Mbox server when starting a Live Editing session, the file can be copied to the Mbox server using the Begin Session / Currently Editing window.

- Step 1. In the Servers list, select server that the file will be copied to.
- Step 2. Click on the gear icon and select Begin Live Editing session for...

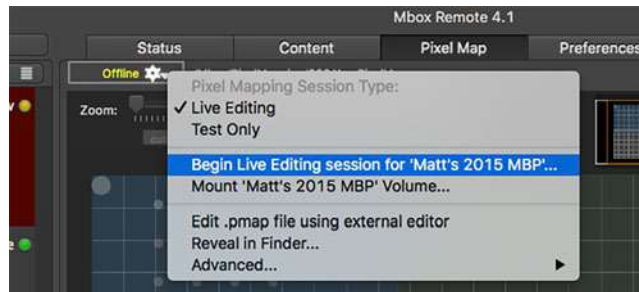

- Step 3. On the Begin Session window, click the Copy to Mbox button. This button will only be available if the current file has already been saved locally - i.e., on the computer running Remote - before attempting to enter the live edit mode. If the file has not been saved, the button will read: Save to Mbox instead.

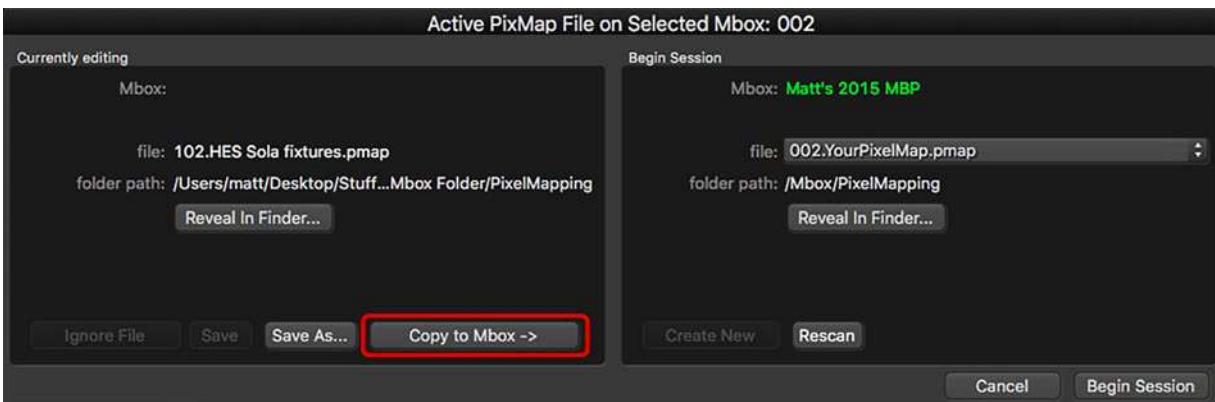

- Step 4. In the Save dialog, click Save. The correct folder on the Mbox is automatically chosen.

Source

A pixel mapping context samples pixel data from a source and uses it to create pixel mapping output. The source is the rendering surface within the Mbox software. The source can be the Global Surface (the entire rendering surface of the Mbox server), an output or mix, or a single layer.


Note: Pixel mapping sources are not affected by keystone and warp settings.

Source Dimensions

The size of a source is different depending on the rendering surface it uses:

- + Global Surface - the Global Surface size is set on the Outputs tab of the Mbox application.
- + Outputs and Mixes - the size for outputs and mixes are set on the Outputs and Mixes tabs of the Mbox application.
- + Layers - layers do not have a fixed size; the size of each layer changes dynamically based on the size of the 2D content being used on the layer..

With the exception of layer sources, the size of a source is not something that often changes once the initial configuration of the server's outputs has been completed. Typically, a pixel mapping source will use the entire rendering surface and the dimensions shown in the pixel mapping interface are for reference only. However, it may be desirable to use only a portion of a source rather than its entirety. Therefore, controls are provided to allow this.

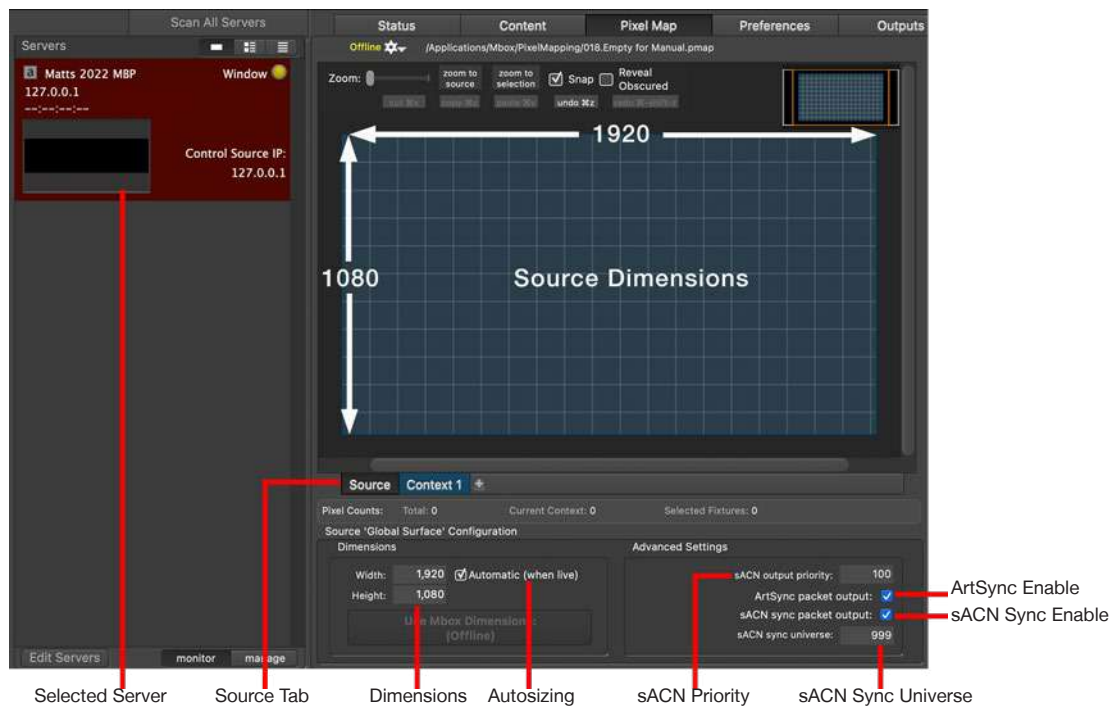


When a context is created and assigned to use a source, a tab for that source will appear. When a source tab is selected, the source's size (for the purposes of pixel mapping only) can be manually or automatically configured using the Source Dimensions controls in the lower portion of the Pixel Map tab.

- + Dimensions - used to manually set the width and height of the source in screen pixels.
- + Autosize checkbox - allows the pixel mapping source size to change automatically if the source changes size. This setting only works if a live editing session is being used.

CAUTION! Incorrectly sized source dimensions may lead to unexpected results when pixel mapping - sampling happening in an unexpected place on the source. But it is important to note that the size of a source in the pixel mapping interface does not affect the size of the rendering surface in Mbox, rather the source size is used to define where a context samples pixels from. Therefore, while incorrect source sizes will affect the pixel mapping output, they won't affect how and where Mbox plays content on its video outputs.

Ideally a pixel mapping configuration will be created in a live editing session. In this case, as contexts are added and have sources assigned to them, the correct source sizes will be entered as well. While in a live editing session, if the autosize checkbox for a source is checked and the rendering surface changes size, this will automatically be reflected in the user interface. But if the autosize checkbox is not checked, any changes to the size of the source's rendering surface will cause the source tab to turn red and an indication of the size difference to appear:

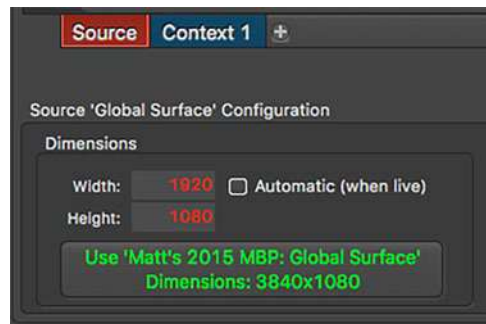

 **Tip** To automatically resize the source to match the new size of its rendering surface, press the button at the bottom of the Dimensions area.

On the other hand, if a pixel mapping configuration is created in an offline session, then the sizes of the sources can't be automatically entered. Because of this, only the Global Surface can be selected as a source while in an offline session. In an offline session, the size of the Global Surface defaults to 1920x1080, but this can manually be changed if the size of the Global Surface is known. If outputs, mixes, or layers are to be used as sources, then those must be assigned while in a live edit session, at which point their current sizes will be correctly entered automatically.

Because the sizes of rendering surfaces generally don't change and because the most common practice with pixel mapping is to use the entire rendering surface as a source, it's usually fine to get the source sizes correct when first creating the pixel mapping configuration and then just leave them alone.

If it is anticipated that the size of rendering surfaces may change and the intention is always to use the entire rendering surface as the source, then checking the autosize checkbox will ensure that a context which uses that source can also resize to fit the source. Automatic resizing for contexts is a separate property, which is discussed in ["Automatically Resizing Contexts"](#) on page 68.

Layers should be treated as a special case when dealing with source sizes as they will change size depending on the content used on the layer. Therefore it's almost always best to use the automatic sizing properties of both a layer source and any context that uses that source.

 When creating a pixel map configuration while connected to an Mbox server, it is very useful to enable Live Editing in order to immediately visualize the results of pixel mapping changes (in the Mbox window). This scenario will also allow Mbox Remote to provide feedback (flags and warnings) whenever errors are made in the configuration. Refer to ["Live Editing"](#) on page 58 for more information about how these elements work together.



Adding and Configuring Sources

Sources cannot be added manually, but will be added automatically when a context is added as is then assigned a source. Once the source is assigned, a tab for the source will appear. If all contexts that use a source are deleted, or if they have other sources assigned, the tab for the unused source will be removed automatically. (Refer to [“Contexts”](#) on page 65 for more information on adding and editing the properties of contexts)

Click on the source tab to select it, and then either manually edit the source dimensions, or check the box to enable the autosizing. Keep in mind that the autosizing will not update the dimensions unless a live edit session is in progress.

Manually determining source dimensions:

The current dimensions of each source can be determined manually by looking at the Outputs or Mixes tab in the Mbox application or by checking the size of the content being used on a layer.

Advanced Settings

Advanced settings are shown in the source configuration area. These settings are global and not limited to one source or to one context.

sACN Output Priority

This setting assigns a priority value for all pixel mapping output via sACN and can be a value between 0 and 200, with 100 being the default. (Refer to [“Protocols”](#) on page 51 for more information.)

ArtSync Packet Output

ArtSync packet output is used to send a single, synchronized message to all Art-Net receivers telling them to update their own outputs in a single action, rather than updating their outputs in an unsynchronized fashion as each universe is received. The ArtSync packet is sent once per cycle of all universe output from Mbox. Compatible Art-Net receivers automatically use ArtSync when it is present.

ArtSync can be useful for large systems of LED product, perhaps displaying low-resolution “video” where all outputs need to refresh at the same moment to avoid tearing. ArtSync is most useful when a large number of universes is in use and time between receiving one universe and some other universe may be long enough to lead to a lack of sync.

sACN Sync Packet Output and Sync Universe

sACN sync is a two-part process requiring that any output universes that require synchronization include a universe reference value (1 - 63999) in their data and for an sACN sender to output a sync packet using that universe reference value. In this way it is possible to have more than one independent scheme of sACN sync - sender and receivers - using different sync universe numbers on the same network.

The default sync universe value is 0. A value of 0 means that receivers of the universe will never wait for a sync packet and will immediately update their own output. A sync universe value 1 - 63999 means that receivers of the universe will hold the last-received universe data and only update their own output when a sync packet with the corresponding universe number is received. This allows all receivers to update every output at exactly the same moment in time, rather than as data is received.


Mbox has separate settings for the sync universe and the sync enable to allow an instance of Mbox to output universes that require sync but which will receive that sync from some other source, i.e. not that specific instance of Mbox.

Note: Mbox’s pixel mapping output sACN universes always have the “Force Synchronization” flag enabled, meaning that if the sACN sync universe stops being output, receivers will continue to update - albeit in an unsynced fashion.

Contexts

A “context” is a rectangular area taken from a source and onto which fixtures are placed. Each context can be some or all of the source area, and has its size specified by width and height settings and its position upon the source specified by X and Y offsets from the top-left corner of the source. The context is laid directly over the source image, and is then divided into rectangular subdivisions. The context is subdivided by assigning width and height values for sub-sampling. These subdivisions represent sub-sampled areas of the screen image, with each one being a possible location for one pixel on a patched fixture.

In the concept illustration below, a context with 50 x 50 subdivisions has placed on an area of the source with a size of 800px x 600px. Each rectangular subdivision of the context will be $(800\text{px}/50) \times (600\text{px}/50)$, or 16px x 12px. Mbox will average (sample) the color/intensity values for each 16px x 12px area of the screen image. Each sample can be used to create one “pixel” in the map. This pixel is then used to generate pixel mapping output levels.

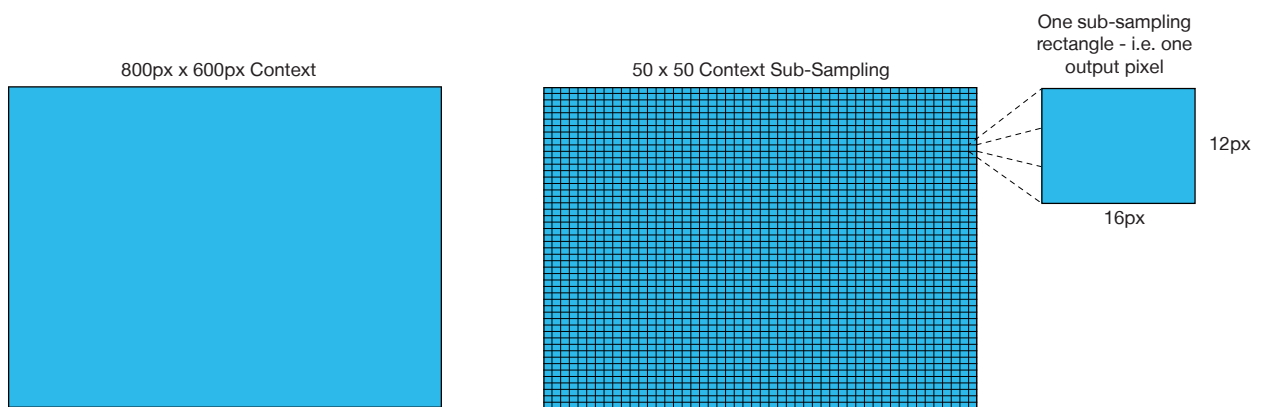


The size and sub-sampling of the pixel mapping context plays a large role in how the pixels in the source are converted into output data. A context that is the same size as the source, can be configured to have one sub-rectangle (sub-sampling width and height of 1 x 1) or a million sub-rectangles (width and height of 1000 x 1000). In the first case, the entire source would be reduced to one sub-sampling rectangle in the context and therefore only one pixel in the map; the results would not be very useful. The second case results in a very high resolution map, but it would require a great number of fixtures to make full use of the context. In general, try to avoid extremely large context sizes, as doing so requires extra processing. It is possible to keep context sizes smaller and add more contexts to cover the necessary onscreen pixels for the desired pixel mapping output.

If a very large amount of pixel-for-pixel mapping of your video to LED fixtures is required, it may be better to use an existing video pixel mapping product rather than the Mbox pixel mapping feature. Always strive to create a pixel mapping context that is as small as possible while still allowing content to be mapped to fixtures in the manner desired. Initially some trial and error may be required. If unsure where to begin, start with the context at its default size of 16 x 9 and then experiment once some fixtures have been patched.

A pixel mapping configuration in Mbox may have more than one context, thereby providing for organization, and allowing multiple sampling factors and multiple output protocols. Trying to determine how large to make a context may be difficult before placing fixtures, however it is possible to modify the size of a context at any time.

Contexts are configured using the Context controls in the lower portion of the Pixel Map tab.

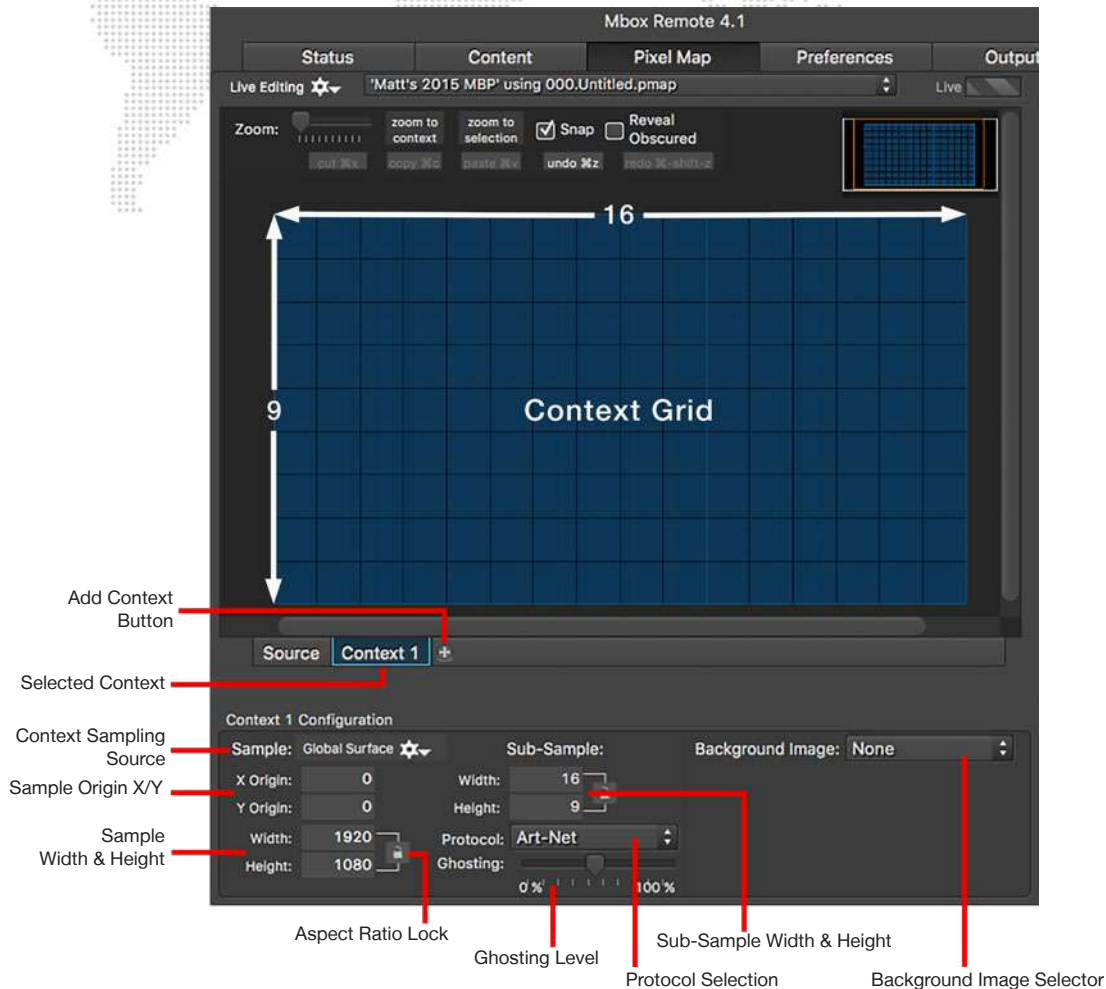


- + **Context Sampling Source** - selects which rendering surface the context uses as its source.
- + **Sample X/Y Origin** - a pixel location on the source which marks the top-left corner of the context's rectangular area.
- + **Sample Width/Height** - a measurement in screen pixels which specifies the size of the context. This may be some or all of the source.
- + **Sub-Sample Width/Height** - a measurement in 'sub-sampling rectangles' which specifies the sub-sampling factor. The sub-sampling factor determines which pixels are averaged to create one set of RGB values for output. (Refer to overview on previous page)
- + **Protocol** - the output protocol selection for the context (Art-Net, sACN, KiNET PORTout, or KiNET DMXout).
- + **Ghosting** - a slider to control the transparency level of the context from 0% to 100%.
- + **Background Image** - allows a background to be added to the context for better visualization of the pixel mapping configuration. The background can either be a still image or a live stream image. (For instructions on adding a background, refer to ["Background Image"](#) on page 98.)

Note: The boundaries of two or more contexts can overlap each other, but they don't have to overlap or even be directly adjacent to each other.


Note: There is no theoretical limit to the number of contexts allowed, but it is best to have no more than 20.

To add contexts:


- Step 5. Click Context 1 tab.
- Step 6. Configure options as required.

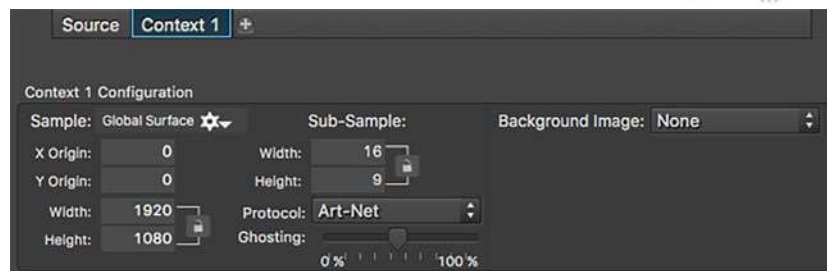

Note: Some text fields can perform math operations such as add, subtract, multiply, and divide. For example, if setting the Sample Width for a context to half of 1920, enter 1920/2 in the field then press [return] on the keyboard.



- Step 7. To add additional contexts, click [+] button and configure options. Each context's configuration is unique to that particular context. Note that the default Sample Origin for a context is 0,0 so it may overlap another context that uses the same source until its X and/or Y origins are changed.

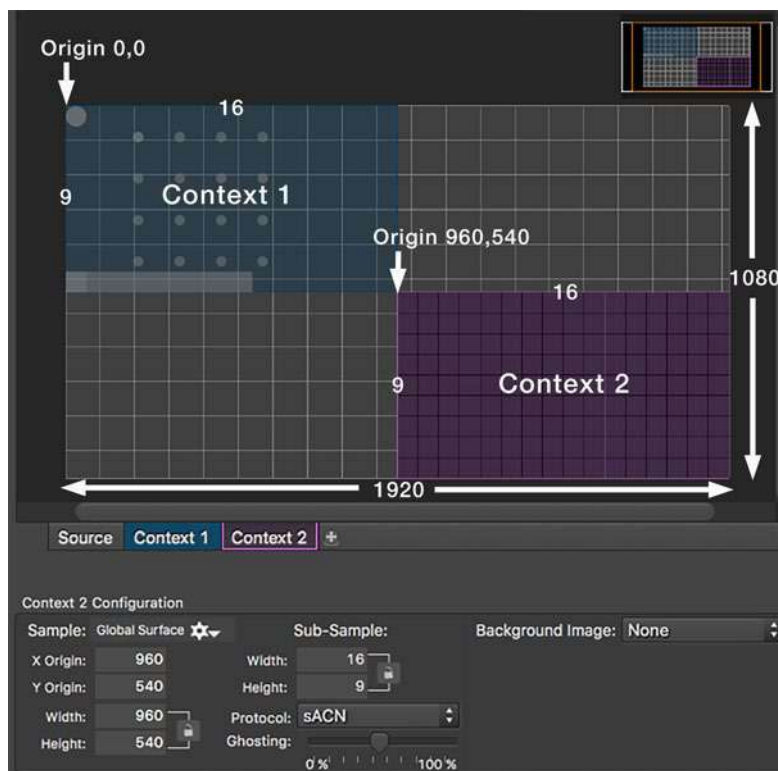


Note: To delete a context, right click on the context grid and select the context to delete.

Context Grid Controls

Several special tools are available in the Context Grid area:

- + Zoom slider - adjusts the zoom level of the current view.
- + Zoom To Context button - zooms to extents of current view.
- + Zoom To Selection button - zooms and scrolls so that currently selected fixture(s) are visible.
- + Snap checkbox - snaps fixture placement to the sample rectangles (when checked).
- + Reveal Obscured checkbox - increases the transparency of layered contexts to allow those below to show through (when checked).
- + Cut/Copy/Paste/Undo/Redo buttons - provide standard copy/paste type functionality for fixtures in the Context Grid area and show equivalent keyboard shortcuts.
- + Mini Map - provides quick navigation of the Context Grid area. The orange rectangle can be dragged around to quickly move the view, and while hovering over the Mini Map, the scroll wheel/buttons on the mouse can be used to zoom in/out.

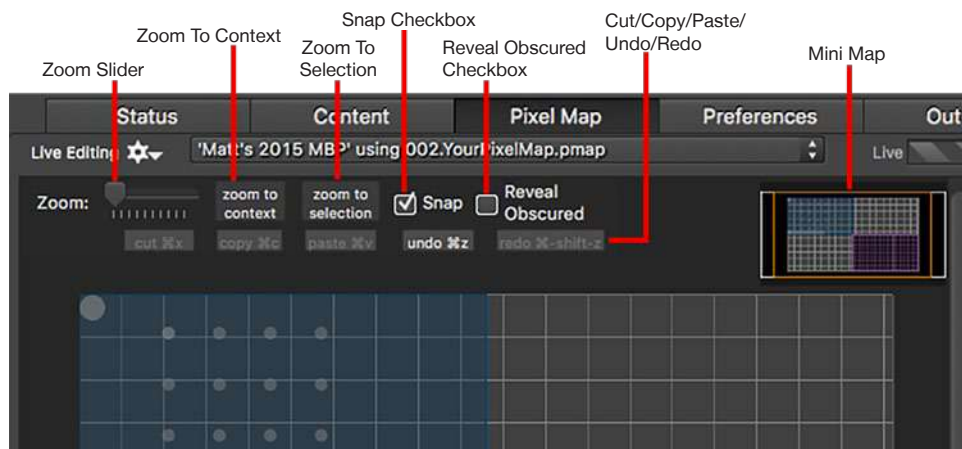

Automatically Resizing Contexts

Because the source that a context samples from can resize automatically, it is important that the context be able to resize automatically as well. The resizing ensures that a context designed to use the entire source will continue to use the entire source if the source changes size. The fixtures placed on the context won't be inadvertently positioned off the source or in the wrong portion of the source.

Automatically resizing a context can only happen if the context's source is set to resize automatically. (Refer to ["Source Dimensions"](#) on page 62) To set a context to resize automatically, first make sure its source is set to resize automatically, then click on the context's Sampling Source pop-up and select the "Automatic Source Dimensions" option. Thereafter, when in a live editing session, the context's Sample Width and Height will resize to match that of its source.

Note: The automatic resizing of context and source are intended as aides for creating or editing a pixel mapping configuration. Once the configuration is completed and is being used by Mbox, changes to the size of the source and/or context are not possible unless Mbox Remote is being used in a live editing session. However, it's very uncommon that source or context sizes will need to change once the configuration is complete.

Fixtures

Fixtures are controllable devices placed onto the context. The fixtures are created using profiles, which are then used as reference when individual fixtures are patched. (For more detailed information about profiles, refer to [“Fixture Profiles”](#) on page 101.)

Fixtures can be added and edited using the Fixture tab.

Guidelines:

- + Fixtures may have one or more pixels. The maximum number of pixels in one fixture is 2048, assuming they are all single 8-bit pixels (e.g. Luma 709).
- + Simple fixtures will only have one pixel type, but more complex fixtures can have more than one type.
- + A fixture may have any arrangement of pixels (linear, rectangular, arbitrary).
- + Fixtures may not exceed 2048 total channels or span more than four universes.
- + A single fixture can only output one protocol, but different fixtures of the same type can output different protocols for each patched instance.
- + Fixtures have properties which define how they receive RGB information and how that information is eventually output: width, height, position X/Y rotation, etc.
- + Fixtures can have a custom name to identify them.
- + Fixtures can have their own update rate.
- + Fixtures can have an overall level master (inhibitive) to reduce their full output.
- + Fixtures can have a slew value (hysteresis), which limits the rate at which the output data can change from zero to full (or vice-versa). This can provide relief for moving lights with mechanical color flag systems that may break if moved too rapidly, or which are noisy.
- + Fixtures can have a mask property assigned, which allows them to be forced to a zero value by using the Control Channel control on the Mbox Master fixture.
- + Fixtures can have a custom rotation. (Rotations are made around the top-left corner of the fixture.)



Pixels

Pixels are the building blocks of fixtures. In this case, a pixel is defined as a single sample of RGB screen data that makes up one addressable portion of the fixture. A typical pixel will occupy one sub-sampling rectangle (although exceptions are possible in more advanced operation).

Guidelines:

- + Pixels may be rectangular or circular in shape, but this only affects how they look in the editor, not their eventual output. (All pixels in one fixture must have the same shape.)
- + Pixels can be of different sizes, but this only affects how they look in the editor. (All pixels in one fixture must have the same size.)
- + There are many different types of pixels. (RGB, HSV, RGB16, CMY, CMY16, Luma, CYM, CYM16, R, G, B, etc.)

Protocols

Fixtures can output one of the four available protocols: Art-Net, sACN, KiNET DMXout, and KiNET PORTout.

Guidelines:

- + Each fixture's output data may only use one protocol.
- + Every fixture placed onto the same context will have the same protocol. To place fixtures that output a second protocol, a new context must be created for those fixtures. (The second context may have identical sample and sub-sample properties as the first context.)
- + Each protocol is bound by the specification of the protocol as to transmission method, number of universes, number of channels per universe, and devices that can receive it.
- + Protocols may be routed to one or more ethernet interfaces on the computer.
- + Protocols may be routed to one of more destinations (IP Addresses).

Note: Refer to [“Overview”](#) on page 48 for more detailed information about protocols and ethernet setups.

Adding Fixtures

Fixtures can be added using the New Fixture Placement controls. When a fixture is first placed on the context grid, it will reference the defaults in its profile. (The fixture and/or fixture profile can be edited, as discussed later in this section.) Mbox Remote provides a list of built-in fixture profiles which can be selected using the Fixture Profile menu. The fixtures in this list are a combination of RGB LED fixtures and moving light fixtures (both CMY and CYM).

To add a fixture:


Step 1. Be sure either the Offline or Live Editing mode is active, rather than Test Only. (Refer to [“Session Types”](#) on page 56.)

Step 2. On the Fixture Profile pop-up menu, select a profile type to be added.



Step 3. The Place New Fixtures button allows placement of one fixture at a time. The Place Multiple New Fixtures button allows placement of multiple fixtures at a time. Clicking the Place New Fixtures button will cause its text to be highlighted in green and a green outline will be shown around the Context Grid to indicate that the mode is active.

Clicking the Place Multiple New Fixtures button will open an additional window with configuration options for the layout and spacing of the fixtures. Once the options have been set, clicking on the Start Placement button will cause its text to be highlighted in green and a green outline will be shown around the Context Grid to indicate that the mode is active.

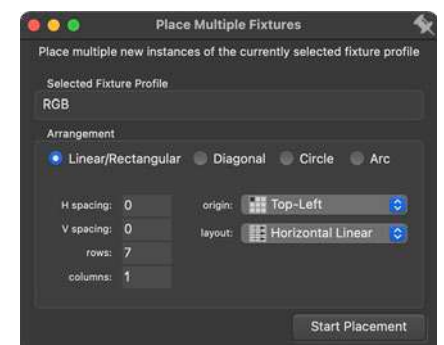

Step 4. Once in a placement mode, click on a sub-rectangle inside the Context Grid to place a fixture or multiple fixtures (depending on the mode) in that location. (Fixtures are anchored by their top-left corner.)


Note: When selected, placed fixtures have one darker pixel (the fixture's first pixel in its patch order) while the remaining pixels are lighter. Even when not selected, the first pixel will be slightly darker than the rest.

- Step 5. Place more fixtures of the same type by continuing to click within the Context Grid, switch fixture type by selecting a new type from the profile pop-up menu, or end placement mode by clicking the Place New Fixtures or Place Multiple New Fixtures button again.

When a fixture is placed on the context grid, an entry for that fixture is added to the table on the right of the grid. Fixtures are given a name, which will be the same as the profile name. Fixtures will be patched sequentially using the next available universe and address as they are placed, thereby allowing a reduction in patch time if fixtures are placed in order. If fixture placement requires a new universe and/or address starting point, this can be entered in the Sequencing area before additional fixtures are placed.

During fixture placement, the automatic patching does not allow for the creation of patch conflicts unless the Allow Conflicts checkbox is checked.

Note: Patch information can be modified at any time after fixtures are placed.

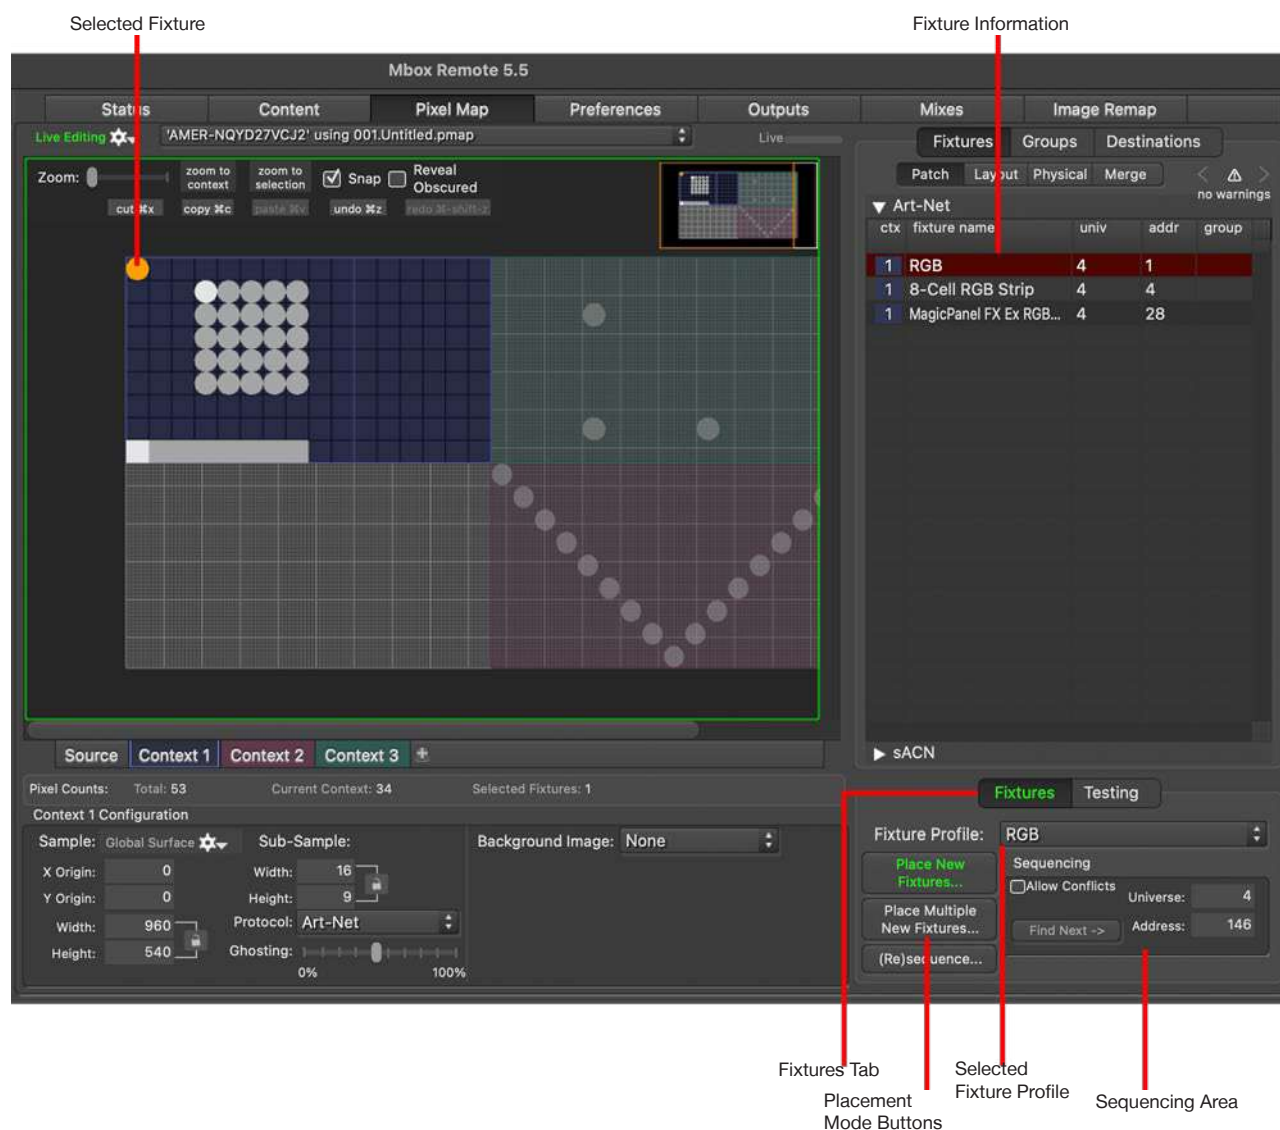


Fixtures Out of Bounds

It is possible for a fixture to have some or all of its pixels outside the boundaries of its context, or even the entire source. Pixels that are outside the boundary of their context will not output any pixel mapping level data. Pixels can end up outside the context's boundary:

- + If the fixture is positioned such that some of its pixels end up outside the boundary.
- + If the context or source is resized to be smaller after the fixture has been added to the configuration.

Fixtures that have pixels outside their context show this in two ways:

- + Pixels that are outside the boundary are outlined in red.
- + Fixtures that have pixels outside the boundary will have a red dot shown in the Fixtures table.

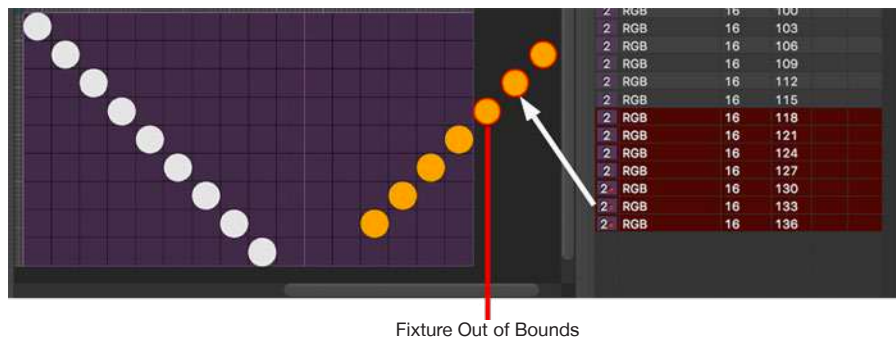

 Geometry Tools can be used to adjust fixture placement. Refer to [“Geometry Tools”](#) on page 81.


Addressing Fixtures

As fixtures are added to a context, they are automatically assigned an output protocol, then a universe, device, or device.port within that protocol, and finally an address for the first pixel in the fixture. Subsequent pixels in the same fixture receive an address that is offset from the first pixel by a set amount. The amount is typically based on the number of channels (addresses) that the previous pixel uses.

- + Art-Net - universe & address
- + sACN - universe & address
- + KiNET PORTout - device.port & address
- + KiNET DMXout - device & address

A fixture's protocol is based on the protocol of the context that it is placed upon, while the address is based on the next available address within the universe/device as shown in the sequencing box at the lower right of the window.



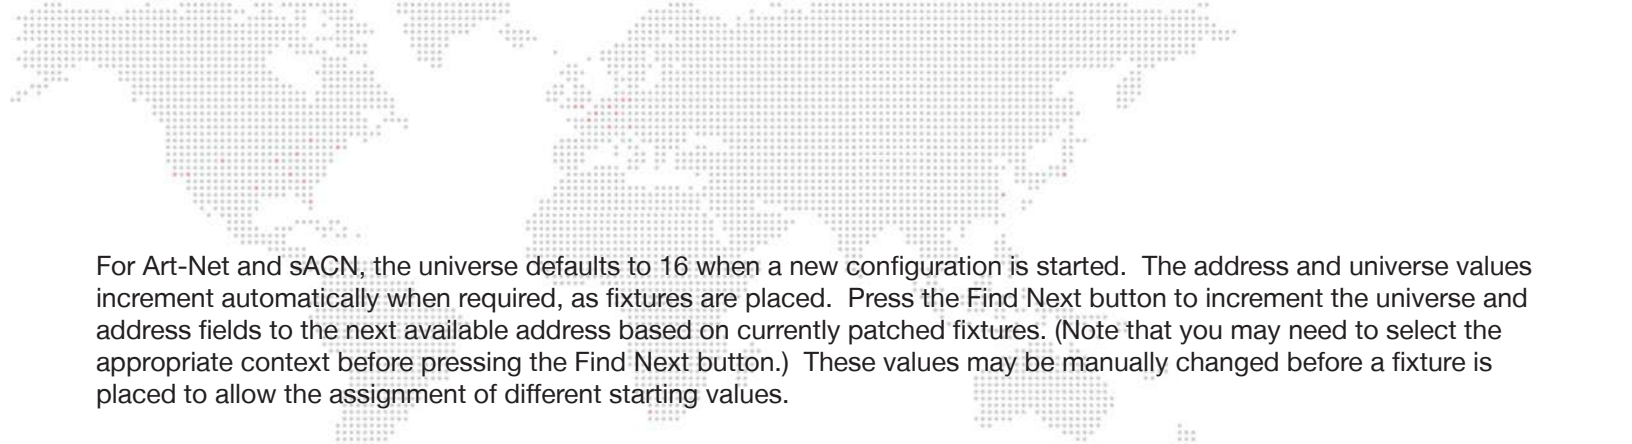

For Art-Net and sACN, the universe defaults to 16 when a new configuration is started. The address and universe values increment automatically when required, as fixtures are placed. Press the Find Next button to increment the universe and address fields to the next available address based on currently patched fixtures. (Note that you may need to select the appropriate context before pressing the Find Next button.) These values may be manually changed before a fixture is placed to allow the assignment of different starting values.

The Allow Conflicts checkbox specifies whether Mbox Remote is allowed to patch fixtures to universes and/or addressed that would lead to a patch conflict. By default, the box is unchecked, which does not allow any conflicts.

- + **Unchecked** - when a fixture is placed, if assigning it the current universe and address values would cause a patch conflict, the fixture will automatically receive the next free address (and universe, if necessary) in order to avoid a conflict. The address (and if necessary the universe) field(s) will then be incremented to the next free address/universe.
- + **Checked** - when a fixture is placed, if giving it the current universe and address values would cause a patch conflict the fixture will receive that address and universe. This would inevitably lead to a conflict, which would have to be remedied manually.

Each context has a single output protocol assignment. Therefore, if the show requires both Art-Net and sACN output, two contexts will need to be created and fixtures placed into the appropriate context.

- + When adding fixtures connected to a KiNET_DMXXOUT power supply, addresses 1- 256 will be on the first port of the DMXXOUT power supply, and addresses 257-512 will be on the second port (if the supply has more than one port).
- + To add fixtures connected to a KiNET_PORTOUT power supply, enter the device number then a period and then a numerical suffix 1 - 16 (e.g. 301.1), with the suffix being the number of the fixture's physical output port on the power supply. Addresses 1-512 may be used for each port.
- + The device number for KiNET power supplies is not actually used outside of Mbox (power supplies are identified by IP Address) and is only an organizational tool to help with patching in the editor and assigning fixtures to power supplies on the Destinations tab.

CAUTION! Always avoid duplicate Art-Net universes anywhere on your system. Avoid duplicating Art-Net universe numbers between incoming control data and outgoing pixel mapping data. If using sACN, it may be possible to use duplicate universes if sACN priorities are assigned correctly. It is also best to avoid duplicating output universes across more than one Mbox server in the system - unless there is a backup system and some means of merging data or switching control between one server and the other. (Use the "Backup Mode" setting in Mbox Remote to suppress pixel mapping output from a backup server. Refer to ["Server Control Commands"](#) on page 24.)

If addressing conflicts (address overlaps) occur, the Pixel Map tab will provide several indications.

- + Addressing overlaps are shown in the table as red highlights on the Fixture Patch tab, and the Alert triangle will have a non-zero value.
- + Patch errors are also shown by an alert indicator at the top right of the table view. Step forwards and backwards through the errors by clicking on the < or > arrow buttons. The number of total alerts are also shown below the indicator.

Note: Overlaps of pixel placements on the context will be shown with a yellow highlight drawn around the pixel in the Context Grid. This is not indicated as an error as overlapping pixels may be desirable at times.

Example showing fixtures with overlapping addresses:

Alert Indicator (total alerts)

Patch Tab View

Fixtures with overlapping addresses

ctx	fixture name	univ	addr	group
2	RGB	16	91	
2	RGB	16	94	
2	RGB	16	97	
2	RGB	16	100	
2	RGB	16	103	
2	RGB	16	104	
2	RGB	16	109	
2	RGB	16	112	
2	RGB	16	115	
2	RGB	16	118	
2	RGB	16	121	
2	RGB	16	124	
2	RGB	16	127	
2	RGB	16	130	
2	RGB	16	133	
2	RGB	16	136	

Example showing overlapping pixels on two separate fixtures:

Layout Tab View

Overlapping Pixels

ctx	fixture name	xpos	ypos	rotn	pixfill
2	RGB	0	0	0°	100
2	RGB	1	1	0°	100
2	RGB	2	2	0°	100
2	RGB	3	3	0°	100
2	RGB	4	4	0°	100
2	RGB	5	5	0°	100
2	RGB	6	6	0°	100
2	RGB	7	7	0°	100
2	RGB	8	8	0°	100
2	RGB	8	8	0°	100
2	RGB	9	7	0°	100
2	RGB	10	6	0°	100
2	RGB	11	5	0°	100
2	RGB	12	4	0°	100
2	RGB	13	3	0°	100
2	RGB	14	2	0°	100

Re-Addressing Fixtures

When fixtures are first placed onto a context, they are automatically given an address as explained in [“Addressing Fixtures”](#) on page 72. If the patch needs to change, however, fixtures can be quickly re-addressed using one of three methods:

- + Patch table.
- + Re-Address Fixtures window.
- + Sequential re-addressing feature.


Each of these methods is explained below.

Patch Table

A fixture’s universe and address can be edited directly in the Patch table. This is useful when re-addressing a single fixture.

To edit patch in the Fixture table:

- Step 1. On the right side of the Pixel Map tab, select the Fixtures > Patch tab.
- Step 2. On the Patch tab, double-click on universe (univ) or address (addr) field. Use the [tab] key to move from column to column, or use the up and down arrow keys to move vertically while staying in the same column.
- Step 3. Make changes as required. Be sure to press [tab] or [return] on the keyboard to accept any edits.

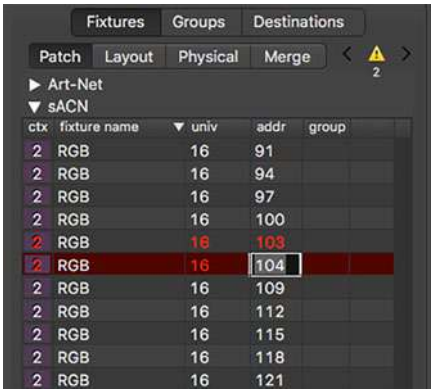

Fixtures				
Groups				
Destinations				
Patch				
Layout				
Physical				
Merge				
Art-Net				
sACN				
ctx	fixture name	univ	addr	group
2	RGB	16	91	
2	RGB	16	94	
2	RGB	16	97	
2	RGB	16	100	
2	RGB	16	103	
2	RGB	16	104	
2	RGB	16	109	
2	RGB	16	112	
2	RGB	16	115	
2	RGB	16	118	
2	RGB	16	121	

Note: To make changes to multiple fixtures at the same time, use the Re-Address Multiple Fixtures window. Refer to the instructions on the following pages.

Re-Address Multiple Fixtures Window

The Re-Address Multiple Fixtures window can be used to quickly re-address a large group of fixtures or their merge data.

To assign a new starting point using Re-Address Multiple Fixtures window:

Step 1. On the right side of the Pixel Map tab, select the Fixtures > Patch tab.


Step 2. On the Patch tab, select multiple fixtures (using ⌘ or shift when clicking), then double-click on the univ or addr field of any selected line to open the Re-Address Multiple Fixtures window.

Step 3. Use the sort order popup to define how the selected fixtures will be sorted before they are renumbered: universe then address (default), X position then Y position, Y position then X position, or name.

Step 4. In the From Universe field, enter a new starting universe if desired. Enter any changes to the start address in the From Addr field.

Step 5. Do one of the following:

- Click the Sequential Readdress button to renumber all selected fixtures starting at the new universe and address. This method will fix any overlap conflicts in the process and leaves no gaps between fixtures. Click the Commit button to accept the changes.
- Click the Commit button (without clicking the Sequential Readdress button) to renumber the selected fixtures starting at the new universe and address, but without fixing any overlap conflicts and leaving the current gaps between fixtures. Conflicts will continue to be noted in the table after the window is closed.

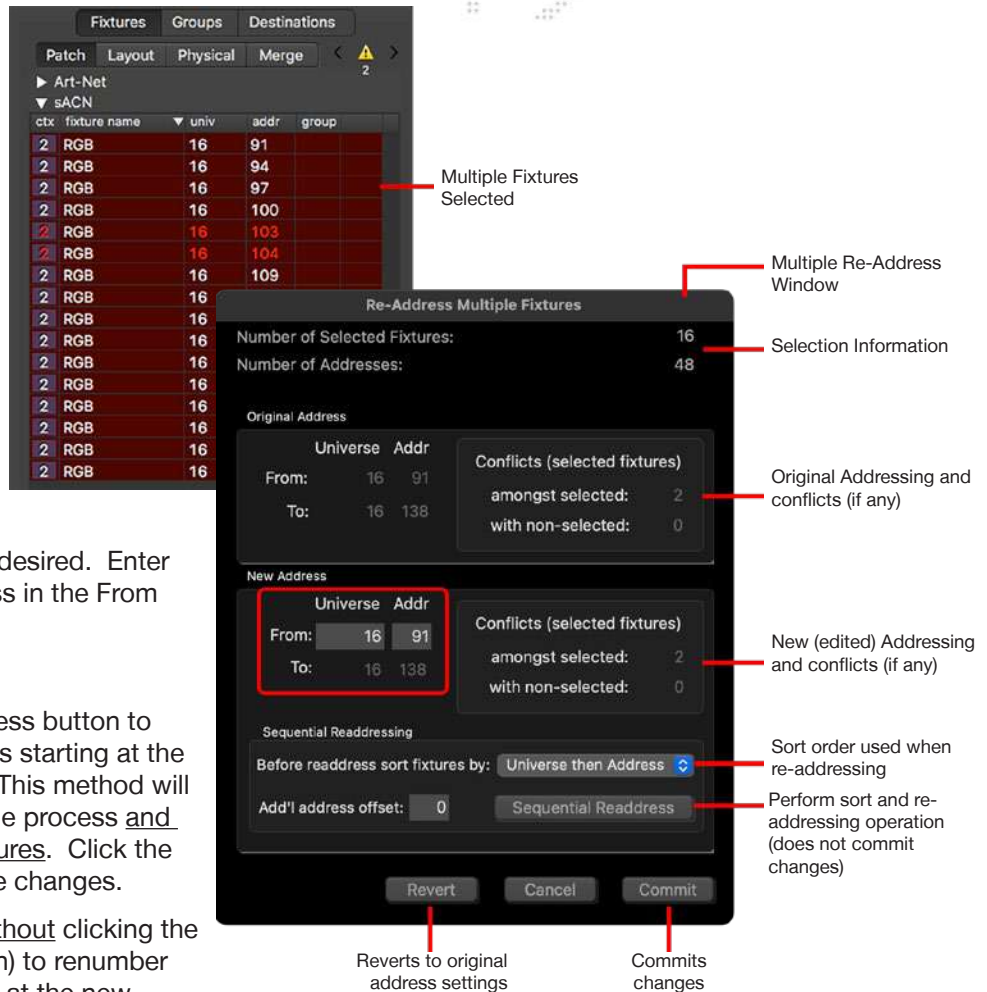

Note: If the Merge tab is selected when this window is opened, this window will affect merge addressing. However, merge addressing cannot be changed unless the fixture use a merge type other than "no merge."


The Add'l address offset field can be used to insert a consistent additional address spacing between fixtures when they are re-addressed using the Sequential Readdress button. For example:

- + A range of selected fixtures starts at address 1 and each fixture uses 3 channels. Therefore the fixtures' addresses are 1, 4, 7, 10... If the fixtures are sequentially re-addressed with an Address Offset value of 10, their new addresses will be 1, 14, 27, 40...

Re-Sequence Feature

The re-sequence feature can be used to re-address fixtures one by one as they are clicked in the Context Grid. To re-address using re-sequence feature:

- Step 1. At right side of the Pixel Map tab, select the Fixtures > Patch tab.
- Step 2. Click on the (Re)sequence button to enter re-addressing mode. (The button's text will change from white to green to indicate mode is active and a green box will be drawn around the context area.)
- Step 3. Enter a start Universe and Address in the fields to the right of the button or click the Find Next button.
- Step 4. On the Context Grid, click on fixtures one-by-one to apply new sequential addressing with no gaps between fixtures. The universe and address values will increment by the correct amount as each fixture is clicked.

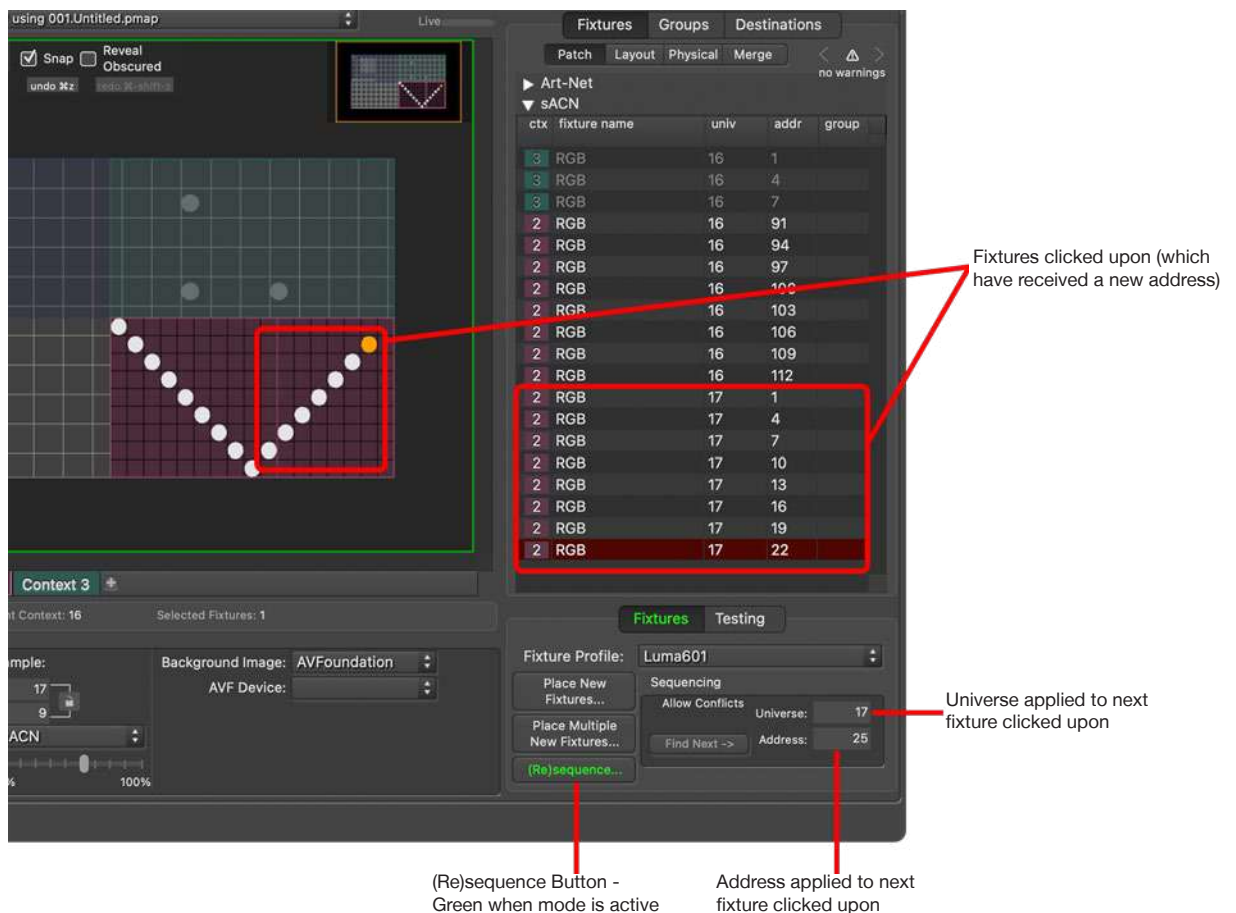


- Step 5. Click the (Re)sequence button to exit the re-sequencing mode when done.

Copy and Paste Fixtures


A convenient way to quickly add fixtures is to use the copy and paste feature.

To copy and paste fixtures:

- Step 1. On the Context Grid, select a fixture or fixtures to copy. Multiple fixtures can be selected by using click and drag to draw a box around their pixels.
- Step 2. Press [⌘C] to copy the selected fixture(s).

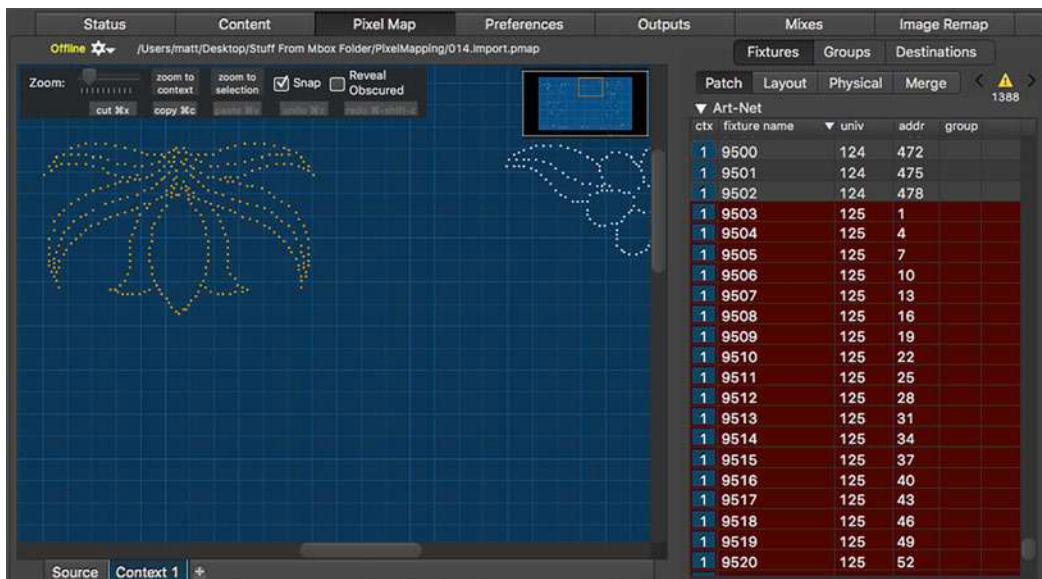

- Step 3. Press [⌘V] to paste the fixture(s). They will be dropped where the cursor is located. The pasted fixtures will be automatically selected and any addressing conflicts created will be shown in red.

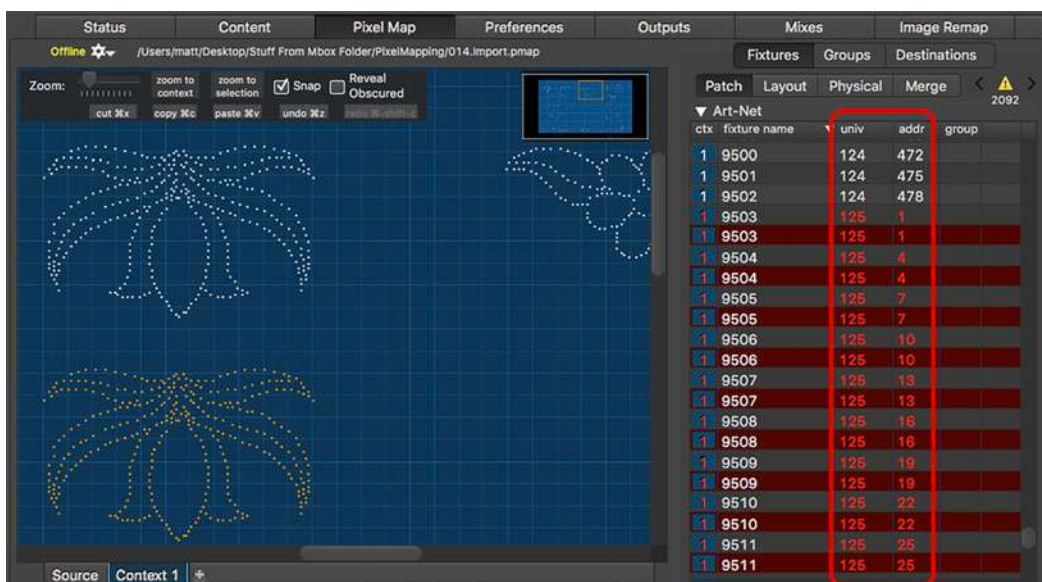

- Step 4. In the table, double-click on the univ or addr field of one of the selected fixtures. The Re-Address Multiple Fixtures window will open.

- Step 5. On the Re-Address Multiple Fixtures window, note that there are two boxes: the Original box shows the current addressing scheme and the conflicts with this scheme; the New box allows a new addressing scheme to be entered and will show an updated conflict report when the Auto Renumber button is clicked.
- Step 6. To re-address the selected fixtures, first select a sort order for the fixtures to be re-addressed. When eliminating simple conflicts by repatching a group of fixtures to a different universe or address, the sort method will typically be "Universe then Address," which will maintain the existing order of the fixtures when they are renumbered.
- Step 7. Enter an unused starting universe and address (and address offset if desired) to be applied to the first selected fixture. The remaining selected fixtures will be re-addressed to follow this first fixture.

Re-Address Multiple Fixtures

Number of Selected Fixtures: 352
Number of Addresses: 1056

Original

Universe	Addr	Conflicts (selected fixtures)
From:	125 1	amongst selected: 0
To:	127 36	with non-selected: 352

New

Universe	Addr	Conflicts (selected fixtures)
From:	125 1	amongst selected: 0
To:	127 36	with non-selected: 352
Address Offset:	0	

Before renumber sort fixtures by: Universe then Address

Revert Auto Renumber

Cancel Commit

- Step 8. Click the Auto Renumber button, this will perform the selected sort operation and test (but not apply) the re-addressing to check for any conflicts. Any remaining conflicts will be reported in the New box.
- Step 9. Click the Commit button to apply the re-addressing. The conflicts in Patch table will be resolved.

Status **Content** **Pixel Map** **Preferences** **Outputs** **Mixes** **Image Remap**

Offline /Users/matt/Desktop/Stuff From Mbox Folder/PixelMapping/014.import.pmap

Zoom: zoom to context zoom to selection ☒ Snap ☐ Reveal Obscured

cut copy paste undo redo

Source Context 1

Fixtures **Groups** **Destinations**

Patch **Layout** **Physical** **Merge** 1388

ctx	fixture name	univ	addr	group
1	9850	127	22	
1	9851	127	25	
1	9852	127	28	
1	9853	127	31	
1	9854	127	34	
1	9503	129	1	
1	9504	129	4	
1	9505	129	7	
1	9506	129	10	
1	9507	129	13	
1	9508	129	16	
1	9509	129	19	
1	9510	129	22	
1	9511	129	25	
1	9512	129	28	
1	9513	129	31	
1	9514	129	34	
1	9515	129	37	
1	9516	129	40	
1	9517	129	43	
1	9518	129	46	
1	9519	129	49	


Fixture Editing

To select a fixture for editing, deletion, movement, etc., do one of the following:

- + Click on one of its pixels on the Context Grid.
- + Click and drag on the Context Grid to draw a box around one or more of the fixture's pixels.
- + Click on the line for the fixture in any of the three tabs in the Fixture table (Patch, Layout, and Physical).


Select fixture on Context Grid

Select fixture in table

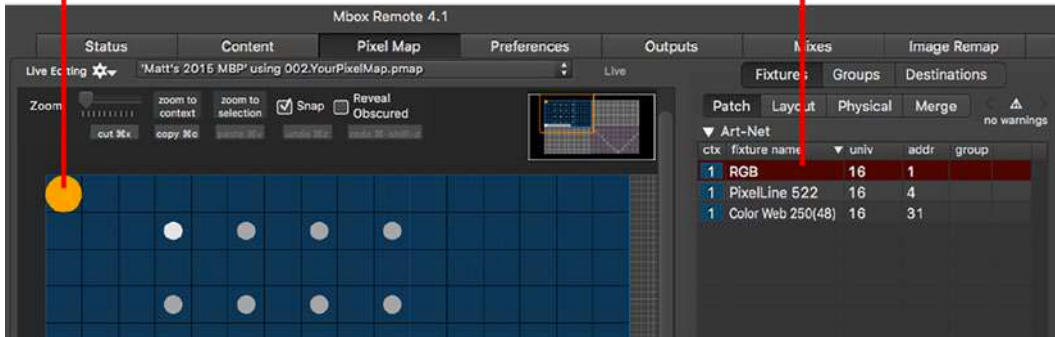

Multiple fixtures can be selected in three ways:

- + Click and drag to draw a box around pixels for multiple fixtures on the Context Grid.
- + Shift-click on multiple fixtures on the Context Grid.
- + Shift-click or command-click on multiple lines in the Fixture table.

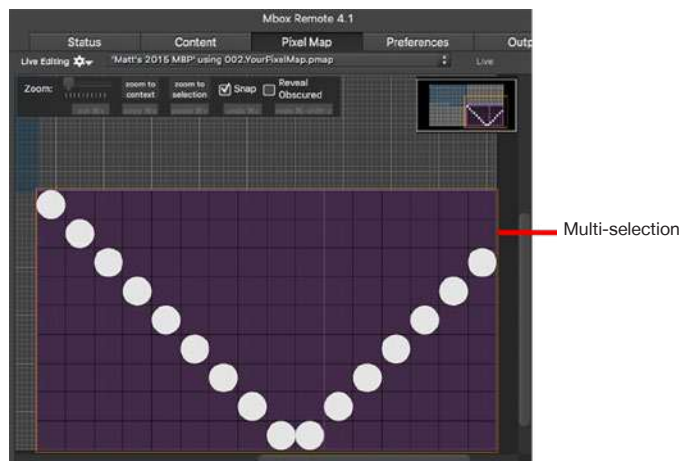

Moving Fixtures

First select fixture(s) using one of the methods outlined above, then click on one of the selected fixtures and drag, or use keyboard shortcuts (e.g. [⌘←] or [⌘→]) to nudge the selected fixtures.

Deleting Fixtures

First select fixture(s) using one of the methods outlined above, then press the [delete] key.


Undo and Redo

Use [⌘Z] to undo. Use [⌘⇧Z] to redo.

Geometry Tools


The Geometry Tools feature can be used to move, scale, rotate, flip, and arrange fixtures as a group.

To open the Geometry Tools window, first select one or more fixtures, then right-click on one of them. On the contextual menu that appears, select Geometry Tools.



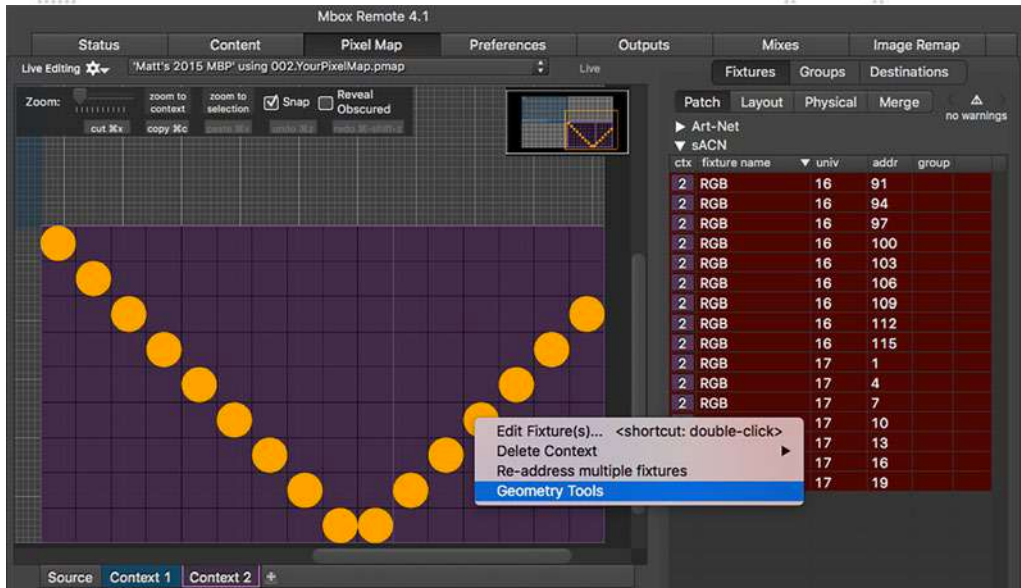


The Geometry Tools window provides several options:

- + Nudge the selected fixtures in any direction by one sub-sampling rectangle. In addition to clicking on the buttons, whenever the Geometry Tools window is open, the arrow keys on the keyboard can be used for nudging selected fixtures.
- + Scale or move selected fixtures' positions by a certain factor.
- + Rotate the selected fixtures as a unit.
- + Flip selected fixtures around the X or Y axis as a unit.
- + Arrange selected fixtures in a circle or arc.
- + Align the top or left edge of selected fixtures.
- + Apply specific horizontal or vertical spacing between selected fixtures.
- + Apply an even linear or rectangular/arrayed distribution of the selected fixtures.


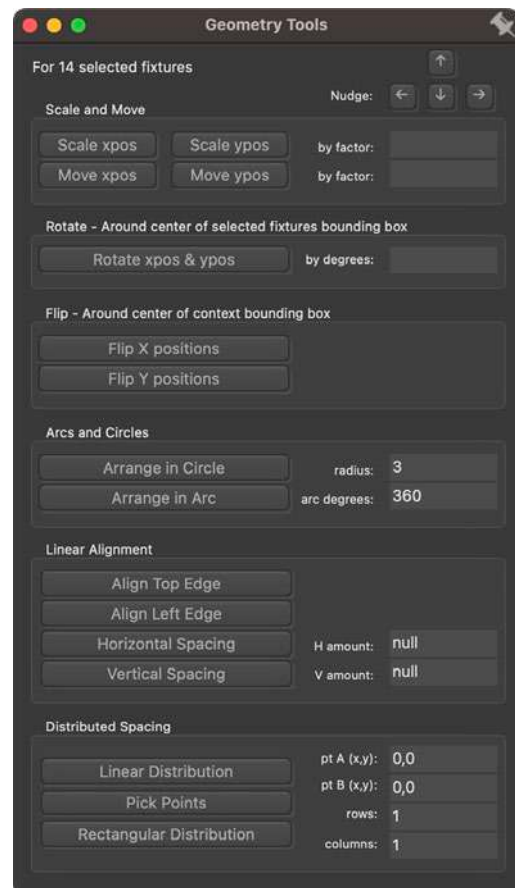


For example, when reducing the context size from 160 x 90 to 16 x 9, it would be time-intensive to manually move all the fixtures so they will fit into the smaller context. In this case, the Geometry Tools could be used to move all the fixtures at once. To do this, select all fixtures, enter a factor of 0.1 in the “by factor” field and click Scale xpos and Scale ypos buttons. (This will divide the scale by 10.) Once the fixtures are moved, then reduce the context size in the usual manner.

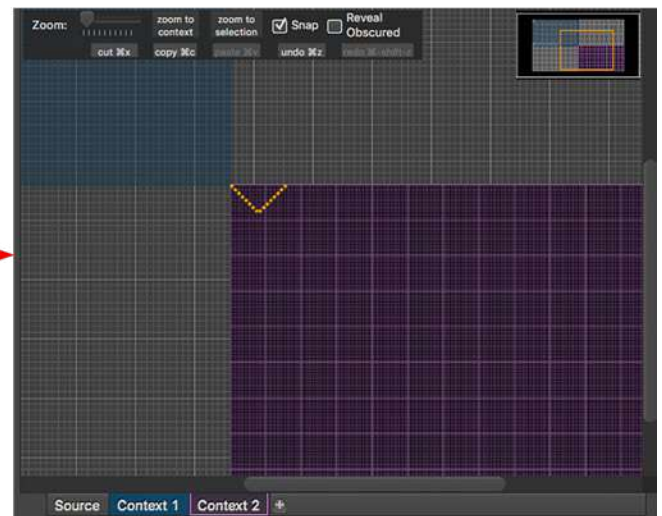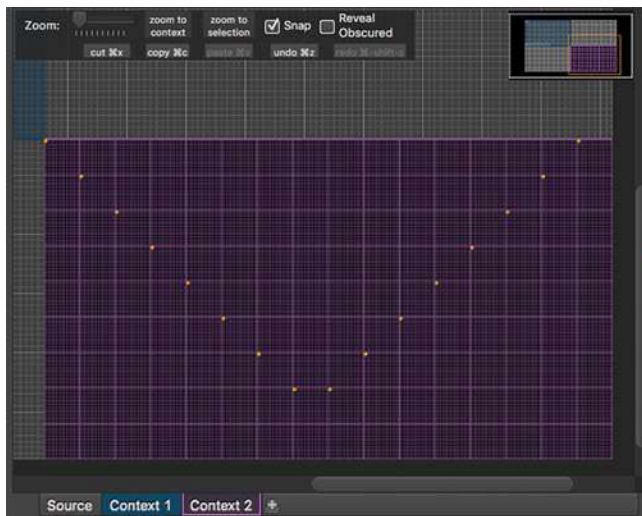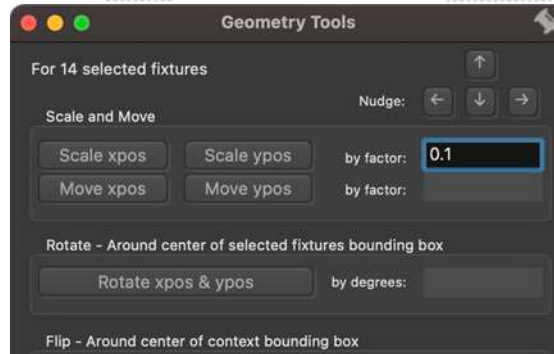

The context's sub-sample width and height can be changed by entering a math equation in the context's Sub-Sample fields. For example, '/10' (divide by 10) as shown below:


The final result of the moved fixtures and reduced context size is shown below:

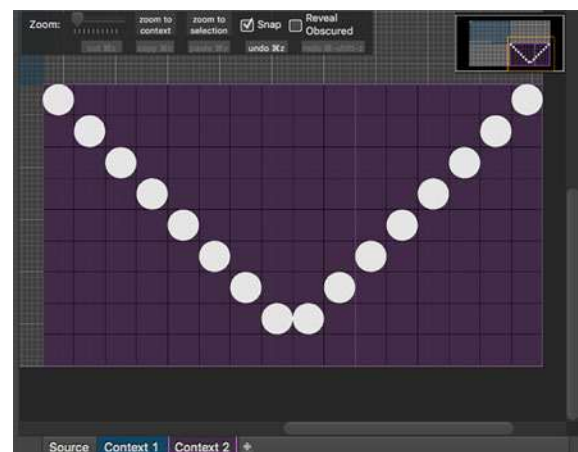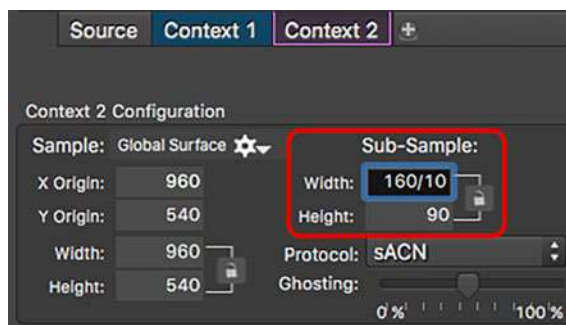


The following examples illustrate the difference in the Arrange in Circle and Arrange in Arc tools.

If “arc degrees” is set to a value of 360 with 16 fixtures selected:

- + Arrange in Circle places the first fixture at 0 degrees and the last fixture at $360 * (n-1) / n$, where 'n' is the number of selected fixtures.

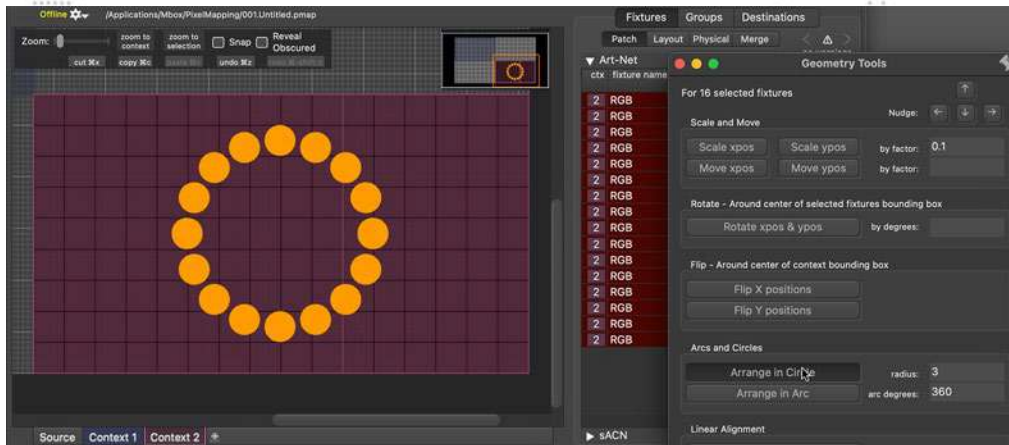


- + With the same Arc Degrees value (360°), Arrange in Arc places the first fixture at 0 degrees and the last fixture at 360. The first and last fixture are placed on top of each other.

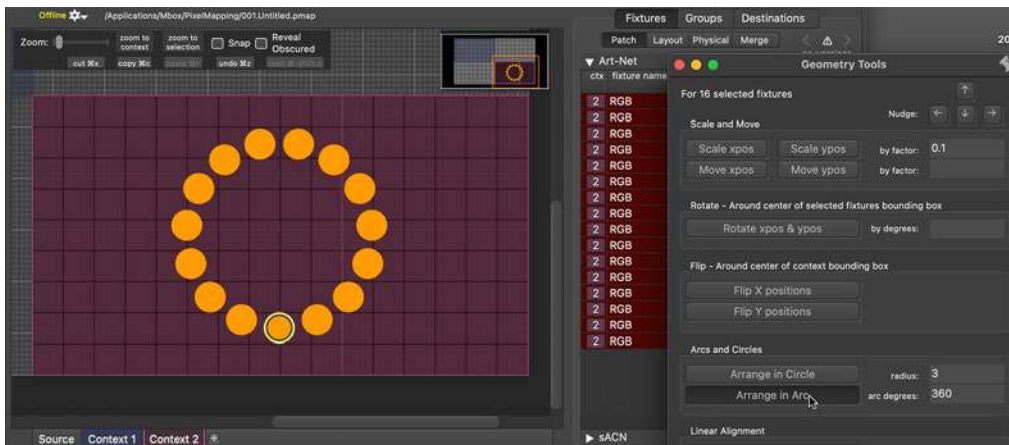


If “arc degrees” is set to a value 180 and 8 fixtures selected:

- + Arrange in Circle places the first fixture at 0 degrees and the last fixture at $180 * (n-1) / n$, where 'n' is the number of selected fixtures.

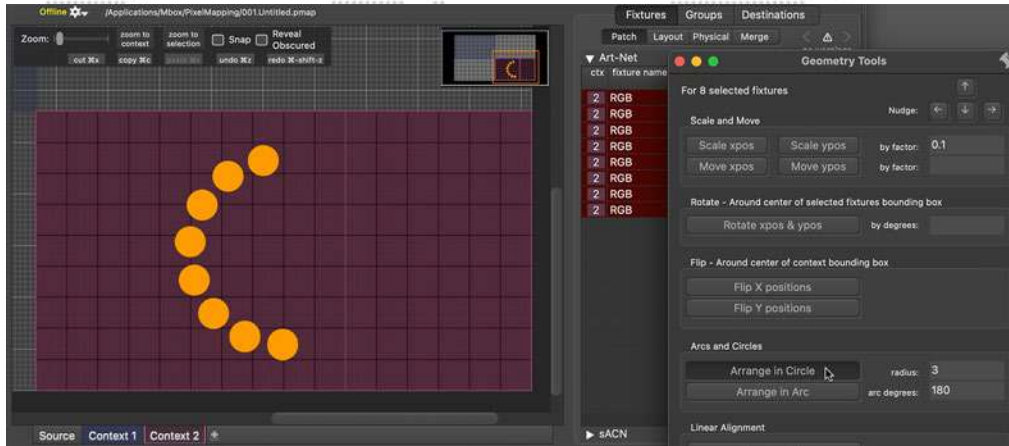


- + Arrange in Arc places the first fixture at 0 degrees and the last fixture at 180.

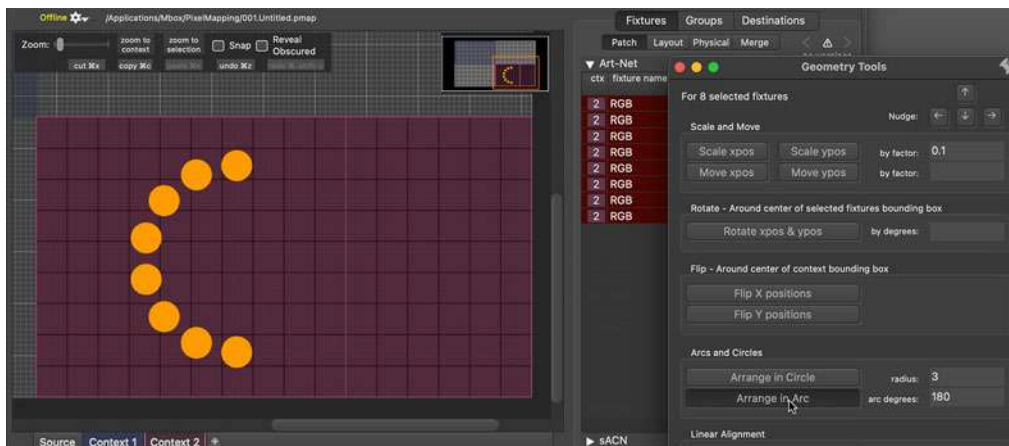


The following examples illustrate the use of the linear alignment and spacing tools.

Starting with an arrangement of seven single RGB fixtures:


Note: The Geometry Tools rearrange multiple fixtures in order based on their universe.address or device.port.address (i.e. the order they are listed in the patch table) rather than the order in which they are selected.

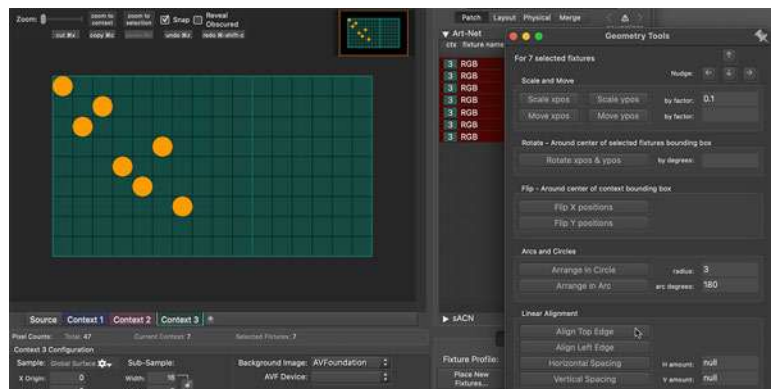


- + Arrange them in a horizontal row, using the top edge of the first fixture.

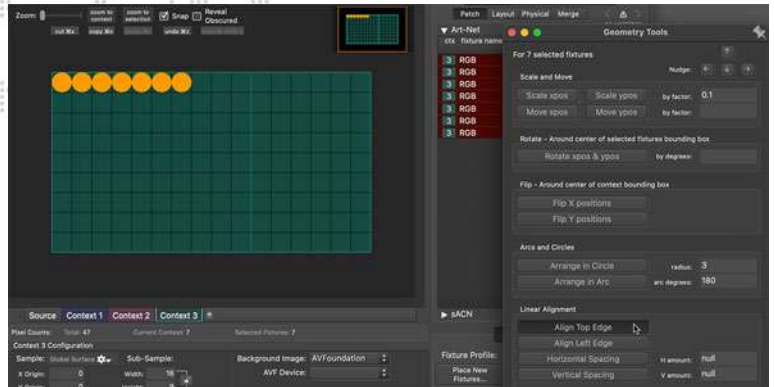


- + Arrange them in a vertical column, using the left edge of the first fixture.

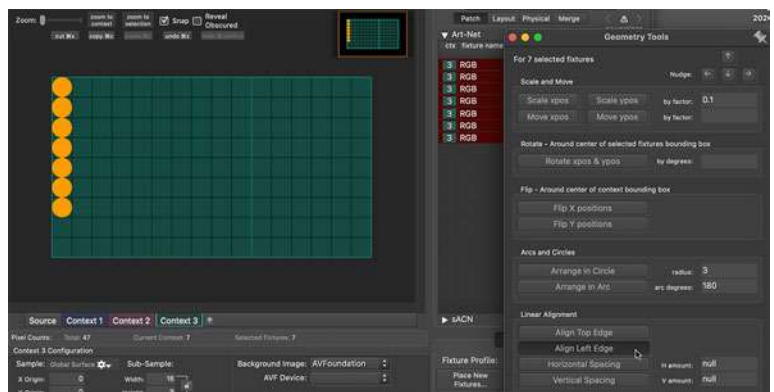

- + Re-space the fixtures horizontally by 1.5 rectangles on the context grid.

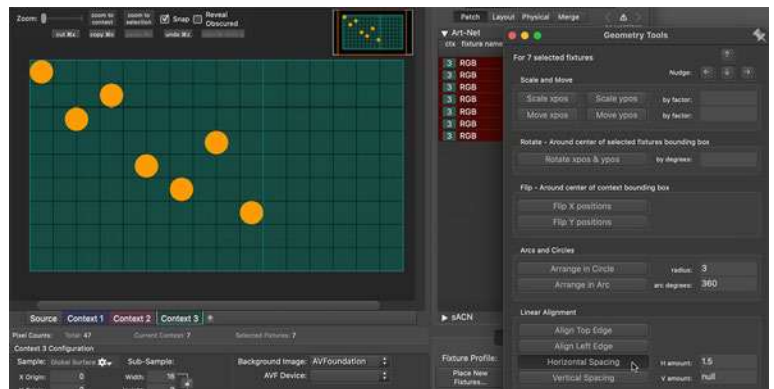

- + Re-space the fixtures vertically by 1 rectangle on the context grid.

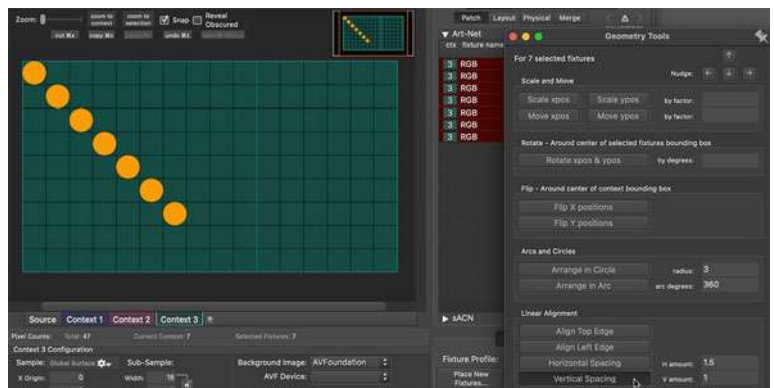


The following examples illustrate the use of the distributed spacing tools. The distribution spacing tools allow selected fixtures to be evenly distributed in a linear fashion or arrayed in a rectangular fashion. In both cases - linear and rectangular - two points define the arrangement. They represent the endpoints for linear distribution and the top-left and bottom-right corners for rectangular distribution.


There are two ways to enter the required points - manually, by entering x,y values into the corresponding textfields, or by clicking the “Pick Points” button to enter that mode, and then clicking directly on the context grid to set the two points.

Starting with an arrangement of fifteen single RGB fixtures:


- + The pt A and pt B textfields represent the two points that define the endpoints or corners of the distribution. Values must use the format “x,y” and can use either integer or float values.

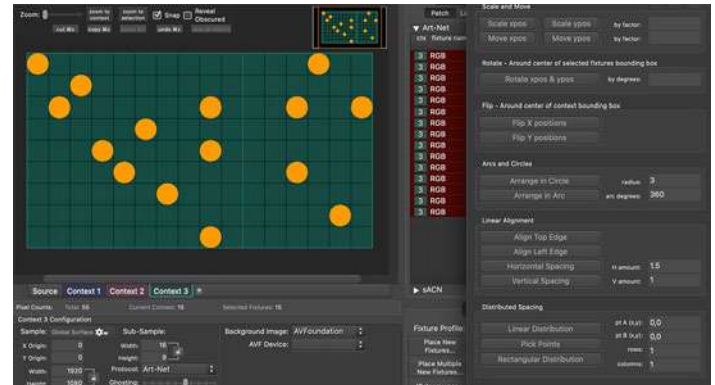


- + Manually enter a pt A value (0,0) and a pt B value (15,8) and click on the Linear Distribution button. The fixtures are spaced evenly between the two points, meaning that each fixture's x,y coordinates no longer snap to the grid.

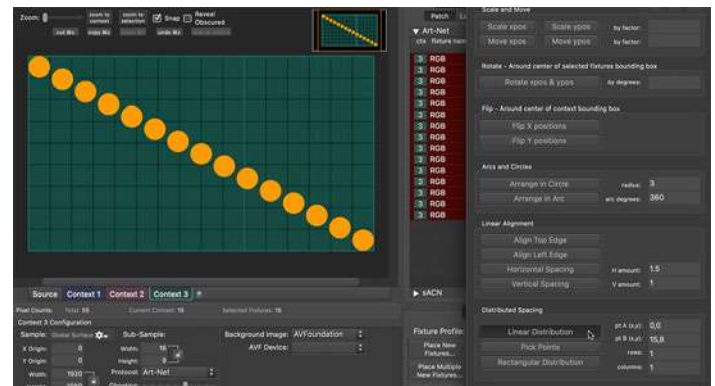


- + With a similar starting arrangement having sixteen pixels, and using the same pt A and pt B values. Enter appropriate values in the rows and columns textfields and click on the Rectangular Distribution button. Based on the number of selected fixtures and the rows and columns values, an error message will be displayed if (rows x columns) < # of fixtures.

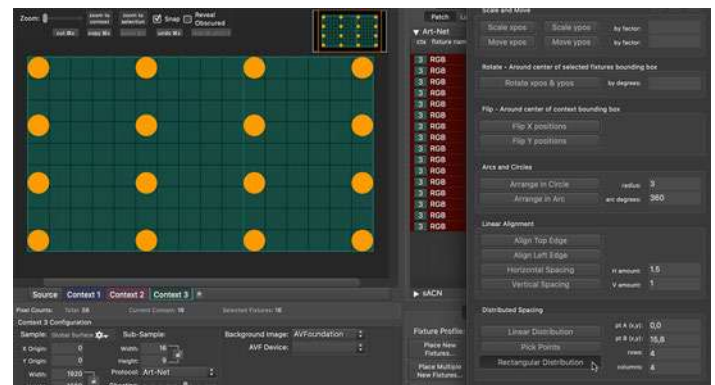



If the mouse pointer is hovered over the Pick Points button, a tooltip describing the two possible methods of using the Pick Points mode. Both methods allow the pt A and pt B values to be entered by clicking on the context grid rather than being entered manually. If no keyboard modifier is held down when the second click happens, the points will be set and either the Linear or Rectangular Distribution button must be clicked. But if either the [cmd] or [opt] keys are held down when the second click happens, the corresponding distribution - linear or rectangular - will happen immediately.

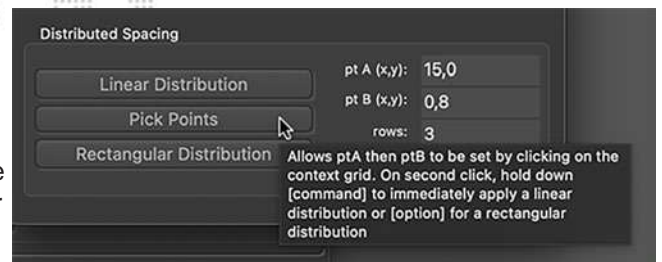

- + The Pick Points button has been clicked, and the mode has been entered. The color of the text on the Pick Points button changes to green and a green line is drawn around the context grid area.

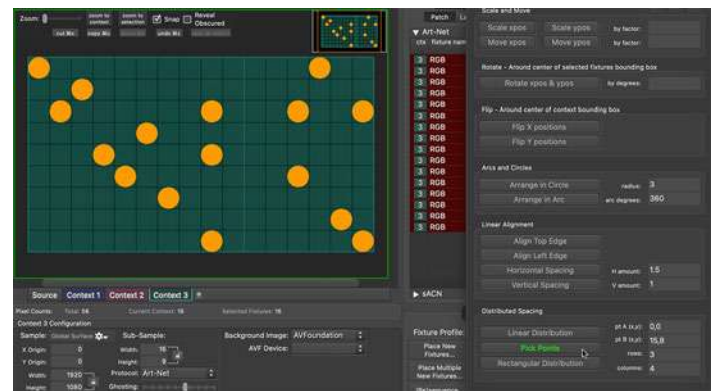


- + Click on the context grid to set the first point - 15,0 - then click on the context grid again to set the second point - 0,8. After the second click on the context grid, the Pick Points mode will end and the green text and outline will revert to normal.

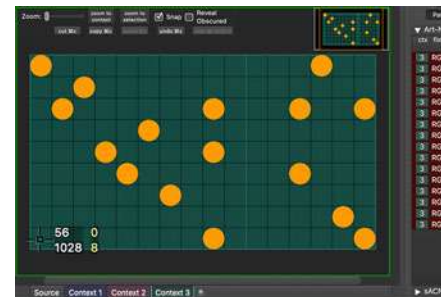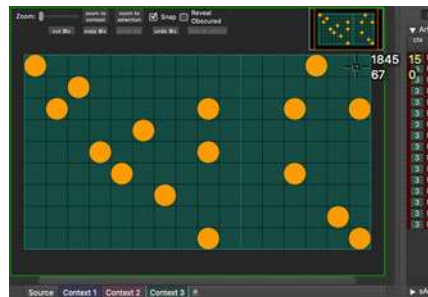

- + Click on the Linear Distribution button to apply the selected pt A and pt B values.

- + Alternately, when making the second click on the context grid, hold down either the [cmd] or [opt] key to immediately apply a linear or rectangular distribution (without needing to press the corresponding button) and exit the Pick Points mode.

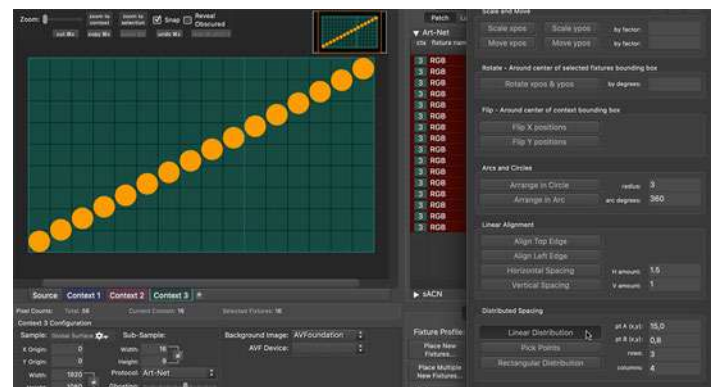

Editing Fixture Properties

Once a fixture has been added to a context, its properties can be edited. Some of the fixture-level properties can be edited directly by double-clicking on a field in the table when the Fixtures tab is selected. These are:

- + Patch tab: universe/device, address, group
- + Layout tab: name, X position, Y position, rotation
- + Physical tab: name

ctx	fixture name	univ	addr	group
2	RGB	17	1	
2	RGB	17	4	
2	RGB	17	7	

Patch

ctx	fixture name	xpos	ypos	rotn	pixfill
2	RGB	0	0	0°	100
2	RGB	1	1	0°	100
2	RGB	2	2	0°	100

Layout

- + Merge: universe, address, merge universe, merge address

Right-clicking on selected fixtures on any of these tabs provides additional options for either re-addressing or renaming multiple fixtures.


ctx	fixture name	rfrsh	slew	mask	level
2	RGB	30	0s		100
2	RGB	30	0s		100
2	RGB	30	0s		100

Physical

ctx	univ	addr	mrg univ	mrg addr	merge	input t
2	17	1	0		Full Profile	
2	17	4	0		No Merge	
2	17	7	0		No Merge	


Merge

Re-addressing multiple fixtures is discussed earlier in this section; refer to [“Re-Address Multiple Fixtures Window”](#) on page 76. There is a separate window for renaming multiple fixtures. This window allows the selected fixtures to be sorted by universe then address, X position then Y position, Y then X, or by name, and to have text removed from or added to their name and a numerical prefix or suffix to be added to their name.

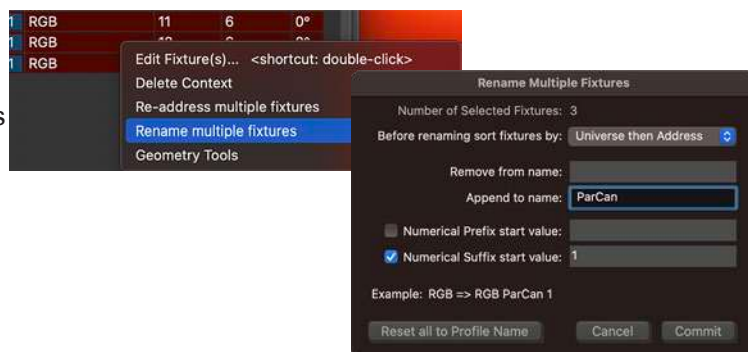

Other fixture-level properties can only be edited using the Edit Fixture window. The window can be used to edit a single fixture or multiple fixtures at once, if multiple fixtures are selected before opening the window.


The Edit Fixture window also allows some profile-level properties to be changed without affecting the referenced profile. In other words, these profile-level property settings can be unique to the selected fixture(s). The profile reference can also be swapped to another profile. The Edit Profile Instead button provides access to all profile-level properties. (Refer to [“Editing Fixture Profiles”](#) on page 113.)

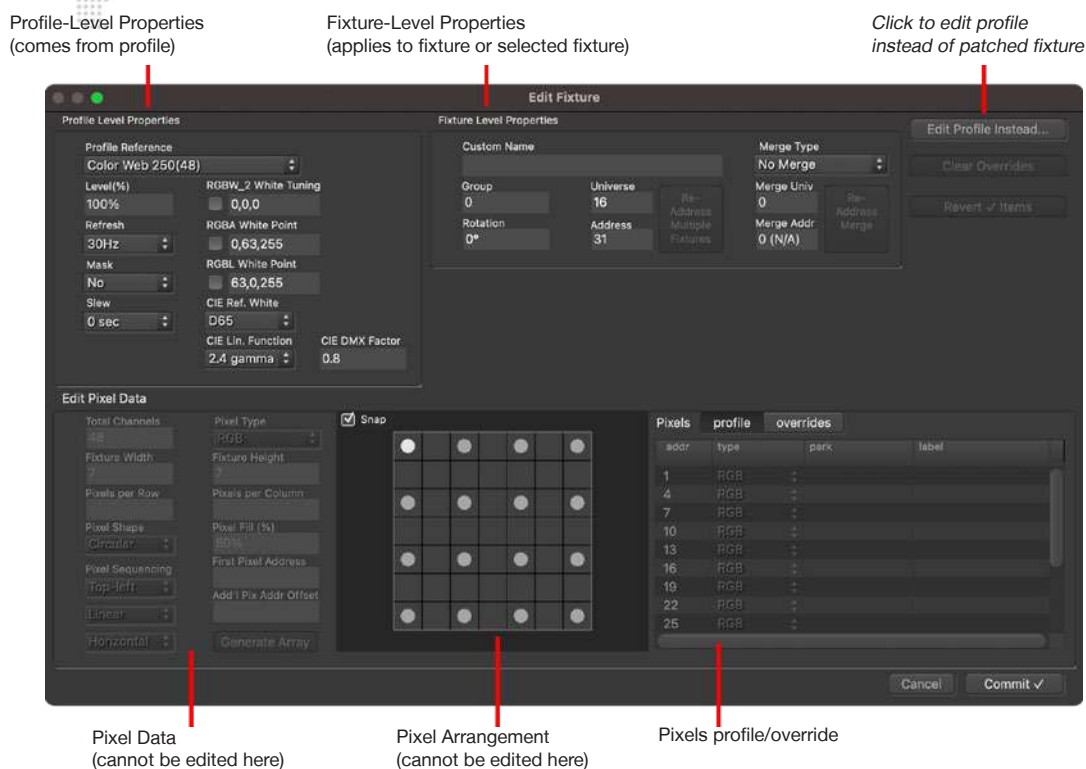


Pixel data is displayed in the window, but cannot be edited. However, it is possible to apply parked pixel overrides to existing pixels using the overrides tab. To add more parked pixels, use the Edit Profiles feature. Refer to [“Editing Fixture Profiles”](#) on page 113.

To use the Edit Fixture window:

- Step 1. Open the Edit Fixture window using one of the following methods:
- Double-click on a fixture's pixel in Context Grid.
 - Double-click on a fixture's ctx or fixture name field in the Fixture table.
 - Select multiple fixtures in Fixture table (using ⌘ or shift), then double-click on one of the fixtures' ctx or fixture name field.
- Step 2. On the Edit Fixture window, make changes to properties as required. During this process, the window will place a green checkbox beside edited fields.
- Step 3. Changes can be cleared by unchecking the green checkboxes, or the changes can be accepted and applied by clicking the Commit button.

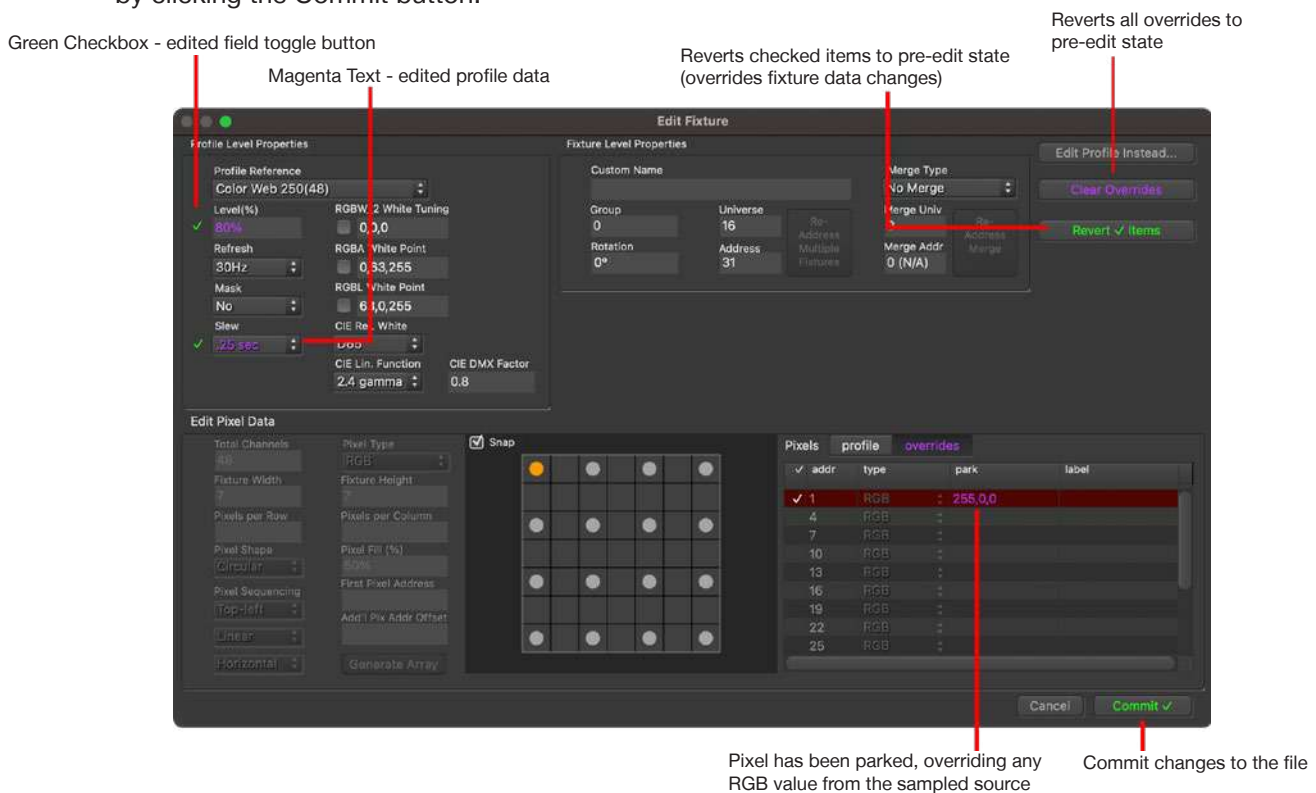


Fixture values that are edited to be different from the profile data are considered “overrides.” Fixtures with overrides will have a magenta dot indicator in the Fixture table. If the Edit Fixture window is opened again these overrides can be cleared, thereby reverting to the original property from the fixture profile.

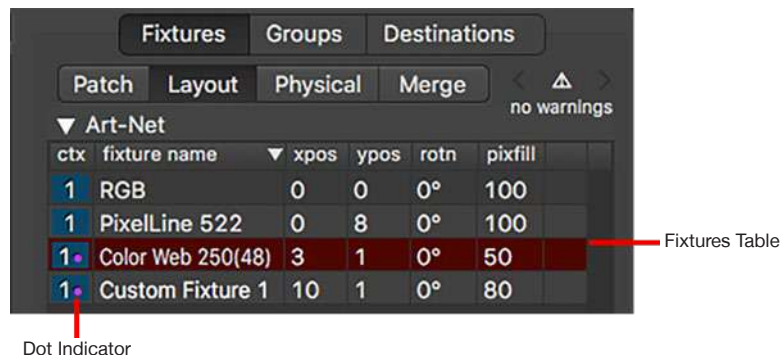

Destinations

Once fixtures have been placed onto the Context Grid, their data will need to be routed to a destination. This can be done using the Destinations tab.

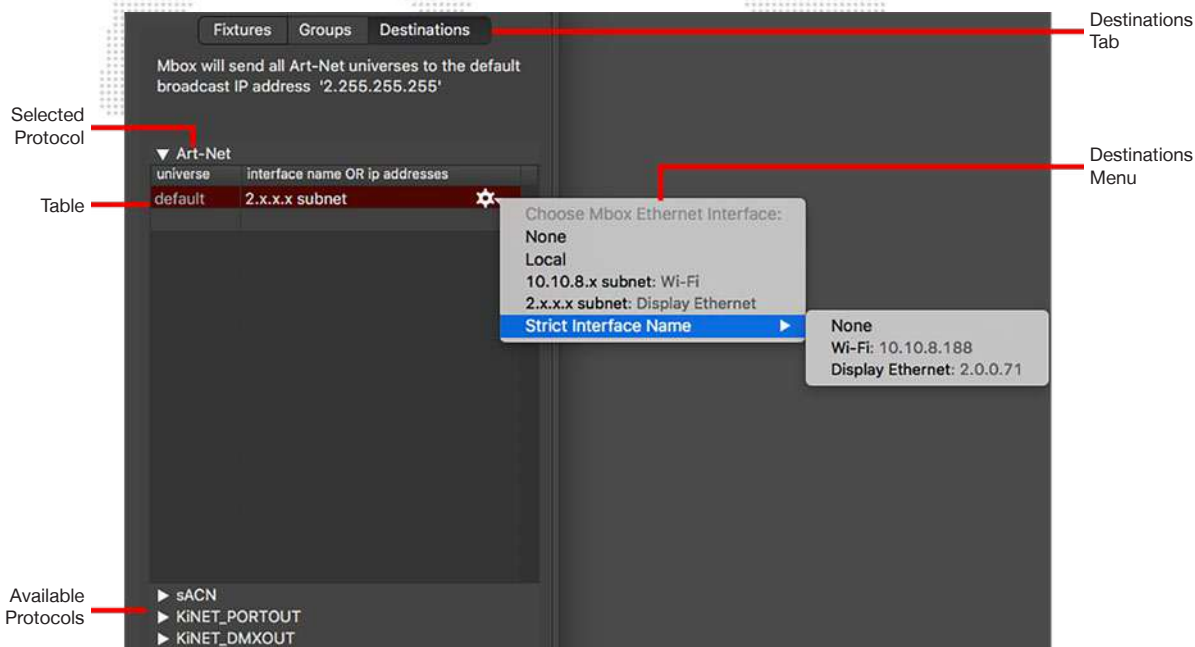

There is a separate area of the Destinations tab for each of the protocols. When the Destination tab is selected, the protocol of the current context will be displayed. A different protocol can be viewed by clicking on the name of the protocol.



Destination Protocol Information

IMPORTANT! If you are using KiNET PORTOUT, please read the section below when entering device.port numbers on the Destinations tab.


KiNET has two protocol versions: v1 = DMXXOUT and v2 = PORTOUT. You must select the correct protocol type depending on the Color Kinetics power supply that is used. Check with the manufacturer's documentation to determine what type of supply you have and how it should be configured.

For Art-Net and sACN only - and only once in the table - there may be an entry of "default" in the universe field. This will cause all patched universes without a discrete destination entry in the table to be sent to the corresponding default IP address. With Art-Net only, if the default entry is given a broadcast IP address then ArtPOLL discovery will be used (as long as it is not disabled at the Mbox Setup window). This would lead allow for automatic unicasting to all ArtPOLL compatible devices on that subnet.

For KiNET PORTout or DMXXout, the device number (for example, 303) must be entered for each connected power supply. This will cause Mbox to send data for fixtures using that device number to the designated IP address and routed to the appropriate port on that device.

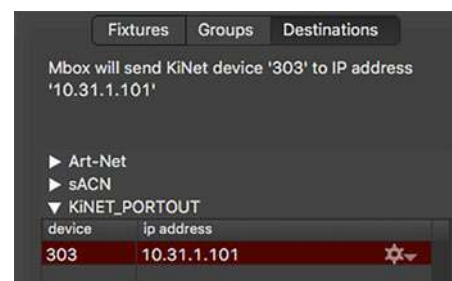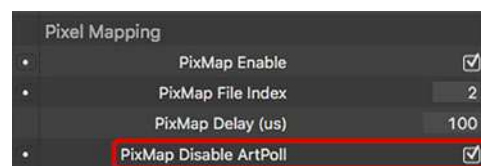


To enter discrete destinations, double-click in the blank fields below the default destination and enter the universe or device number and IP Address for the new destination. This IP address is where all data for fixtures using that destination will be sent. Several different values can be entered in this field. Clicking on the gear icon at the right of the destination IP Address field will reveal a dropdown menu to help with this process. The menu allows the selection of a particular interface or subnet. (Note that Mbox Remote must be in a Live Editing session to view the available interfaces or subnets. Refer to [“Live Editing”](#) on page 58.)

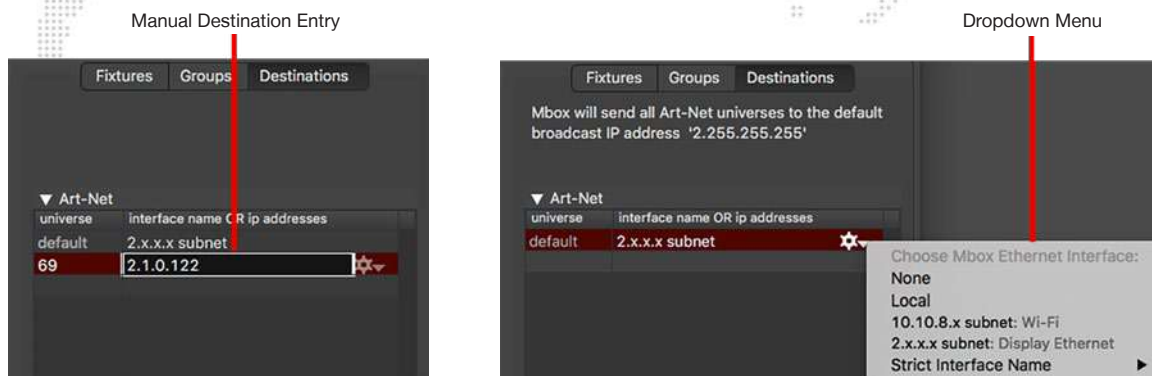

- + **Unicast IP Address** - Enter a static IP Address (e.g., 2.23.45.136) to send all data for that destination to one single IP Address. Optionally, one destination's data can be sent to up to four individual unicast IP addresses by separating several IP addresses with a "+" when entering them. (e.g., 2.23.45.136+2.23.67.123)
- + **Subnet Broadcast IP Address** - Enter a subnet broadcast IP Address (e.g., 2.255.255.255) that matches the subnet broadcast IP address of one ethernet interface on the computer. The dropdown menu can be used to simplify this process by displaying the available interfaces with their subnet broadcast address. Rather than having to enter the subnet broadcast address manually, just select it from the menu.
- + **Strict Interface Name** - Enter the exact name of the ethernet interface on the Mbox computer that the data should be sent from. The data will automatically be sent to the IP address matching the subnet broadcast IP address for that interface. (e.g. if the interface has an IP of 2.0.0.1 and a subnet mask of 255.255.0.0 then the data will be sent to 2.0.255.255)

IMPORTANT! For KiNET you should always use a static IP address!


The example below shows the correct way to enter the destination for the fixtures patched to device 303, port 1.

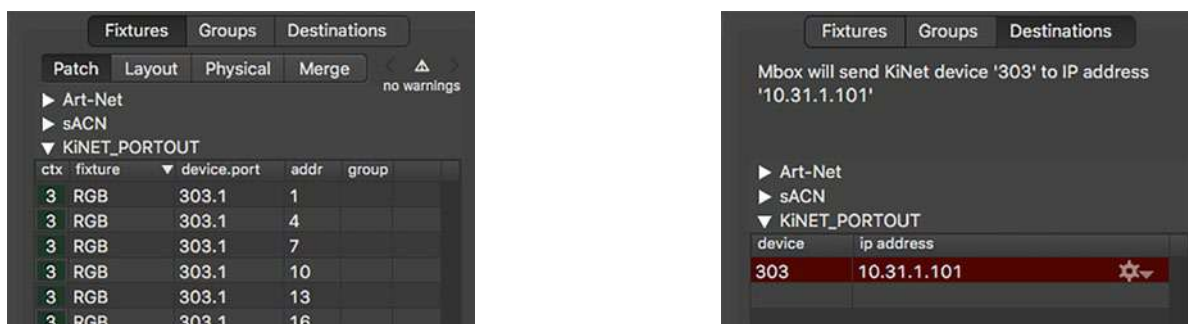

Destination IP Addressing

The configuration of the ethernet interface on the Mbox computer and the destination IP address on the Destinations tab of the fixture table should be coordinated. Destination IP addresses determine how the outgoing pixel mapping packets are addressed, and also by inference which ethernet interface on the computer they will be output from. (Refer to [“Appendix A. Mbox Networking Guidelines”](#) on page 139 for more detailed information.)

If there are two ethernet interfaces on the computer, it may be desirable to receive Art-Net or sACN to control Mbox on one interface and to then output pixel mapping data from the other interface. In this case, the two interfaces must be on separate subnets to ensure that Mbox can determine which interface to use for output. If a broadcast IP address is used for an Art-Net destination, Mbox will broadcast pixel map Art-Net using that broadcast address.

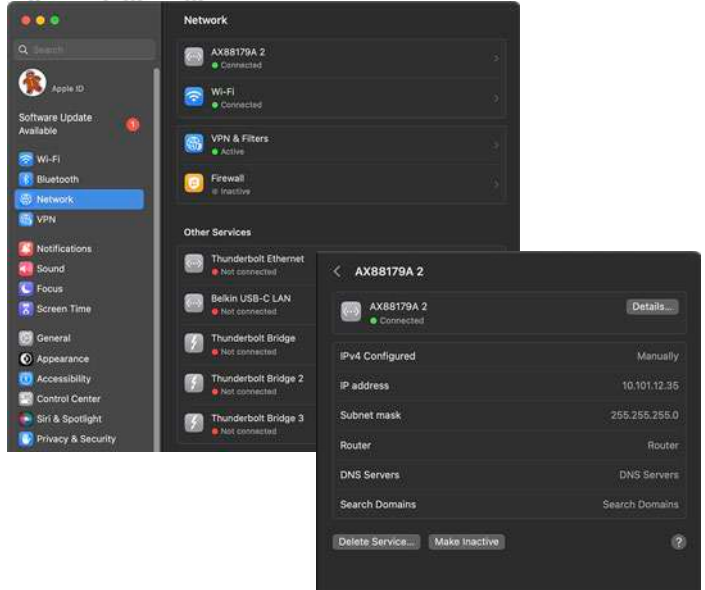

CAUTION! While many Art-Net devices use an IP address of 2.2.2.2 and subnet mask of 255.0.0.0, some can use other IP addresses or subnet masks. Don't assume that setting the Mbox's IP address and subnet mask to a 2.2.2.2/8 scheme will work, always check!

In cases where the Mbox computer is connected to ArtPOLL-compliant devices, those devices can request that Mbox unicast specific universes to the IP Address for those devices. However, if more than four devices respond to an ArtPOLL requesting the same universe, that universe will be broadcast instead of being unicast.

Some Art-Net devices do not respond to ArtPOLL requests and should always receive broadcast data. If the system includes both ArtPOLL-compliant and non-compliant devices, and these devices are required to receive the same universe(s), the default action of Mbox will be to unicast the data to the ArtPOLL-compliant devices only. At which point the non-compliant devices would not receive the Art-Net. In such cases, ArtPOLL should be disabled by checking the "ArtPOLL Disable" checkbox on the Preferences tab followed by performing a rescan in Mbox.

Suggested Ethernet Setup for Art-Net Output using two interfaces:

- + Interface 1 (receiving Art-Net for control) - IP=2.1.0.123 Subnet Mask=255.255.0.0
- + Interface 2 (sending pixel mapping Art-Net) - IP=2.0.0.123 Subnet Mask = 255.0.0.0
- + Pixel-map destination IP address for default destination - 2.255.255.255 or Ethernet 2

Example Ethernet Setup for sACN Output (to ETC Net3 device, using ETC's suggested addressing for media servers):

- + Interface 1 (receiving Art-Net for control) - IP=2.0.0.123 Subnet Mask=255.0.0.0
- + Interface 2 (sending pixel mapping sACN) - IP=10.101.130.123 Subnet Mask = 255.255.0.0
- + Pixel-map destination IP address for default sACN destination - 10.101.255.255 or Ethernet 2

Example Ethernet Setup for KiNET Output:


- + Interface 1 (receiving Art-Net for control) - IP=2.0.0.123 Subnet Mask=255.0.0.0
- + Interface 2 (sending pixel mapping KiNET) - IP=10.0.0.123 Subnet Mask = 255.0.0.0
- + Pixel-map destination IP addresses are all unicast

The above setups ensure that the computer can receive Art-Net on the first interface, and that it will also send pixel mapping output from the second interface. The key factors being the use of the correct IP address for the interface in question, and the “coordination” between the subnet mask of the second interface and the destination broadcast IP address for the pixel mapping data. These are only a few of many possible IP address/subnet mask configurations that will work. Depending on your requirements and other devices on the network, you may require different settings. Refer to [“Appendix A. Mbox Networking Guidelines”](#) on page 139 for more information on subnet masks.

Note: It is possible to receive control data and output pixel mapping data from the same interface on the computer. This may be desirable due to the control data distribution required for the show. When using the same interface for input and output, take care that network bandwidth is not exceeded and that the control input to Mbox is not affected. Keep in mind the IP address/subnet mask setup of the single interface must work for both input and output devices.


CAUTION! The pixel map level parameter on the Master fixture masters the overall output levels generated when pixel mapping. If this parameter is at a level of 0, then Mbox will be outputting valid pixel mapping data, but all levels will be suppressed. In addition, the Global Master control parameter can be used together with the Global Master Control Selector parameter to enable/disable all pixel mapping output or to force all fixtures using the mask property to output zero.

For most situations, using the default destination and choosing a subnet entry that matches the desired output interface is the best choice:

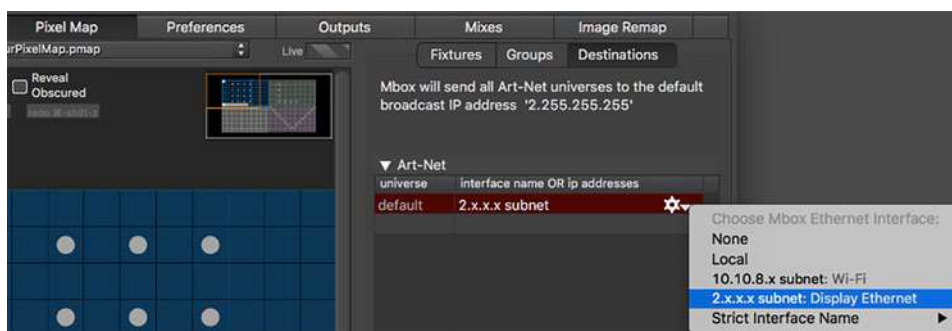


Destination Guidelines:

- + An active protocol must have at least one destination, but may have more than one destination.
- + Art-Net and sACN can have a default destination. All universes of that protocol that lack a specific destination are sent to the default destination.
- + For Art-Net, the use of the default destination means that an ArtPoll request will be sent out if ArtPoll is not disabled. ArtPoll may be disabled using the checkbox on Mbox's Preferences tab.
 - If an ArtPoll response is received from a device, then that device may receive unicast Art-Net transmissions for the universes that it requests.
 - Universes not requested by ArtPoll compatible devices will be broadcast to the specified subnet.
 - If no ArtPoll responses are received, all data will be broadcast to the specified subnet.
 - If more than four ArtPoll responders request the same universe, that universe will be broadcast to the specified subnet, rather than unicast to each requester.
- + For sACN, the use of the default destination means that multicast will be used.
 - Each universe is sent to a specific multicast IP Address.
 - Receiving devices listen for data on the appropriate multicast addresses.

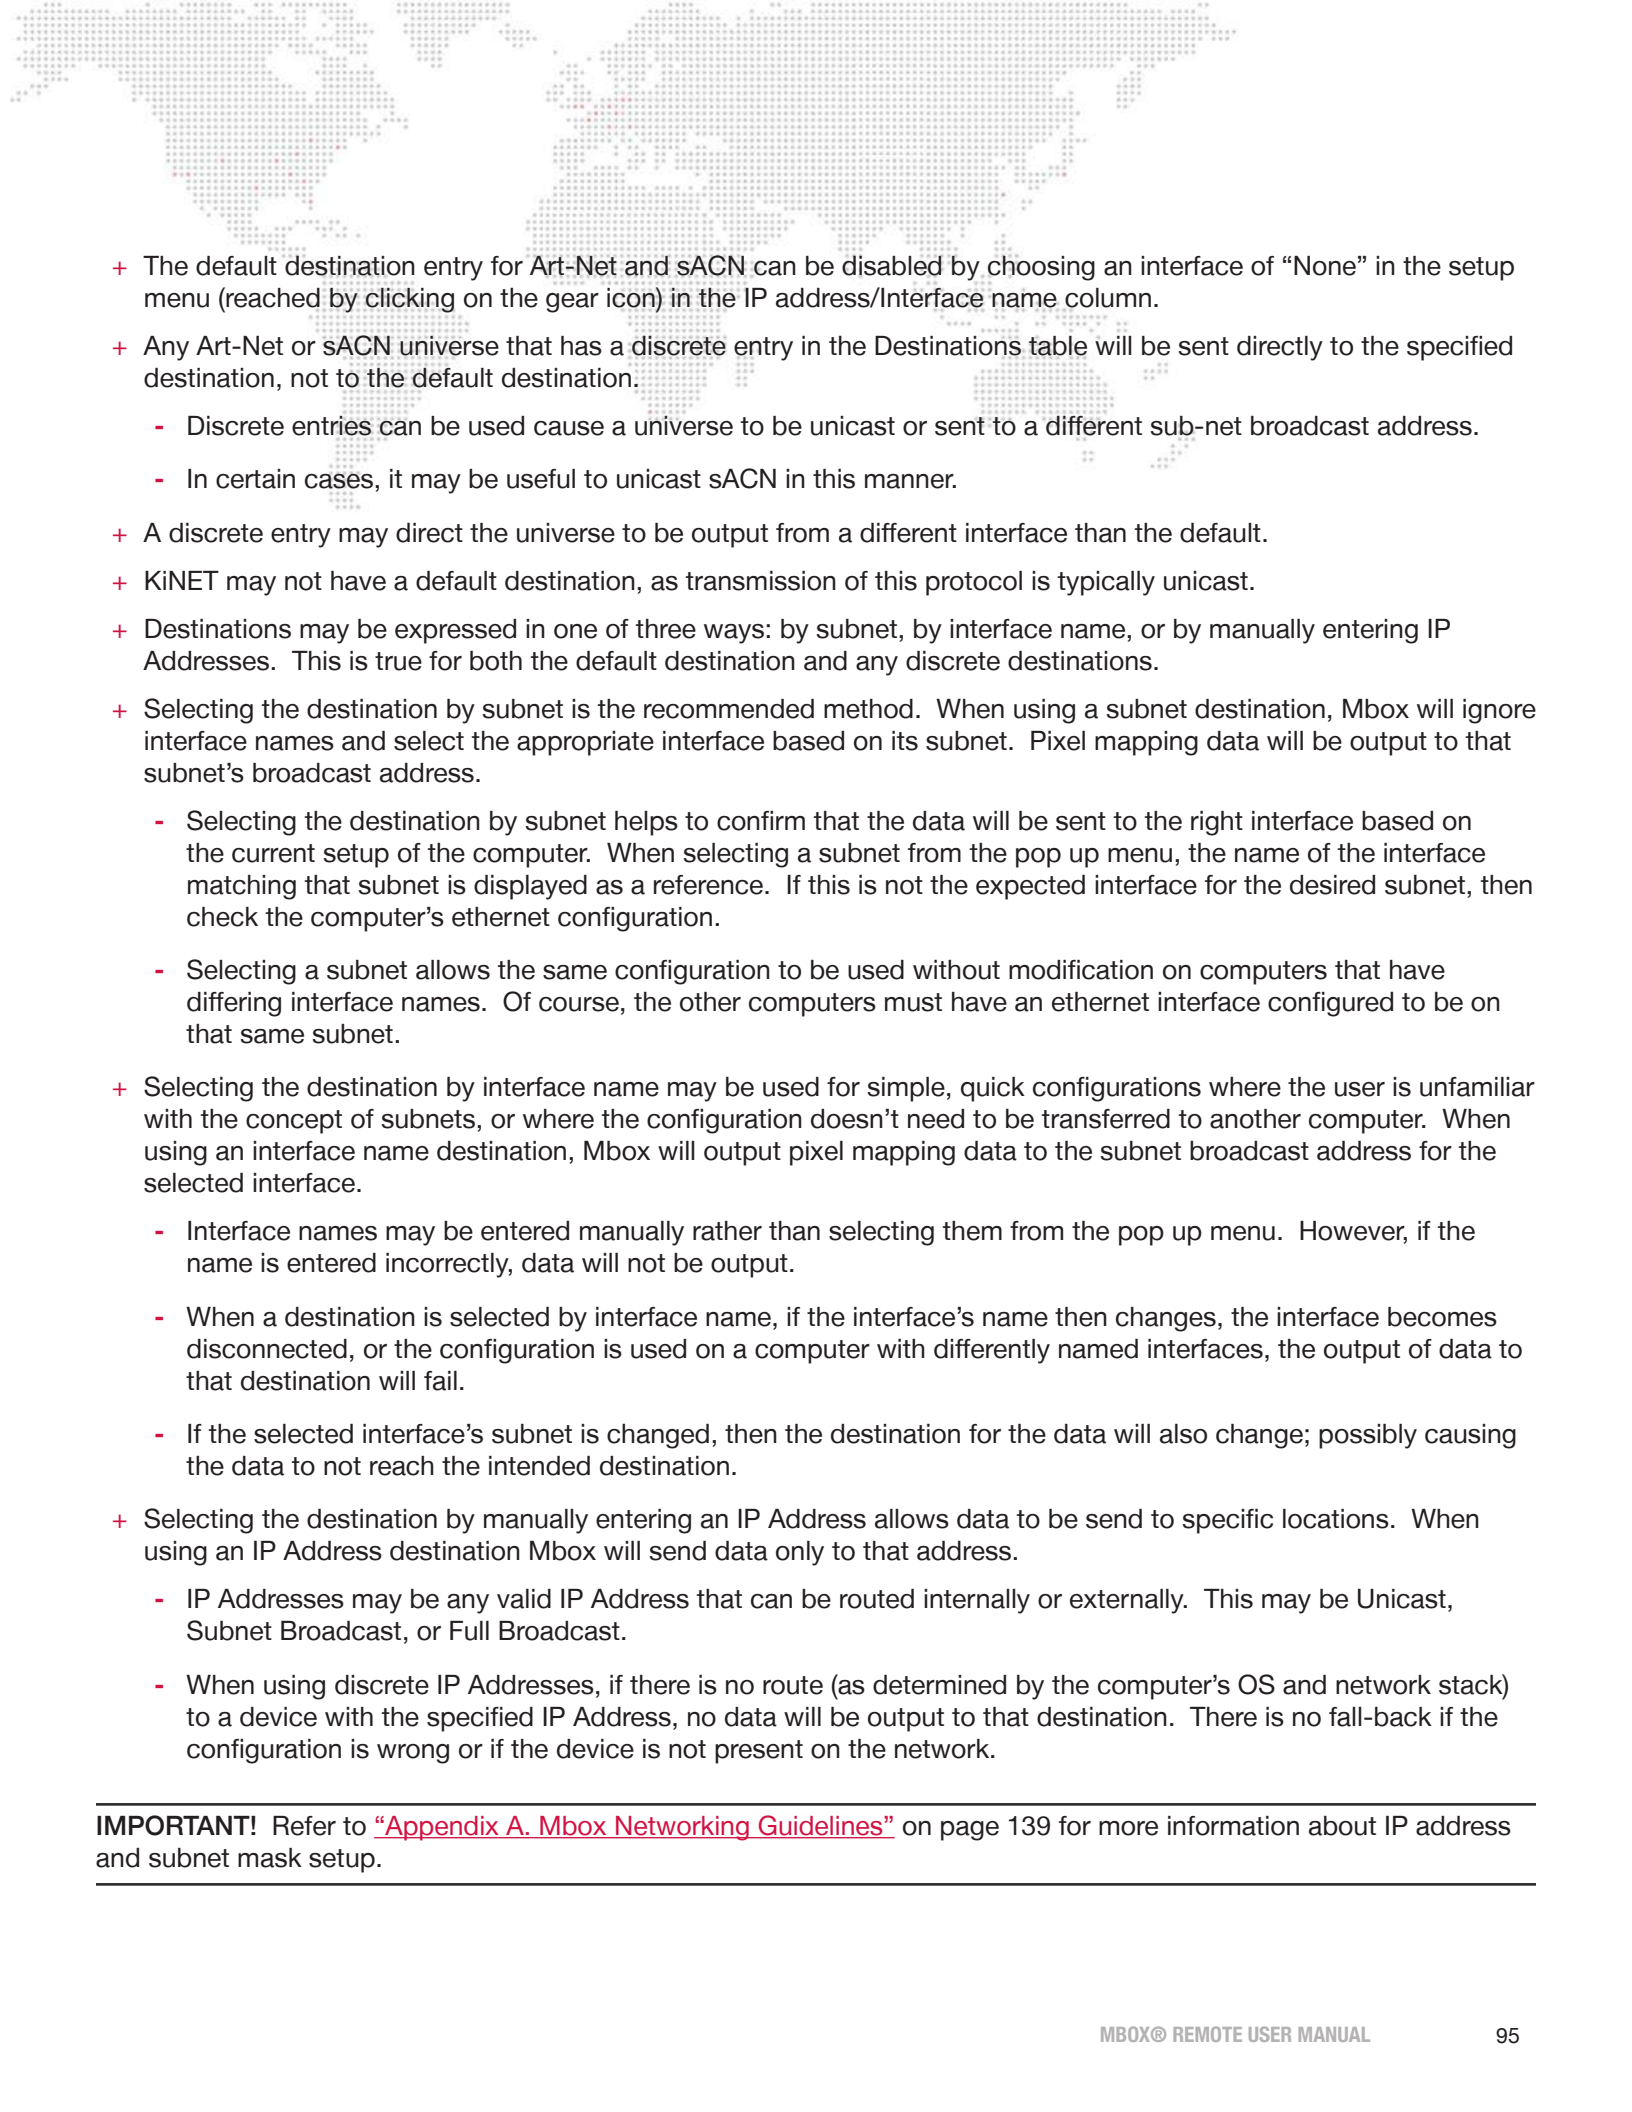- 
- + The default destination entry for Art-Net and sACN can be disabled by choosing an interface of “None” in the setup menu (reached by clicking on the gear icon) in the IP address/Interface name column.
 - + Any Art-Net or sACN universe that has a discrete entry in the Destinations table will be sent directly to the specified destination, not to the default destination.
 - Discrete entries can be used cause a universe to be unicast or sent to a different sub-net broadcast address.
 - In certain cases, it may be useful to unicast sACN in this manner.
 - + A discrete entry may direct the universe to be output from a different interface than the default.
 - + KiNET may not have a default destination, as transmission of this protocol is typically unicast.
 - + Destinations may be expressed in one of three ways: by subnet, by interface name, or by manually entering IP Addresses. This is true for both the default destination and any discrete destinations.
 - + Selecting the destination by subnet is the recommended method. When using a subnet destination, Mbox will ignore interface names and select the appropriate interface based on its subnet. Pixel mapping data will be output to that subnet’s broadcast address.
 - Selecting the destination by subnet helps to confirm that the data will be sent to the right interface based on the current setup of the computer. When selecting a subnet from the pop up menu, the name of the interface matching that subnet is displayed as a reference. If this is not the expected interface for the desired subnet, then check the computer’s ethernet configuration.
 - Selecting a subnet allows the same configuration to be used without modification on computers that have differing interface names. Of course, the other computers must have an ethernet interface configured to be on that same subnet.
 - + Selecting the destination by interface name may be used for simple, quick configurations where the user is unfamiliar with the concept of subnets, or where the configuration doesn’t need to be transferred to another computer. When using an interface name destination, Mbox will output pixel mapping data to the subnet broadcast address for the selected interface.
 - Interface names may be entered manually rather than selecting them from the pop up menu. However, if the name is entered incorrectly, data will not be output.
 - When a destination is selected by interface name, if the interface’s name then changes, the interface becomes disconnected, or the configuration is used on a computer with differently named interfaces, the output of data to that destination will fail.
 - If the selected interface’s subnet is changed, then the destination for the data will also change; possibly causing the data to not reach the intended destination.
 - + Selecting the destination by manually entering an IP Address allows data to be send to specific locations. When using an IP Address destination Mbox will send data only to that address.
 - IP Addresses may be any valid IP Address that can be routed internally or externally. This may be Unicast, Subnet Broadcast, or Full Broadcast.
 - When using discrete IP Addresses, if there is no route (as determined by the computer’s OS and network stack) to a device with the specified IP Address, no data will be output to that destination. There is no fall-back if the configuration is wrong or if the device is not present on the network.

IMPORTANT! Refer to [“Appendix A. Mbox Networking Guidelines”](#) on page 139 for more information about IP address and subnet mask setup.


Pixel Map Network Sources and Destinations example diagram:

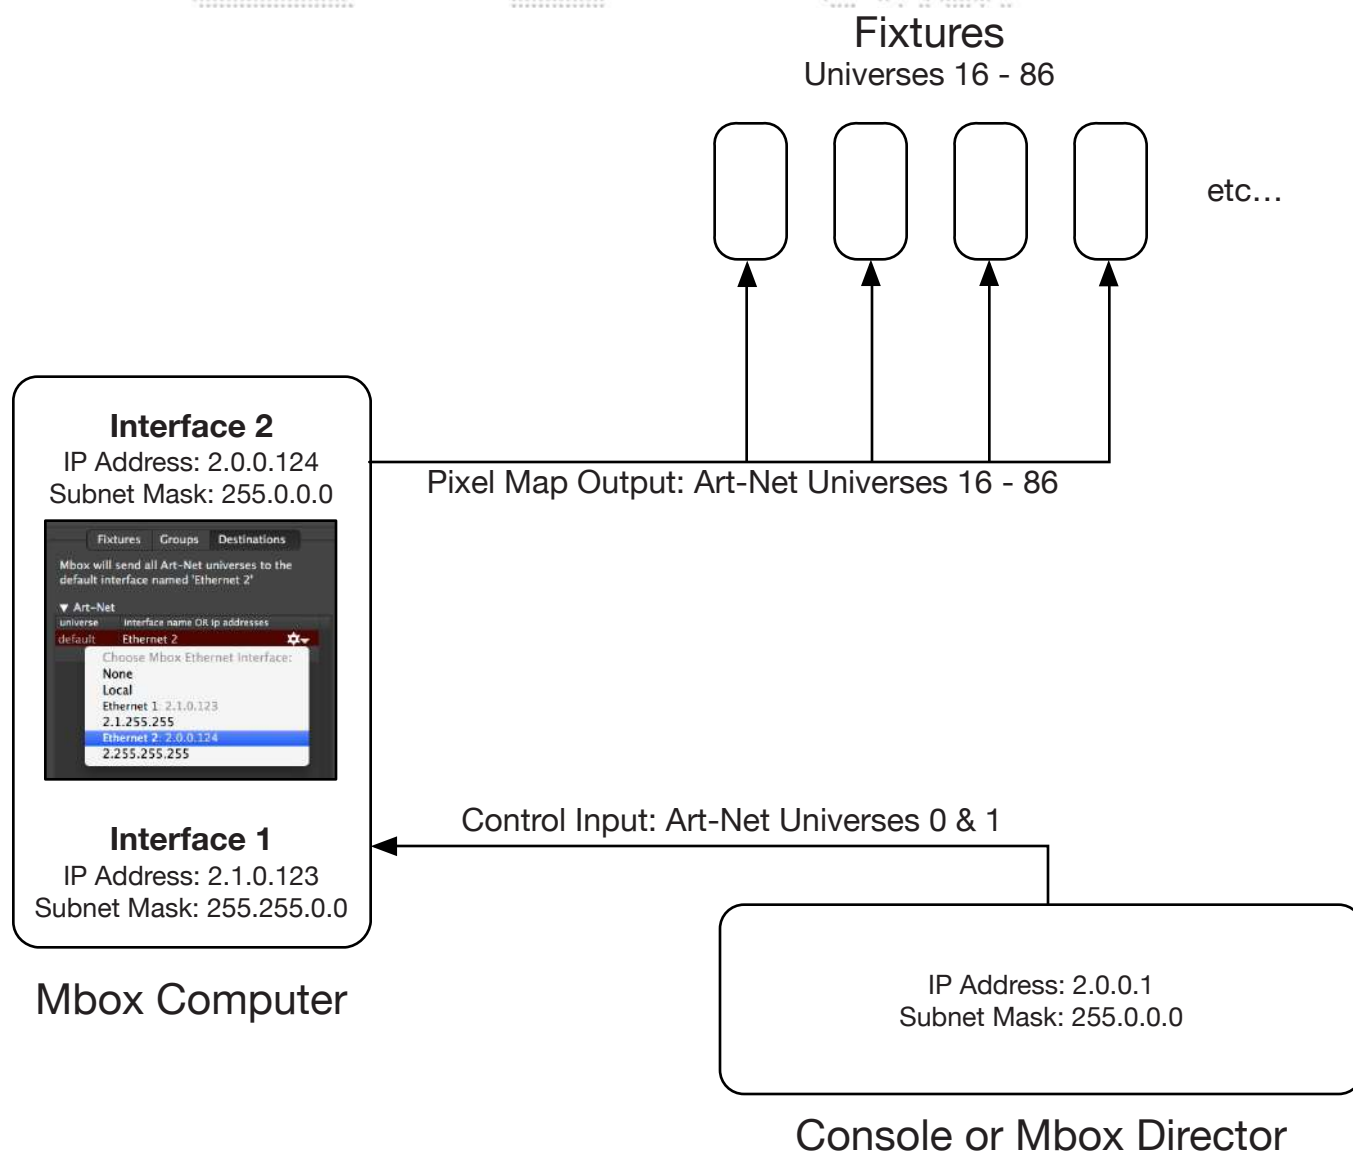



Background Image

A background image can be added to a context in order to better visualize the pixel mapping configuration. The background type can be a still image from a file on disk, a live stream image from Mbox, or an AVFoundation input like a USB camera or virtual camera plugin.

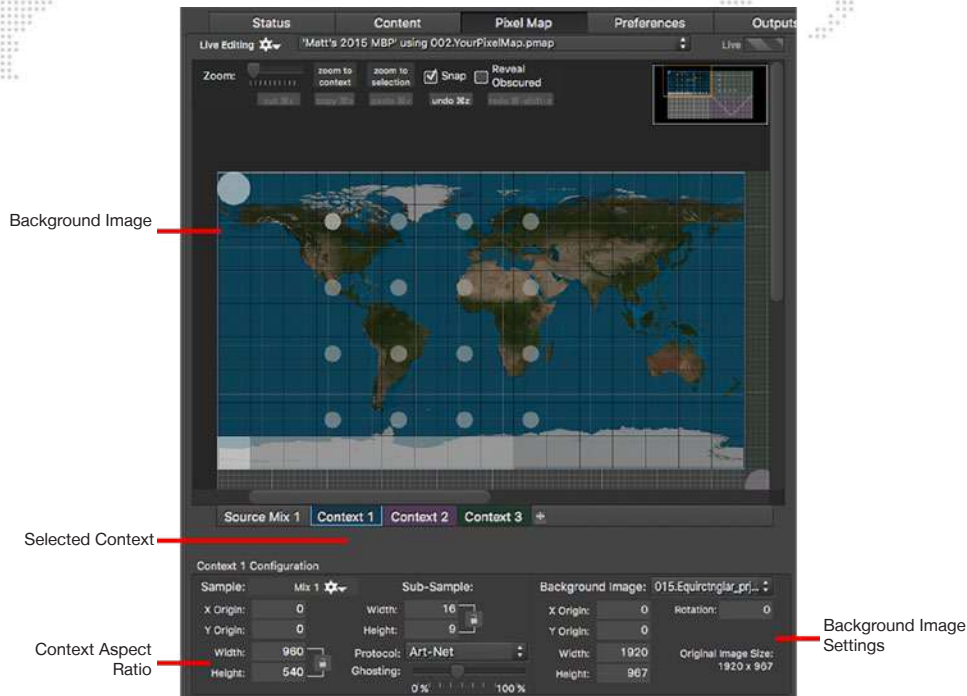

Still Image Backgrounds


A still image must be in JPEG or a PNG format (PNG images can have an alpha channel). The image is imported and saved within the pixel map (.pmap) configuration file, so it stays with the file. The pixel mapping file size can get large if numerous background images are used, and this affect transfer times when opening or saving the file. There is a pop-up menu option to remove unused image files if file size becomes an issue - see instructions on page 100.

The background image has X and Y origin values to allow placement in the correct position within the context. The image can be rotated by entering a value in the Rotation field. The image also has width and height settings to designate which portion of the image will be displayed on the context.

The designated portion of the background image will be force-fit onto the context. Therefore, if the aspect ratios of that portion and the context do not match, the image will not be displayed at the correct aspect ratio. For best results, the background image needs to be the same aspect ratio as the context, or the background image's width and height need to be adjusted to match the context's aspect ratio. For example, if a background image is 1280 x 1024 but the context is 1920 x 1080, the background height could be reduced to 720 (clipping the bottom of the image), or the background width could be increased to 1820 (adding blank space on the right side of the image) to correct the aspect ratio.

Live Stream Backgrounds

A live stream image comes from the connected Mbox during a live session with the Mbox Remote application. (Refer to ["Live Editing"](#) on page 58 for instructions on this type of session.) In this case, the live stream will show the moving imagery that Mbox is generating for the area of the source that the context is sampling. The live stream will be pixelated to match the sub-sampling the context performs upon the source's imagery.

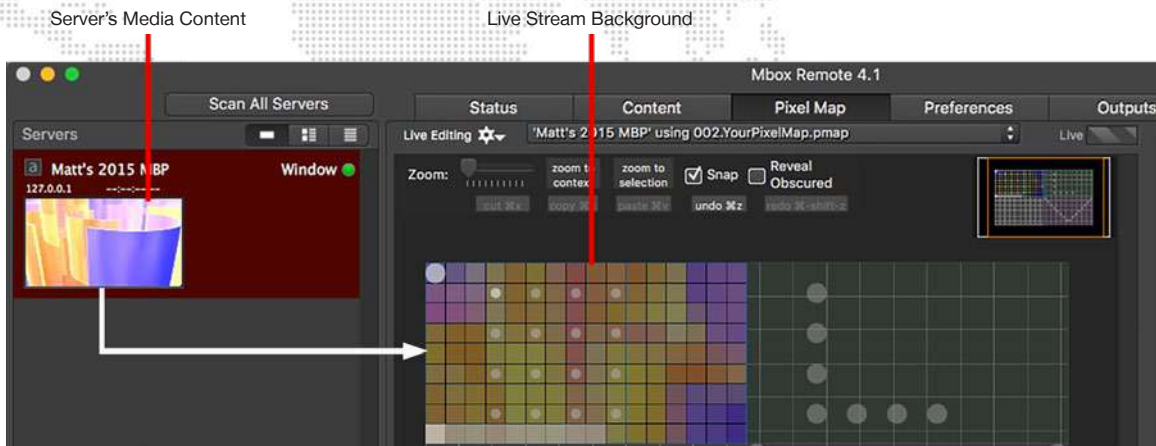


AVFoundation Input Backgrounds

A live/virtual camera input image can be used as the background image. Cameras must be AVFoundation-compatible (most USB cameras) connected directly to the computer running Mbox Remote. Virtual camera plugins must appear as a camera to the OS to be visible. The input will be pixelated in the same manner as a live stream.


Ghosting

The Ghosting control on each context can be used to adjust the visibility of patched fixtures in a context against the sub-sampled background image for the context. The ghosting level will adjust the balance between the brightness of patched fixtures against the background image.

To set a background image:

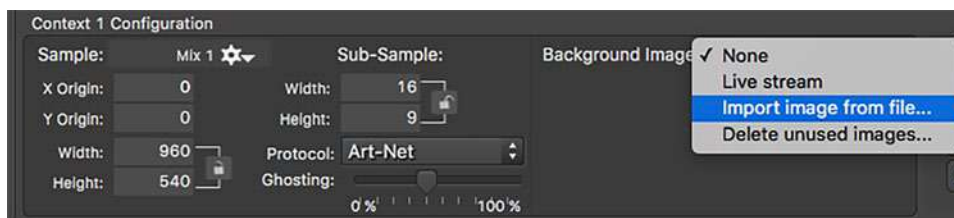

Step 1. In the context configuration area, click on the Background Image pop-up menu.

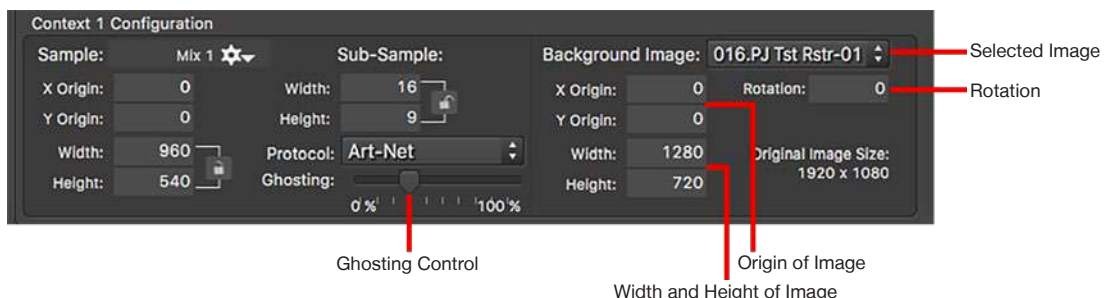

Step 2. Select Live stream, or Import image from file...

Step 3. Configure background image settings as required.

Note: When using Rotation, the background image is rotated around its X and Y origin rather than around its center. The X and Y origins may need to be set to negative numbers in order for the entire background image to be fully visible.


Step 1. Adjust the ghosting level to change the brightness of patched fixtures against the background image.

Deleting unused background images

If the pixel mapping file contains unused still images, these can be deleted to reduce overall file size.

Step 1. In the context configuration area,, click on the Background Image pop-up menu.

Step 2. Select Delete unused images. All unused images will be deleted from the file.

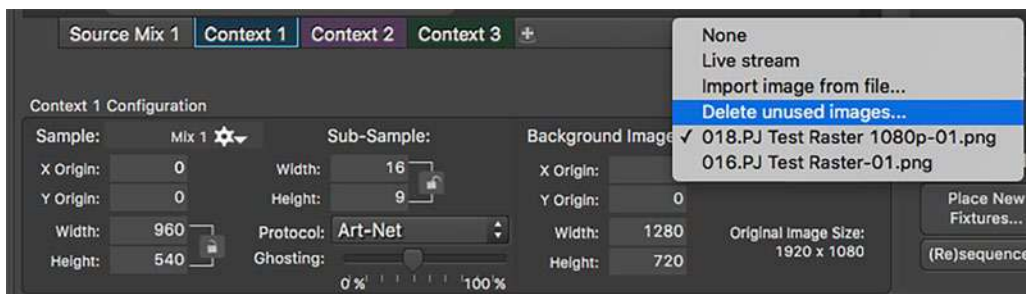

Fixture Profiles

The fixture reference model used with Mbox's pixel mapping allows for rapid global changes to all patched fixtures of one type. Mbox Remote provides a selection of built-in fixture profiles, as well as the ability to create custom fixture profiles. Custom fixture profiles are saved in the pixel mapping configuration (.pmap) file, while built-in profiles are not saved since they are resident in the application itself.

With the Mbox fixture reference model, all patched fixtures reference profile-level fixture information for data except for:

- + Custom name, x/y position in context, rotation, universe, address, and group.
- + Overrides.

Changes made to profile-level data will sweep to all fixtures of the same type unless fixture overrides have been applied. Profile-level data includes level, mask, refresh, slew, CIE DMX Factor, CIE Reference White, CIE Linearization Function, and base pixel data (shape, type, pixfill). Some of this data can be overridden on a per-fixture basis, along with parked pixels. These overrides may be cleared at any time, reverting the fixture back to the profile defaults.


Creating Custom Fixtures


Mbox Remote provides the ability to create both simple and complex fixture types beyond simple arrays.

Guidelines:

- + Custom fixtures have pixels, which generate output based upon the onscreen imagery color and the type of pixel.
- + Custom fixtures can have up to 2048 channels total.
- + Custom fixtures can have extra channels. These extra channels will output a level of zero unless they are assigned static output levels using the Parked Pixels feature or the Merge feature is being used with pass-through data.

Custom fixtures are created using the Create Fixture Profile window.

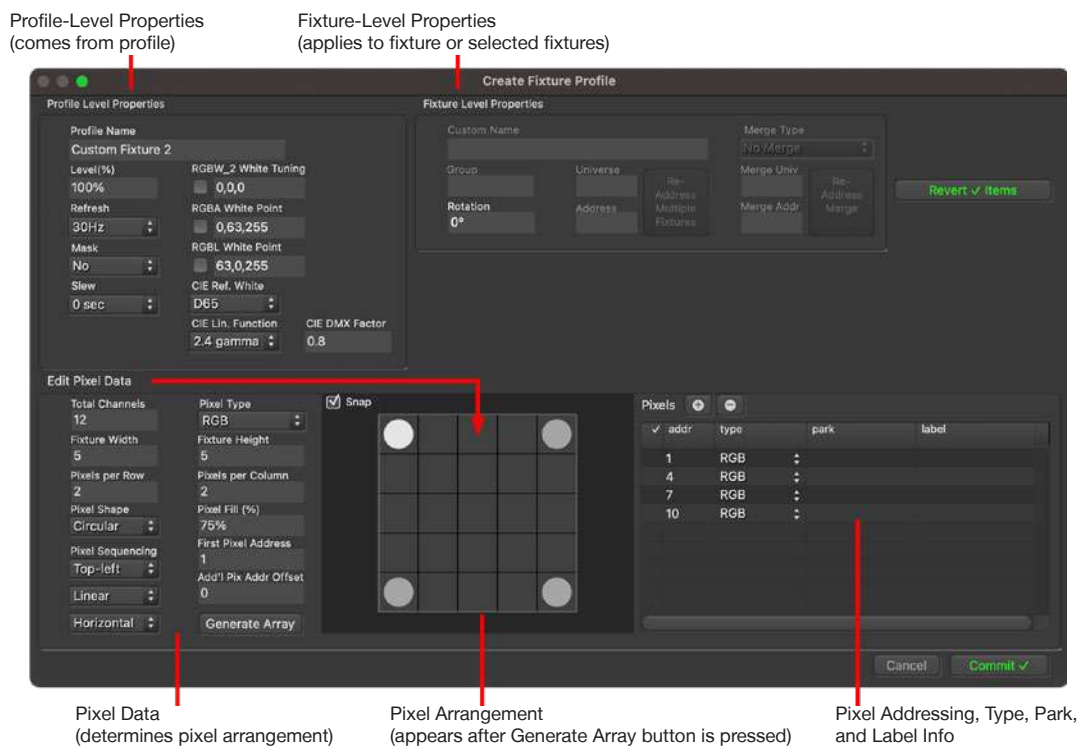

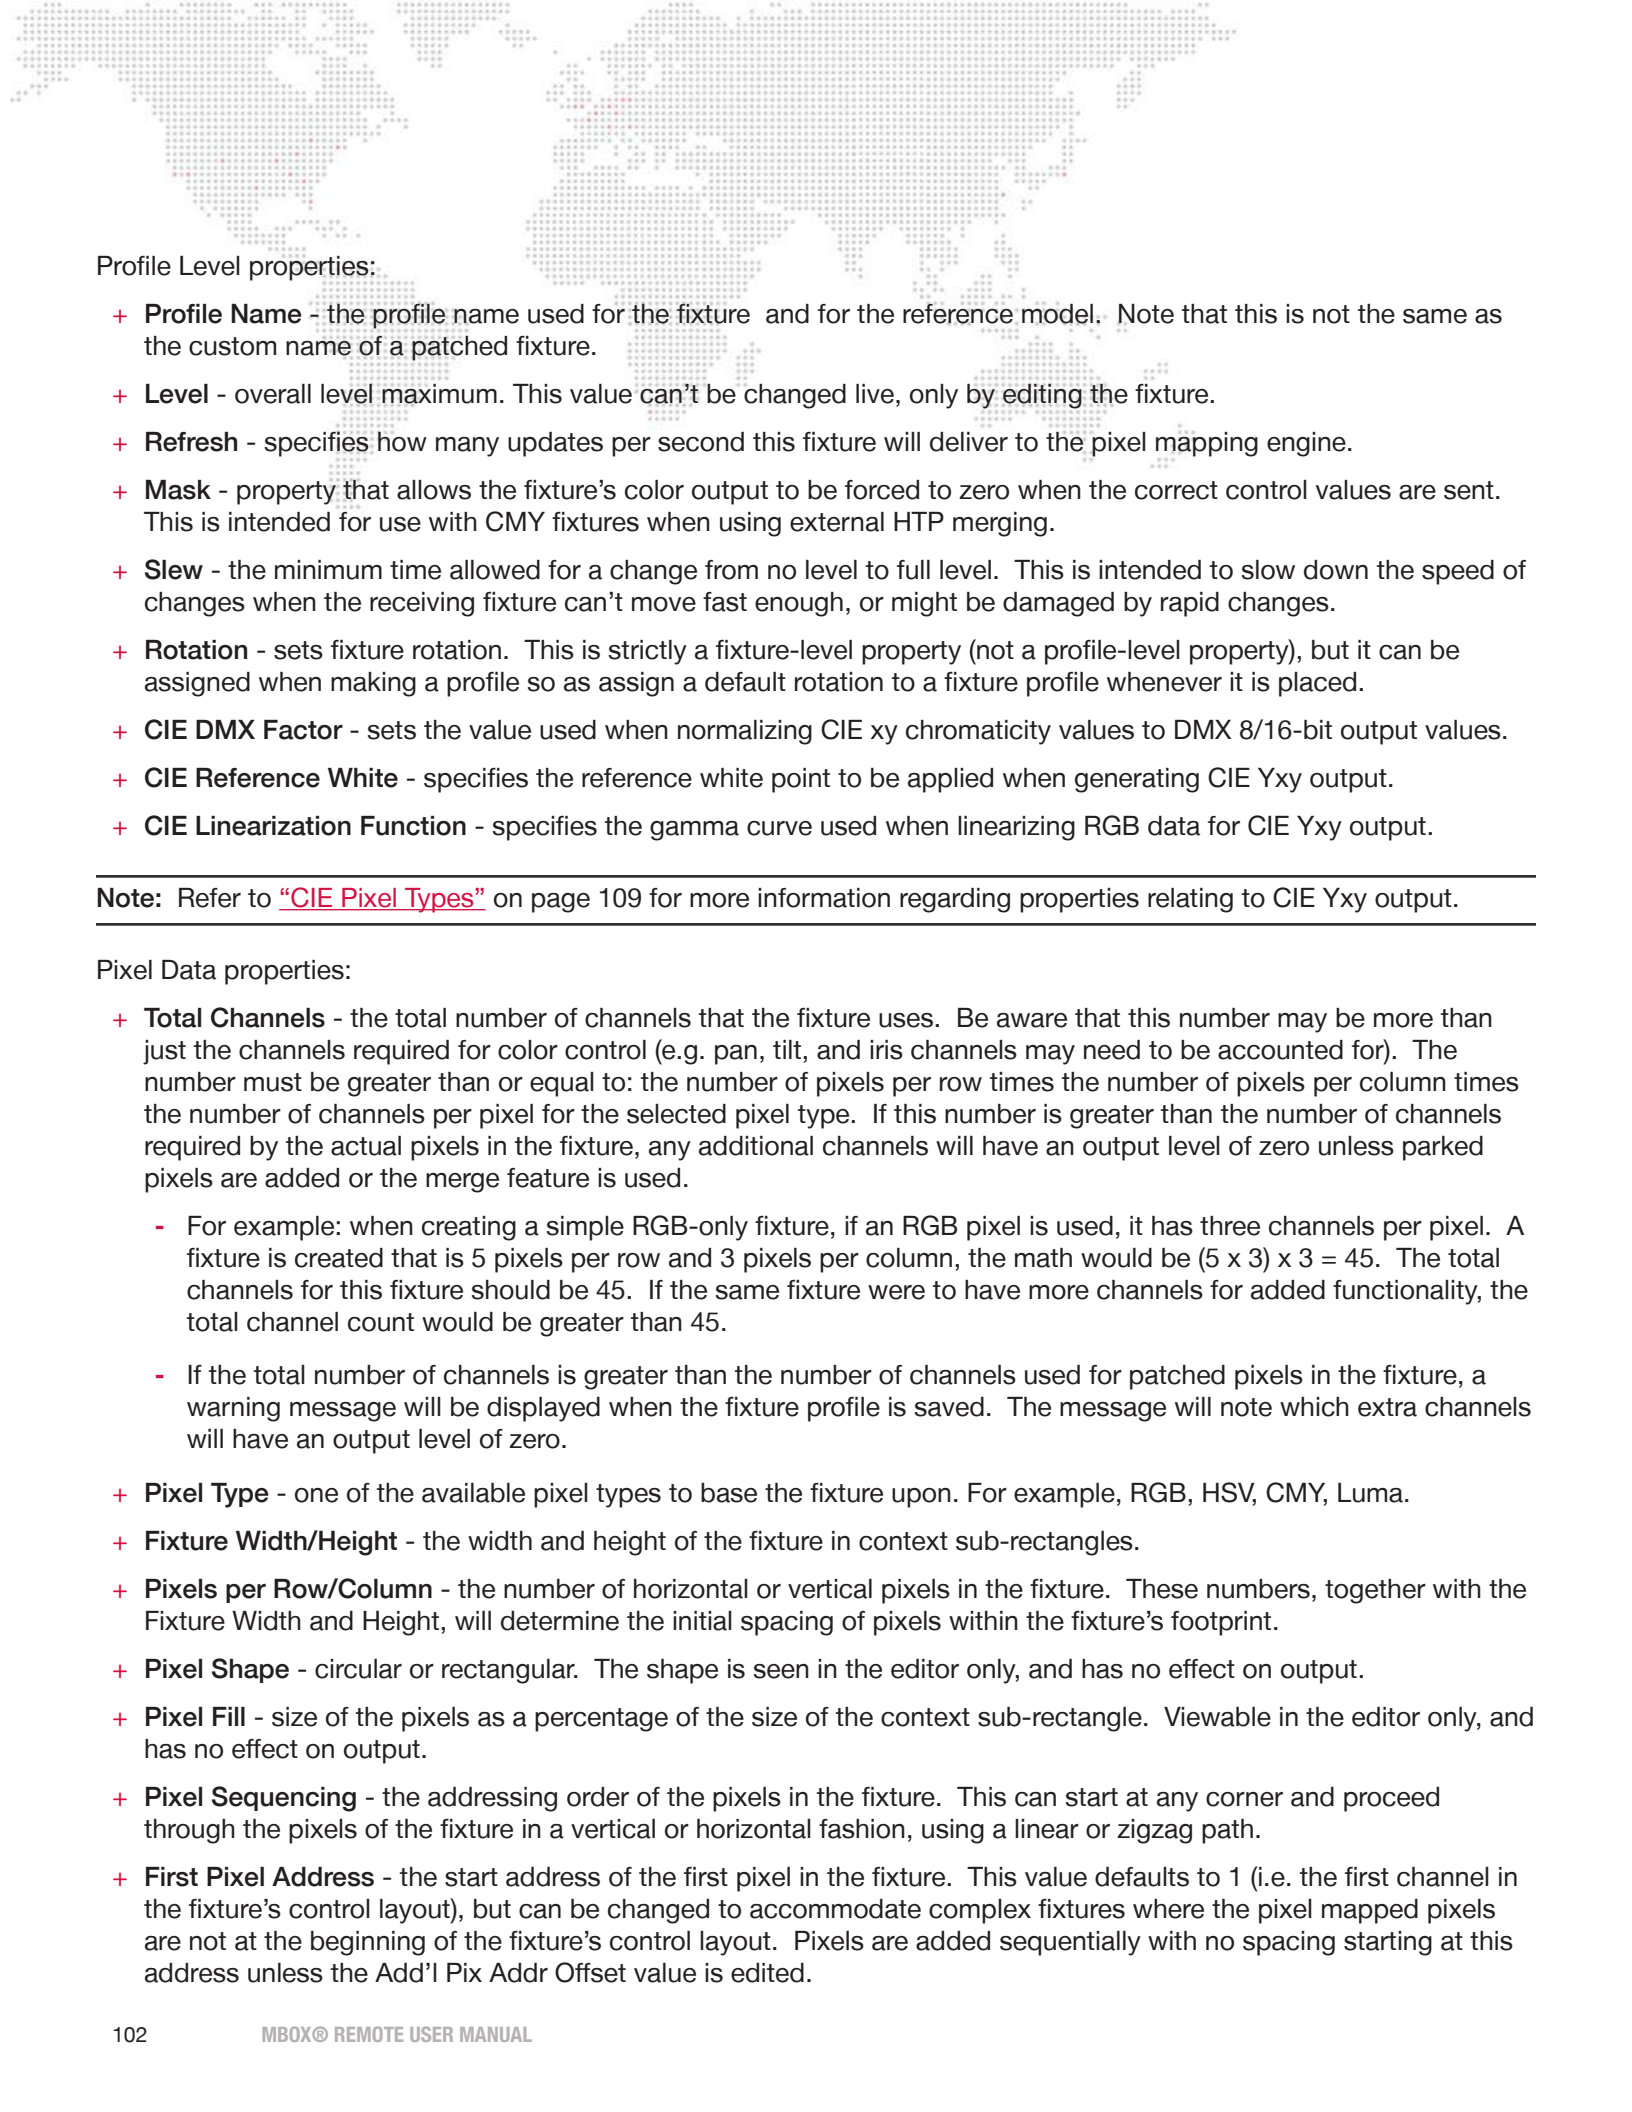

Profile Level properties:

- + **Profile Name** - the profile name used for the fixture and for the reference model. Note that this is not the same as the custom name of a patched fixture.
- + **Level** - overall level maximum. This value can't be changed live, only by editing the fixture.
- + **Refresh** - specifies how many updates per second this fixture will deliver to the pixel mapping engine.
- + **Mask** - property that allows the fixture's color output to be forced to zero when the correct control values are sent. This is intended for use with CMY fixtures when using external HTP merging.
- + **Slew** - the minimum time allowed for a change from no level to full level. This is intended to slow down the speed of changes when the receiving fixture can't move fast enough, or might be damaged by rapid changes.
- + **Rotation** - sets fixture rotation. This is strictly a fixture-level property (not a profile-level property), but it can be assigned when making a profile so as assign a default rotation to a fixture profile whenever it is placed.
- + **CIE DMX Factor** - sets the value used when normalizing CIE xy chromaticity values to DMX 8/16-bit output values.
- + **CIE Reference White** - specifies the reference white point to be applied when generating CIE Yxy output.
- + **CIE Linearization Function** - specifies the gamma curve used when linearizing RGB data for CIE Yxy output.

Note: Refer to [“CIE Pixel Types”](#) on page 109 for more information regarding properties relating to CIE Yxy output.


Pixel Data properties:

- + **Total Channels** - the total number of channels that the fixture uses. Be aware that this number may be more than just the channels required for color control (e.g. pan, tilt, and iris channels may need to be accounted for). The number must be greater than or equal to: the number of pixels per row times the number of pixels per column times the number of channels per pixel for the selected pixel type. If this number is greater than the number of channels required by the actual pixels in the fixture, any additional channels will have an output level of zero unless parked pixels are added or the merge feature is used.
 - For example: when creating a simple RGB-only fixture, if an RGB pixel is used, it has three channels per pixel. A fixture is created that is 5 pixels per row and 3 pixels per column, the math would be $(5 \times 3) \times 3 = 45$. The total channels for this fixture should be 45. If the same fixture were to have more channels for added functionality, the total channel count would be greater than 45.
 - If the total number of channels is greater than the number of channels used for patched pixels in the fixture, a warning message will be displayed when the fixture profile is saved. The message will note which extra channels will have an output level of zero.
- + **Pixel Type** - one of the available pixel types to base the fixture upon. For example, RGB, HSV, CMY, Luma.
- + **Fixture Width/Height** - the width and height of the fixture in context sub-rectangles.
- + **Pixels per Row/Column** - the number of horizontal or vertical pixels in the fixture. These numbers, together with the Fixture Width and Height, will determine the initial spacing of pixels within the fixture's footprint.
- + **Pixel Shape** - circular or rectangular. The shape is seen in the editor only, and has no effect on output.
- + **Pixel Fill** - size of the pixels as a percentage of the size of the context sub-rectangle. Viewable in the editor only, and has no effect on output.
- + **Pixel Sequencing** - the addressing order of the pixels in the fixture. This can start at any corner and proceed through the pixels of the fixture in a vertical or horizontal fashion, using a linear or zigzag path.
- + **First Pixel Address** - the start address of the first pixel in the fixture. This value defaults to 1 (i.e. the first channel in the fixture's control layout), but can be changed to accommodate complex fixtures where the pixel mapped pixels are not at the beginning of the fixture's control layout. Pixels are added sequentially with no spacing starting at this address unless the Add'l Pix Addr Offset value is edited.

- + **Add'l Pix Addr Offset** - additional channel “padding” to be inserted between each pixel in the fixture. For example, a simple RGB fixture could start at address 11 and use pixel addresses 11, 14, 17, and so on. With an additional offset value of 2, and starting at address 11, the fixture’s pixels would use addresses 11, 16, 21, and so on.


To create a new fixture:

Step 1. On the Fixture Profile pop-up menu, select Create New Profile. The Create Fixture Profile window will open.

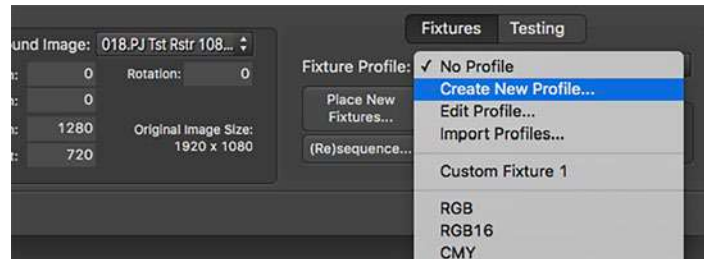

Step 2. On the Create Fixture Profile window, enter necessary values/properties for the fixture profile. (Refer to the explanations and guidelines on previous pages.)

Step 3. Enter necessary values/properties for the pixels in the fixture. (Refer to the explanations and guidelines on previous pages) All active pixels must be of the same type to begin with, but can be changed in a later step (see below).

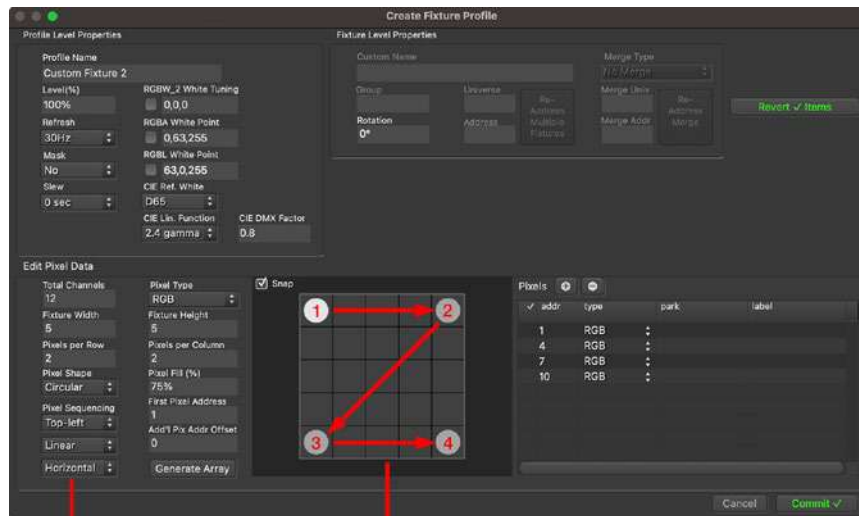


The sequencing pattern in the array is determined by the Pixel Sequence settings

Step 4. Click the Generate Array button to create the initial arrangement of pixels. Values can be changed and the array rebuilt at any time if the desired result is not achieved.

Note: Changes made in the property fields to the left of the grid require the Generate Array button to be pressed again to apply those changes

- Step 1. Once the initial array has been created, fixture and pixel properties can still be changed:
- The first pixel address can be changed. Modifying this value then clicking the Generate Array button changes the address of all pixels in the fixture.
 - The additional address offset between pixels can be changed. Modifying this value then clicking the Generate Array button changes the address of all pixels in the fixture.
 - Layout of pixels. Click and drag a pixel to move it to a new position on the grid. Pixels can snap to the grid or have arbitrary positions - check or uncheck the Snap-to-Grid checkbox for the desired mode.
 - Pixel addressing can be changed by directly editing the value in one pixel's addr field, or by selecting multiple pixels and then double-clicking on the addr field of one of the selected pixels to open the Re-Address Multiple Pixels window.
 - Pixel types can be changed for one or multiple selected pixels by clicking on the type pop-up.
 - Pixels (e.g. parked pixels or additional color pixels) can be added by clicking the [+] button. Pixels can be removed by selecting a pixel and clicking the [-] button.
 - Park values can be assigned (For instructions on park values, refer to [“Parked Pixels”](#) on page 111.)
 - Pixels can be given a label, which may be a useful reference as to the pixel's purpose, especially with profiles that have parked pixels.

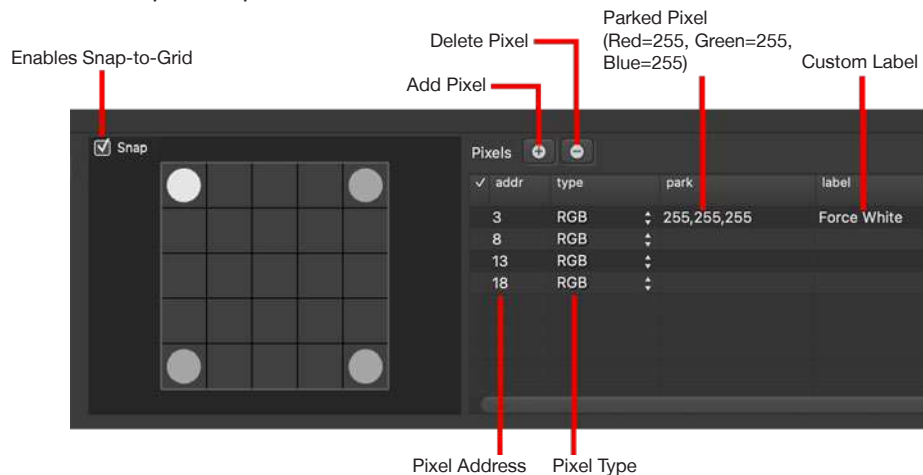

- Step 2. When finished editing, press the Commit button to accept the entered data and create the profile.


Fixtures That Span Output Universes

In Mbox versions prior to v5.1, pixel mapping fixture were not allowed to span universes. In other words, the maximum number of pixels a fixture could have was 512 (assuming they were single 8-bit pixels, like the Luma 709 pixel). Furthermore, when any fixture was patched, if all of the pixels for the fixture did not fit within one universe, all pixels that were not on the first universe would not create output data. The output of the fixture was clipped at the end of the universe. This method of operation meant that in order to have a single fixture span across two universes, the fixture itself (the profile) had to be split into two parts - the first part that would fit on the first universe and a second part that would not fit and which had to be placed onto the next universe. While it is possible to do this, it can become complicated and time-consuming if there are more than a few fixtures that need to be split in two. Therefore, in most cases it was easier/faster to place each fixture on its own universe (if it fit) or to patch all fixtures as single pixels rather than as longer sections having more than one pixel.


Because newer fixtures and devices allow the concept of a “fixture” to span across the boundary between one universe and another, Mbox v5.1 allows pixel mapping fixtures to span across multiple universes. This can be a complicated situation and there are limitations and guidelines for this process.

Guidelines for universe-spanning:

- + Fixtures can have up to 2048 addresses/channels which limits the fixture to 2048 pixels of a single 8-bit type.
- + Fixtures can have addresses on at most four consecutive universes, which equates to spanning up to three universe boundaries.
- + Any pixels that go beyond the 2048 address or four universe limits will have no output.
- + A fixture may be patched so that it spans universes, but **no individual pixel within any fixture is allowed to span universes**. This is of critical importance when patching fixtures and then understanding their output. Unless a fixture is made up entirely of single 8-bit pixels it is quite likely that a pixel could span universes if the fixture is patched at an address where a portion of the fixture spans the boundary to the next universe.
 - Fixture profiles should be created in the normal fashion, with sequential pixels, and do not need to take universe boundaries into account.
 - Fixtures may be patched to any starting address on a universe. All pixels for the fixture will generate output provided the fixture only requires, at most, four universes for output.
 - When Mbox is generating the pixel mapping output and it encounters a pixel that would span a universe boundary (based on that pixel's start address and number of addresses), that pixel's output is automatically moved, in its entirety, to the next universe. All subsequent pixels are shifted by the same number of addresses. This process will happen again if a pixel spans from the second to third universe, and/or from the third to the fourth.
 - For example: A fixture has a total of three 8-bit RGB pixels, each of which requires 3 addresses for output, nine addresses total. When this fixture is patched at an address of 504 on universe 17, all of the pixels for the fixture fit within universe 17.

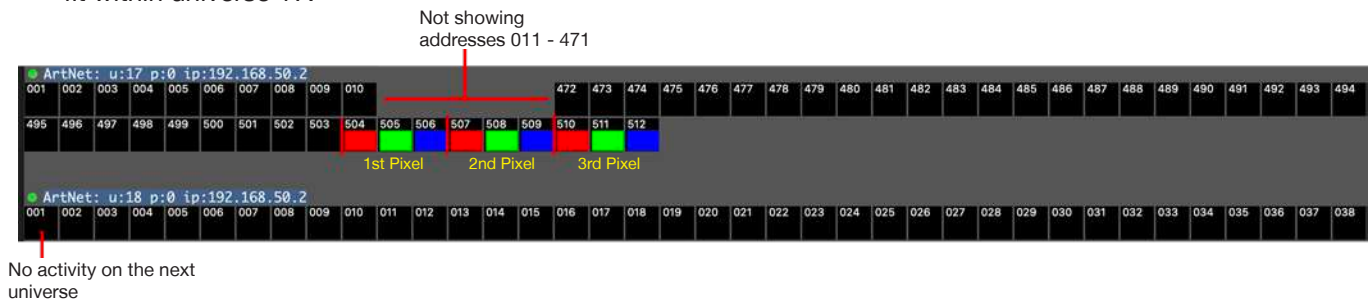

However, if this fixture is patched at an address of 505 on universe 17, only the fixture's first two pixels fit within universe 17. Therefore, the fixture's third pixel is moved to universe 18, where it receives an address of 1. As part of this move, the last two addresses of universe 17 are no longer used and will have no output.

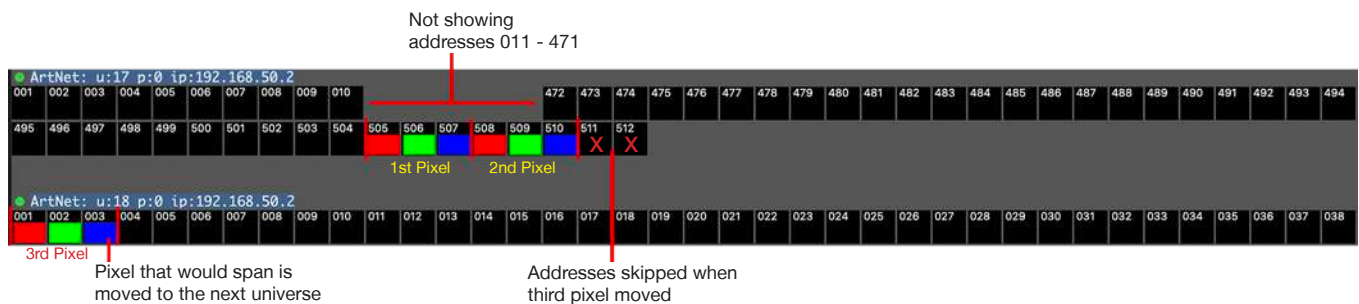

- The important consideration here is that although the pixels in the profile have sequential addresses, when the fixture is patched such that it overlaps a universe boundary, the addresses of individual pixels is changed. **This is not an error, and it happens automatically with no notification.**

- If a fixture has a sufficient number of pixels to cause it to span across more than one universe boundary additional pixels may be moved to avoid any pixel spanning the boundary between the second and third or third and fourth universes.

In the next example, a fixture with 96 16-bit RGB pixels (576 addresses) has been patched to universe 3, address 454. This means that the pixel that would naturally have an address of 508 would end up spanning the boundary between universe 3 and 4. Therefore, this pixel's address is changed to universe 4, address 1, and five addresses are skipped at the end of universe 3. In turn, this moves all the following pixels' addresses by the same amount, and at the end of universe 4, the pixel that would naturally start at address 511 will be moved to universe 5, address 1 to avoid that pixel spanning universes.




- When adding or re-addressing fixtures, care must be taken to make sure that fixtures do not overlap with pixels from another fixture that has had its pixels automatically moved to stop them from spanning universes. This may be difficult to visualize without assistance. The automatic addressing/sequencing tools and multiple fixture re-addressing window will help make sure that fixtures are addressed so there is no overlap. And if fixtures are manually readdressed, the Patch tab will show conflicts that arise.
- In the case of LED lighting fixtures or LED tape, which may both require more than one universe, the equipment manufacturer has typically factored this requirement into their design and programming for the fixture and the fixture's control data layout may already be split into multiple parts to make sure that no single pixel or function of the fixture can possibly span a universe boundary.

Universe Spanning with Merge Input

Because fixtures can now span universes for their output, it follows that the merge input data for these fixtures can now span universes as well. In a similar fashion to the output for pixels being moved to a higher universe to avoid a pixel spanning a universe boundary, the universe and address within merge input data that Mbox uses for a pixel may also be automatically adjusted. Based on the fixture's Merge universe and address (which is different to its output universe and address), if the group of addresses that a pixel requires - what Mbox would "listen to" for that pixel - for its merge data span the boundary between two universes, Mbox will instead listen to addresses starting at 1 on the next universe for that pixel's merge input data. In turn, this causes Mbox to listen to higher addresses for merge input data for pixels that follow. Any addresses that are skipped because of this are ignored.

With simple merges, the merge input data is often patched to the same start address as the fixture, but with a different start universe. When this is the case, it is fairly simple to understand how the output addressing and merge input addressing will correspond in a one-to-one fashion.

With merges that do not have the same start address between the merge input data and the fixture's output, there may be no direct correspondence between pixels that are moved on the output side and the addresses that Mbox listens to for their merge input data.

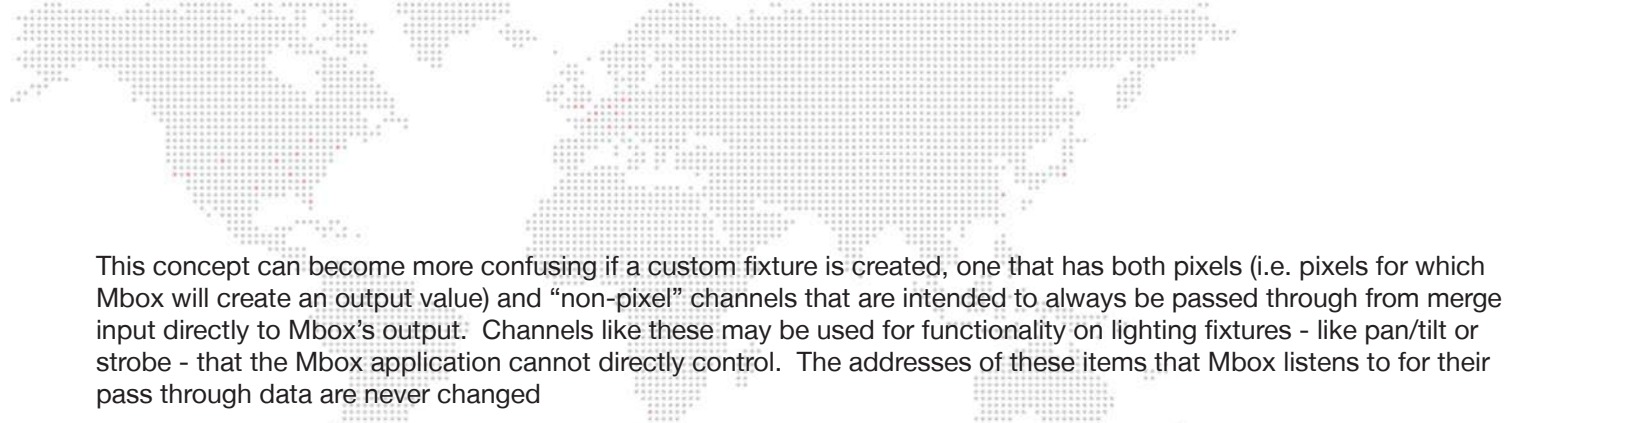

This concept can become more confusing if a custom fixture is created, one that has both pixels (i.e. pixels for which Mbox will create an output value) and “non-pixel” channels that are intended to always be passed through from merge input directly to Mbox’s output. Channels like these may be used for functionality on lighting fixtures - like pan/tilt or strobe - that the Mbox application cannot directly control. The addresses of these items that Mbox listens to for their pass through data are never changed

In practice, most fixtures that require pass through channels are lighting fixtures that will be receiving this pass through data from a lighting console. In most/all cases it is either impossible or a bad idea to address the actual lighting fixture such that it requires data split across multiple universes, or to patch the fixture in this manner on the lighting console. Therefore, merge input data for most fixtures of this nature will be fully contained within one universe or will be intentionally split into parts such that no individual control element (a pixel or control function) would ever span a universe boundary.

Unlike with fixture patching, the Merge tab does not show conflicts with fixture merging. However, the Re-address Multiple Merged fixtures window can be used to sequentially patch the merge universe and address for multiple fixtures. When this tool is used, the merge universe and address for fixtures will be applied taking into account the fact that the merge input data may have been adjusted to avoid spanning a universe boundary.

RGBW_2 and RGBxW Pixels

The RGBW_2 and RGBxW pixel types use special processing to convert Mbox’s rendered onscreen RGB values into RGBW values. This is achieved by first determining how “white” the sampled RGB color is, and by then increasing the level of the W component’s output and decreasing the levels of the R, G, and B components’ outputs proportionally as the sampled RGB value gets whiter. If the sampled onscreen RGB value is pure white, only the W component has an output value.

Because the color temperature or tint of white LEDs can vary, Mbox’s global or per-fixture RGBW_2 White Tuning preference/property allows a configurable amount of R, G, and B to be added back into to the pure white output generated by the W component of these pixel types. This preference/property has a default value of 0, 0, 0 (R, G, B) meaning that no red, green, or blue is added to the white color. Increasing the color values in the this preference can tint - e.g. add red to make the white “pinkier” - or adjust the color temperature - e.g. add blue to make the white “cooler” - of the white that the pixel outputs.

This adjustment is purely subjective, there is no right or wrong value for the color tuning.

Note: Starting in Mbox v5.5, the RGBW_2 White Tuning preference acts as a global value which applies to all pixels of the RGBW_2 and RGBxW types unless a fixture has its own values set and enabled in the pixel mapping configuration, in which case the fixture’s values will override the global values.

RGBAmber, RGBAx, and RGBLime Pixels

The RGBAmber, RGBAx, and RGBLime pixel types require special processing by Mbox’s pixel mapping engine. This is because the balance of the red, green, blue, and amber/lime output from the pixel needs to be calibrated to best match the actual hue of the amber or lime LEDs in the fixture. In a theoretical sense, amber is a mix of red and green, with more red than green, but with no blue, and lime is a mix of red and green, with more green than red, but with no blue. Mbox uses default values of 255,192,0 (R,G,B) for amber and 192,255,0 (R,G,B) for lime. These values are a good starting point, but may result in a slight color shift when the RGBAmber/RGBAx/Lime fixture outputs white. Not all fixtures use amber/lime LEDs with precisely the same hue or may use different curves for those LEDs.

In order to cause an RGBAmber, RGBAx, or RGBLime fixture to output white, its amber/lime LEDs can be set to full output, and then the appropriate amount of red, green, and blue LED output is added to mix to white. For the purposes



of the RGBAmber, RGBAx, and RGBLime pixel types in Mbox, this is considered the fixture's "white point" - full amber/lime plus some mix of red, green, and blue.

Different fixture types will require different amounts of red, green, and blue mixed with the amber/lime to reach their white point. Mbox has two global preference settings - RGBAmber White Point and RGBLime White Point - which allow these RGB values to be globally adjusted for all pixels of the RGBAmber, RGBAx, and RGBLime types. Mbox also includes per-fixture white point values that can be applied in each pixel mapping fixture's properties, which if enabled will override the global preference for fixtures.

Note: Starting in Mbox v5.5, the RGBAmber/Lime White Point preferences act as global values which apply to all pixels of the RGBA, RGBAx, and RGBL types unless a fixture has its own values set and enabled in the pixel mapping configuration, in which case the fixture's values will override the global values.

The RGBAmber/Lime White Point values are similar but not identical to the RGBW_2 White Tuning values, and represent the RGB value that represents "white" for the fixture rather than an additive color mix to tint the output. Each value is entered as three integers, 0-255, separated by commas (e.g. 0,202,220) which represent the amount of red, green, and blue respectively required to get white output from the fixture when the amber or lime emitter is at full output. The red, green, and blue LEDs on the fixture would be set to these three values and combined with the full amber/lime output to make white. The default value for RGBAmber is 0,63,255, and for RGBLime the default is 63,0,255 - based on the theoretical values for amber and lime mentioned above.

To determine the correct white point value for an RGBAmber or RGBLime fixture:

- Step 1. Connect the RGBAmber/RGBAx/Lime fixture directly to a lighting console and patch the console as required so as to be able to control the red, green, blue, and amber/lime channels independently.
- Step 2. Set the amber or lime channel to full (e.g. 255 or 65535).
- Step 3. Adjust the red, green, and blue channels until the output of the fixture is white. Make a note of the red, green, and blue channel values.
- Step 4. To use the global preference: In Mbox or Mbox Remote, replace the default RGBAmber/Lime White Point preference value with the new RGB values, entering them as three comma-separated integer values (e.g. 0,202, 220). To use the per-fixture value: In Mbox Remote open the current pixel mapping configuration and edit the desired fixture(s) or fixture profile(s). First enable the appropriate property using the checkbox, then enter the RGB values as three comma-separated values in the corresponding field.
- Step 5. To test the value, use a pixel mapping configuration with an RGBAmber, RGBAx, or RGBLime fixture and place white content onscreen. The output of the fixture should also be white. If not, the RGBAmber/RGBAx/Lime White Point preference can be adjusted live until the fixture outputs white.

For RGBAmber and RGBAx the white point value will typically have a red value of 0 and an intermediate value for green. For RGBLime the white point value will typically have a green value of 0 and an intermediate value for red. Each type will typically have a high value for blue. The overall tint of the RGBAmber, RGBAx, or RGBLime fixture can be adjusted in small amounts by varying the red, green, and blue values slightly and viewing the results:

- + Add more blue or remove green and red to give the white a cooler appearance.
- + Add more red to give the white a warmer appearance.
- + Add more green to remove a magenta tint.

CIE Pixel Types

Mbox's pixel mapping engine includes pixel types that use the CIE 1931 Yxy color model rather than the more common RGB color model or derivatives of the RGB color model that use alternate colors, e.g. CMY, Amber, or Lime. The CIE Yxy color model represents color information as the combination of luminance (brightness) and chromaticity (color). The "Y" component represents luminance, and the "x" and "y" components are used to represent a color. The CIE 1931 color space outlines the gamut or range of colors that can be represented using this model. This range equates roughly to that of the BT.709 and sRGB color spaces, with the sRGB color space being the space that Mbox uses for all rendering.


The concept of CIE Y is relatively simple to understand - as in "how bright is the color?" CIE xy is a little more complex and is best explained using an image of the CIE 1931 xy chromaticity diagram - as seen to the right. This diagram represents the CIE 1931 color space as an arch-shaped area on a graph having x and y axes. The arch encloses the spectrum of visible color, and values of x and y are used to specify a color within that area. Values for x and y have a minimum of 0.0 and a maximum of ~0.8 for x and ~0.85 for y.

In this manner any color can be specified as a point on the graph. For example, primary red (RGB = 255, 0, 0) has x and y values of ~0.64 and ~0.33 respectively. The point marked as "E" on the diagram represents "white" and can vary depending on the reference white point desired.

Mbox converts its onscreen RGB color to CIE Yxy values to be output as pixel mapping data. These calculations take into account several important factors:

- + Mbox renders color using the sRGB color space, and this color has a gamma curve applied to better display colors when presented on a computer screen. This rendered color is therefore first linearized to remove the gamma curve. The linearization function can be specified on a per-fixture basis when creating fixture profiles and editing fixtures.
- + The linearized RGB color is then converted to the CIE XYZ color model with a reference white point of D65 (~6500° K) as an intermediate step. At this point, the color data can be converted to an alternate reference white point, which can also be specified on a per-fixture basis when creating fixture profiles and editing fixtures.
- + The CIE XYZ color data is then converted to CIE Yxy. At this point, to avoid jitter in the color data, darker colors whose brightest RGB component approaches zero are blended to reference white.
- + Finally, the Y, x, and y values are converted to either 8 or 16-bit DMX values for output. Y has a normal range of 0.0 - 1.0 and can be converted directly to 8/16-bit values. But the conversion for x and y starts with a value between 0.0 and ~0.8 and must then normalize this value in order to output a DMX value between 0 - 255 or 0 - 65535. Because different lighting fixture manufacturers use different ranges for this calculation within their fixture software, this "CIE DMX Factor" can be specified on a per-fixture basis when creating fixture profiles and editing fixtures.

The calculations explained above are made automatically, but they rely on the correct configuration in fixture profiles (or per fixture) when pixel mapping configurations are created in Mbox Remote. In addition to the typical configuration of the number of channels, pixels, pixel type, and individual pixel addresses, attention must be given to the CIE DMX Factor, CIE Reference White, and CIE Linearization Function. These three parameters are configured as profile level properties in Remote's Create Fixture Profile, Edit Fixture Profile, and Edit Fixture windows. The default values have been specified to match those for the most common situations, but they are by no means correct for all situations and attention must be given to get accurate or desired results.

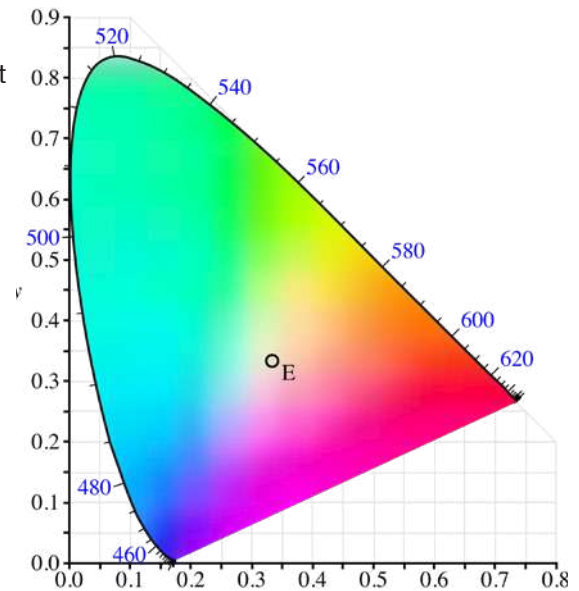

CIE DMX Factor	0.8
CIE Ref. White	D65
CIE Lin. Function	2.4 gamma



Important Considerations for CIE Yxy Pixel Types

Beyond the basic description of CIE Yxy made on the previous page, it is helpful to expand upon that explanation to provide more detail. The CIE Yxy color model may be foreign to many, since it doesn't use actual "color" levels to describe some color that might be mixed by combining light in an additive or subtractive manner. Unlike lighting fixtures that use RGB, CMY, RGBAmber, etc. color models, and where the concept of "red" or "white" may be entirely dependent on the wavelength of the fixture's LED emitters or filter material, CIE Yxy uses a model where fixture output for any specific Yxy input value is calibrated to produce the correct color and luminosity. This model requires that both the control data (created by Mbox in this case) and the response of the lighting fixture are in agreement for the color model and use the correct conversions and response. CIE Yxy provides this common color model, but both Mbox and the lighting fixture must still be configured to accomplish the conversion from onscreen color to DMX, and from DMX into the output of the lighting fixture.

The correct configuration relies on understanding what the lighting fixture requires in the way of control input - the parameters required, the order of those parameters, the DMX range/normalization of those parameters, and also the reference white point of the fixture - or what it is set to if the reference white point is adjustable on the fixture. It is also important to understand how Mbox renders onscreen color, and how this must be converted.


Considerations and adjustable properties for CIE Yxy output:

- + Mbox's pixel mapping includes pixel types for Yxy, Y, and xy, with both 8 and 16-bit variants. The three types allow for the creation of custom fixture profiles with any ordering or combination of Y and xy. Fixtures that use CIE xy chromaticity data also have some sort of "intensity" or "brightness" parameter, which will use the Y component.
- + Mbox renders onscreen color using the sRGB color space. This color space is very close to that of BT.709, though not exactly the same. Movie and still image content created for Mbox should always use the sRGB color space for best onscreen results, and video input sources (e.g. Blackmagic or NDI) should use the BT.709 colors space for best onscreen results.
- + To output onscreen color as CIE Yxy, Mbox must convert the onscreen RGB color to CIE Yxy, taking into account Mbox's standard sRGB color space, the desired output/fixture white point, and the conversion performed by the fixture when receiving DMX data that it must convert back into meaningful CIE xy values.
 - Mbox can use one of three linearization functions to linearize the sRGB color for conversion to CIE Yxy: 2.4 gamma, sRGB gamma, and 2.2 gamma. Because Mbox uses sRGB for onscreen rendering, the option for sRGB gamma may be the best choice in most cases. However, the option for 2.4 gamma may provide a more consistent result since the linearization is simpler. The 2.2 gamma option is reserved for special cases and should not be used in normal circumstances.
 - Mbox's sRGB color space uses a reference white point of D65. Selecting another option will convert the CIE Yxy output accordingly - with lower values making white "warmer" and higher values making white "cooler."
 - Fixture manufacturers will publish the conversion they use/require when converting CIE xy values to DMX values. Mbox must use this conversion when outputting control data. This process may be referred to a "normalization" and describes the conversion of a numerical value from one range (e.g. 0.0 - 0.8) to another range (e.g. 0 - 255). The math for this is simple: convert the value from its starting range to a range of 0.0 - 1.0 by dividing it by the maximum allowed value, then multiply the result by the maximum value for the intended DMX range. e.g. $(0.33 / 0.8) * 255 = 96$

Parked Pixels


When editing a fixture or a profile, individual pixels included in the fixture can be parked at a specific (static) level so as to override the RGB data that would be taken from the source, or to provide output levels for additional channels that might otherwise sit at a level of 0. For example, setting values for pan and tilt on moving light fixtures when there is no merge.

Park values can be entered in the Pixels table at the right side of the Edit or Create Fixture Profile window.

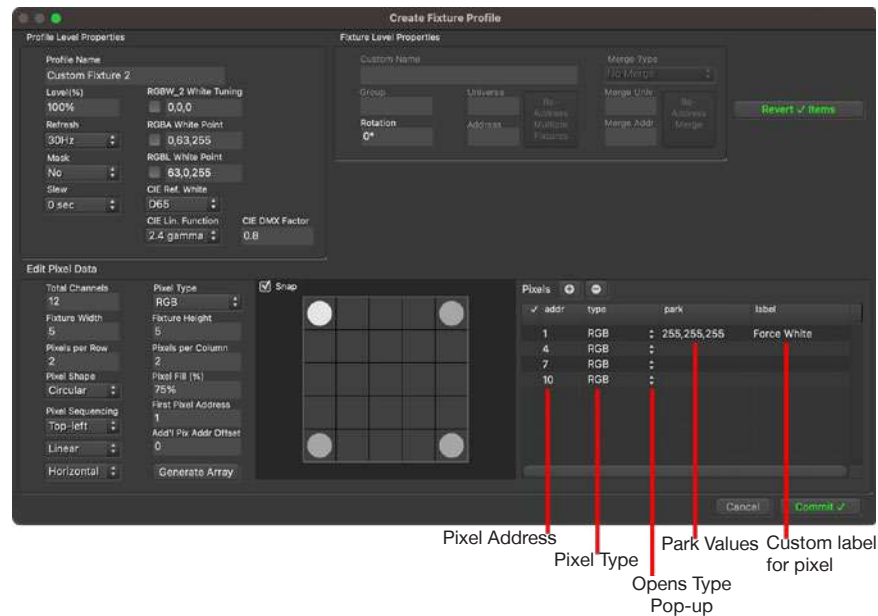

The syntax for the park value depends on the type of pixel. With an 8-bit RGB pixel: a park value of “255, 0, 0” represents Red=255, Green=0, and Blue=0. For a 16-bit RGB pixel, the park value could be set to “65535, 0, 0” to represent Red=65535, Green=0, and Blue=0. For an 8-bit Luma pixel, the park value could be set to “138” to represent an intensity level of 138.

The pixel type is chosen in the type pop-up menu:

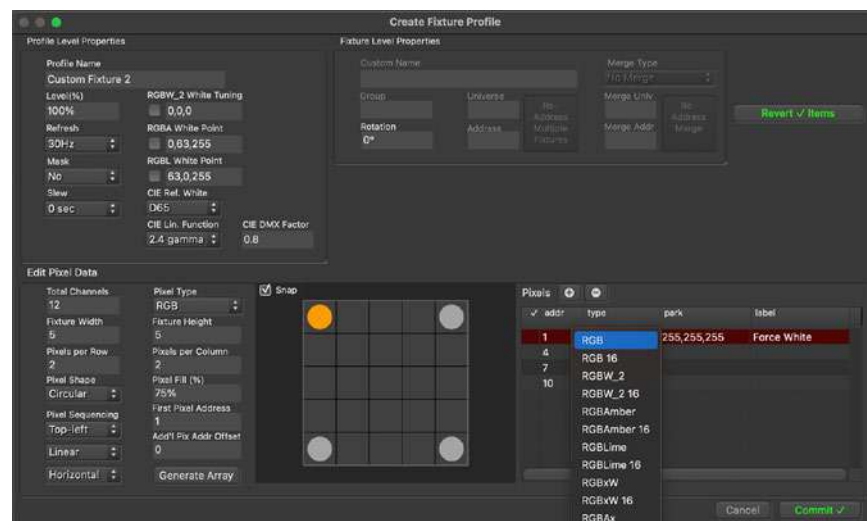

Park Syntax Guidelines:

- + If multiple values are expressed in one line they must be separated by commas, but no spaces.
- + Do not use commas in numbers greater than 999 (e.g. use 65535 not 65,535).
- + RGB = R,G,B color ordered as three 8-bit integer values (e.g. 127,255,0). This is the same for CMY, HSV, BGR, etc. The color is always entered in RGB order, Mbox will convert the output values as necessary to match the pixel type.
- + RGBW, RGBW_2, RGBAmber, RGBLime = R,G,B color ordering as three 8-bit integer values. (e.g. 127,255,0). The white, amber, or lime color components are automatically derived from the RGB levels for the pixel.
- + RGB 16 = R,G,B color ordering as either three 8-bit values (e.g. 127,255,0) or three 16-bit integer values (e.g. 32767,65535,12789). CMY 16 and CYM 16 pixels use the same syntax. As with 8-bit RGB, the color is entered in RGB order, and therefore, Mbox will re-order the values as necessary for correct output.
- + RGBW 16, RGBW_2 16, RGBAmber 16, RGBLime 16 = R,G,B color ordering as three 8 or 16-bit integer values. (e.g. 127,255,0 or 32767,65535,0). White, amber, or lime color components are derived from the RGB levels for the pixel.
- + Luma601/Luma709 = Luma as a single 8-bit integer value (e.g. 127), or as three 8-bit integer values (e.g., 100,255,45 -> an RGB color) from which a luma calculation will be made.
- + Luma601 16/Luma709 16 = Luma as a single 8 or 16-bit (e.g. 223 or 21537) integer value, or as three 8 or 16-bit integer values (e.g. 89,127,123 or 12635,43267,3000) that represent an RGB color, from which a luma calculation is be made.
 - If a single 8-bit integer is used, that single number will be used for both the MSB and LSB for 16-bit output.
 - If a single 16-bit integer is used, separate MSB and LSB are calculated from that number and used for output.
 - When using three 8-bit or 16-bit integers, the luma calculation will result in separate calculated MSB and LSB values.
- + CIE_Yxy/CIE_Yxy 16 = Y as a float value between 0.0 and 100.0, the x and y as two float values between 0.0 and 1.0 (e.g. 65.2,0.75,0.45).
- + CIE_xy/CIE_xy 16 = x and y as two float values between 0.0 and 1.0 (e.g. 0.75,0.45).
- + CIE_Y/CIE_Y 16 = Y as a single float value between 0.0 and 100.0 (e.g. 70.75).
- + Single Pixels (R, G, or B, etc.) = one 8-bit integer value (e.g. 123).
- + Parked Pixel = one 8-bit integer value (e.g. 255).
- + Parked 16 Pixel = two 8-bit integer values, or one 16-bit integer value (e.g. 127,127 or 32767).
- + Incorrect syntax means the park value is either calculated incorrectly or ignored/not applied.
- + If at least one 16-bit number is used, then all values are assumed to be 16-bit; even if other values are less than 256.
- + CIE types must use float values (with a decimal point) for all components, and the range of each component is checked. Incorrect values will result in incorrect calculations.

In the fixture editor, if a fixture profile has pixels with parked values, those parked values will be displayed on the profile tab - in gray to show they are not editable there. They can also be seen on the overrides tab - where they can be overridden. On the overrides tab the pixels will be white if not overridden or magenta if overridden.

Pixels	profile	overrides	
addr	type	park	label
1	RGB	255,0,0	
4	RGB		
7	RGB		
10	RGB		


Pixels					profile	overrides
✓	addr	type	park	label		
1		RGB	255,0,0			
4		RGB				
7		RGB				
10		RGB				

Pixels		profile	overrides	
✓	addr	type	park	label
✓	1	RGB	0,255,0	
	4	RGB		
	7	RGB		
	10	RGB		

Editing Fixture Profiles

Custom fixture profiles can be edited at anytime after they have been created. Built-in fixture profiles are not directly editable. However, a copy can be made of any of the built-in profiles and the copy can then be edited. There are two ways to begin editing these profiles:


- 1) In the Fixture Profile menu, select Edit Profile...

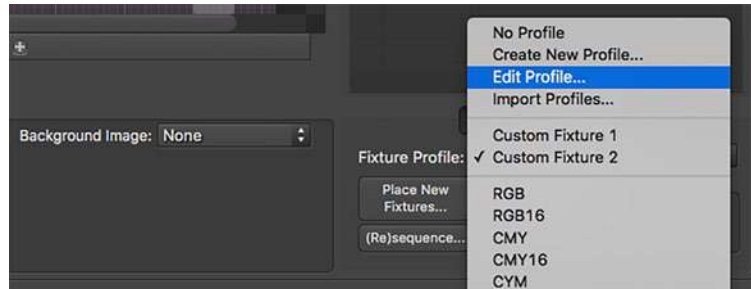


If a profile was previously selected in the menu then the profile editing window will open immediately. If no profile was previously selected, a window will appear, allowing the selection of the profile to edit.

- 2) Double-click on a patched fixture to open the Edit Fixture window, and then click on the Edit Profile Instead... button.

Attempting to edit a built-in profile will cause a warning message to appear and Mbox Remote will make a copy of the built-in profile that can be edited and used.

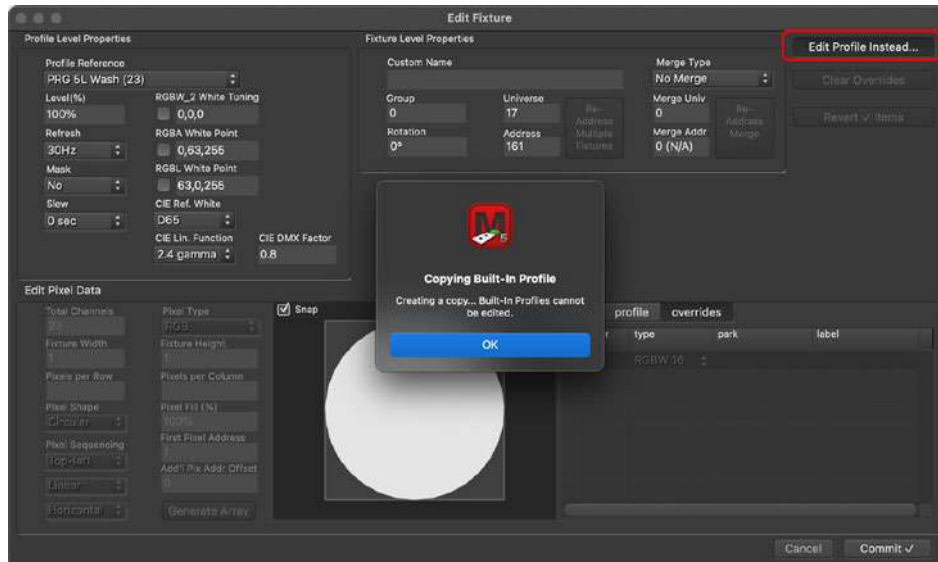

Both methods result in the same window opening, allowing the profile to be edited. (If it was created as a copy of a built-in profile, this will be noted in the window title as shown below.)

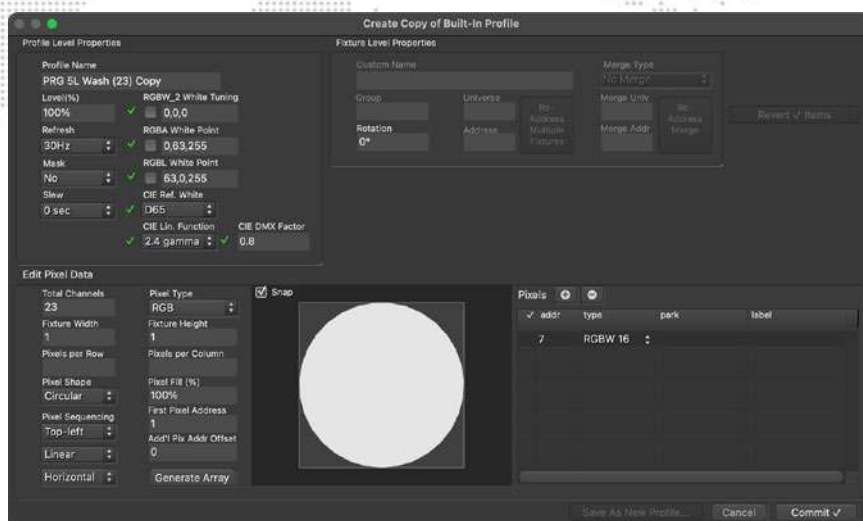


Importing Profiles

Fixture profiles can be imported from other Mbox pixel mapping configurations including .pmap files (Mbox v3.9) and .plist files (Mbox v3.8 and earlier).

To import profiles:

- Step 1. In the Fixture Profile menu, select Import Profiles... This will open a standard file dialogue window.
- Step 2. On the dialogue screen, select a pixel mapping configuration file containing profiles to import.
- Step 3. Click Open. All profiles from the selected file will be imported.

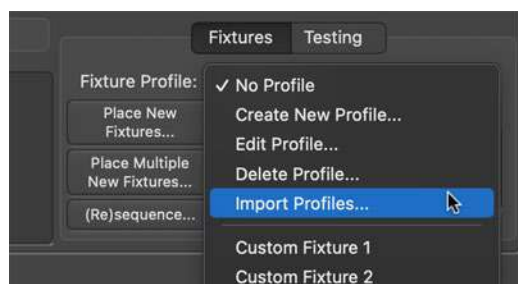


Deleting Profiles

Starting with Mbox Remote 5.5, user-created custom fixture profiles can be deleted from the current pixel mapping configuration.

To delete a profile:

- Step 1. In the Fixture Profile menu, select Delete Profile... This will open a dialogue window with a popup that allows the selection of a custom profile.
- Step 2. On the dialogue window, select a profile to delete.
- Step 3. If the selected profile is not being used in the current configuration, a confirmation alert will be shown, and clicking on the OK button will immediately delete the profile. If the selected profile is being used in the current configuration, an alert will be shown to indicate that the selected profile cannot be deleted.

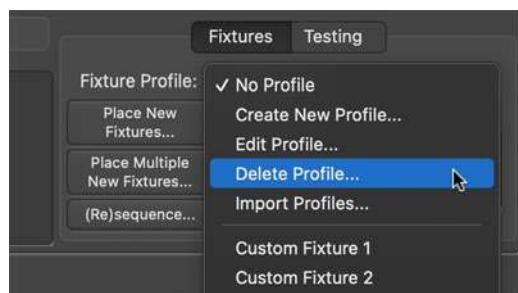


Groups

Groups provide additional group master, merge, and crossfade control of the pixel mapping output. Groups are used for:

- + Live-mastering of output levels for some fixtures while not affecting others.
- + Disabling (zero output) fixtures without affecting others.
- + Adjusting color balance (subtractive mix) of fixture output without affecting the content or other fixtures.
- + Replacing the color generated by Mbox with color values supplied by a lighting console without the use of an external merge system. Note that this is not a replacement for a merge in some cases, as the console may still need full control over the fixtures with a “normal” patch rather than the group control patch.
- + Setting the mode used for the Merge feature. (Refer to [“Merge”](#) on page 118.)

Groups are enabled and configured on the Groups tab:

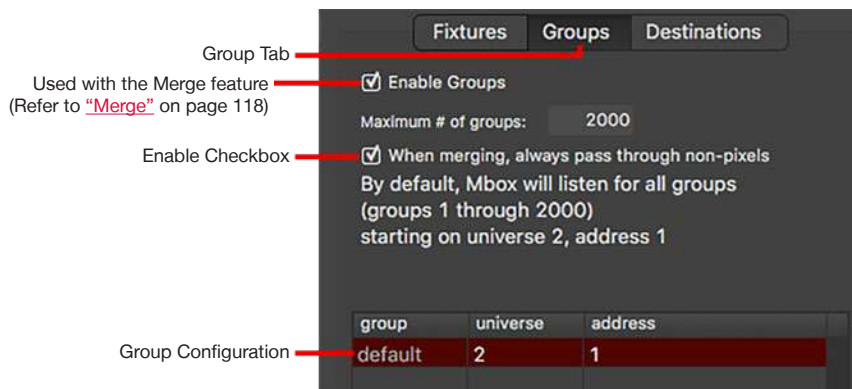

To add a group with specific universe and address, double-click in the group column directly below the last current group, then enter a group number, universe, and address. Double-click in any field to edit the value. To delete a group, double-click on the group number, press [delete] and then [return].

Mbox Remote allows up to 2000 groups. If only the default group is used, all groups will be patched sequentially starting with the selected start universe and address. Group controls will not be split across universes, allowing for a maximum of 85 groups per universe (510 channels) per universe. Each group uses six 8-bit channels to control: Mode, Intensity Master, Red/Cyan, Green/Magenta, Blue/Yellow, and White/Amber/Lime.

Note: HSV and HSI pixels are always treated as RGB pixels for the purpose of group control and merging. All calculations are made based on the RGB values of the pixel’s source, and that data is converted to HSV format for output. CIE xy, Y, and Yxy pixel may not respond to all mastering due to their specific color model.

Table 1: Group Universe Map


Channel:	1	2	3	4	5	6
Group 1:	M	I	R/C	G/M	B/Y	W/A/L
Channel:	7	8	9	10	11	12
Group 2:	M	I	R/C	G/M	B/Y	W/A/L
Channel:	13	14	15	16	17	18
Group 3:	M	I	R/C	G/M	B/Y	W/A/L
etc.	...	...	...	...	...	...
Channel:	505	506	507	508	509	510
Group 85:	M	I	R/C	G/M	B/Y	W/A/L

M = Mode, I = Intensity, R/C = Red/Cyan, G/M = Green/Magenta, B/Y = Blue/Yellow, W/A/L = White/Amber/Lime


The Intensity Master is inhibitive.

The color channels for red, green, and blue work no matter if the fixture is RGB or CMY. However, the group control fixture on the lighting console is always patched in RGB order. If the console has an advanced color picker, then this can be used with CMY sliders while still outputting RGB values. The color channel for white/amber/lime only affects the corresponding additional color found on RGBW_2, RGBAmber, and RGBLime pixels.


The protocol used to control the groups must be the same as the protocol selected for control of Mbox. This is set on the Mbox Patch tab.

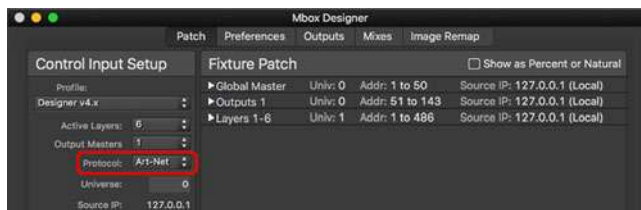

To create and add fixtures to a group, edit the group field in the Fixtures Patch tab. As fixtures are assigned to groups, those groups will automatically be created and the channels required will automatically be assigned. Use the Groups tab to enable/disable the Groups feature, set the maximum number of groups, and configure the universe setting.

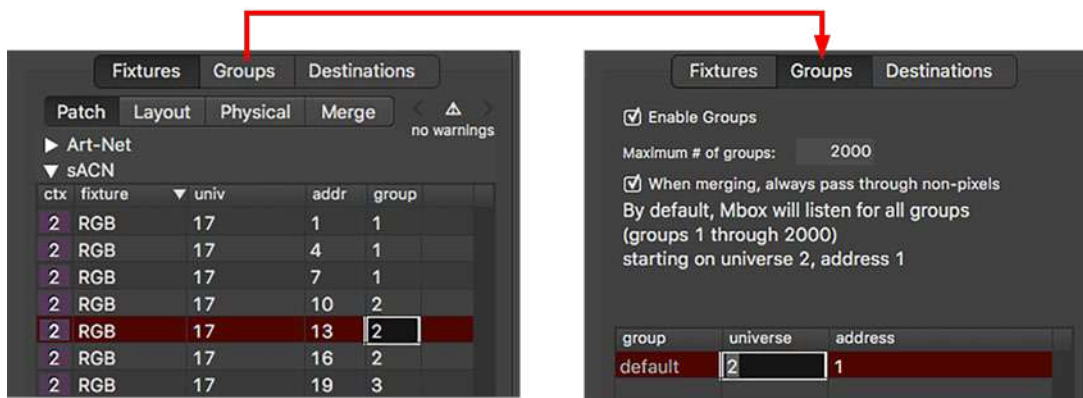

Fixtures may also be assigned to groups using the Edit Fixtures window. This is useful when adding many fixtures to the same group. (Refer to [“Editing Fixture Properties”](#) on page 88 for more information about this window.)

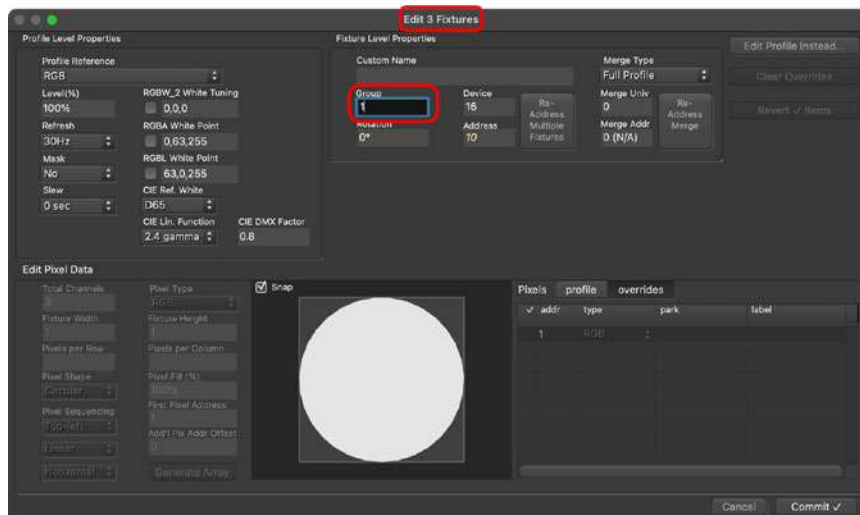

Group Control Mode

The Group Control Mode specifies how the group will respond to Mbox data and merge actions. (Refer to [“Merge”](#) on page 118 for more information about the Merge feature.)

Table 2: Group Control Modes

Mode	Description	Merge
0	No Group control. Mbox data is used without modification.	Merge data is ignored
1	Group Intensity + RGBW Master -> Group controls affect Mbox data.	Merge data is ignored
2	Group Intensity + RGBW Replace -> Group RGBW levels replace Mbox data (with Intensity mastering of replacement levels).	Merge data is ignored
3	Merge Replace + Group Intensity + RGBW Master -> Replace Mbox data with merge data. The result is then mastered by the Group controls.	Merge data replaces Mbox data.
4	Merge Multiply + Group Intensity Master + RGBW Master -> Group controls affect Merge data.	Mbox data is multiplied by the merge data.
5	Merge/Mbox crossfade + RGBW Master -> Group RGBW levels affect Merge data and Mbox data.	Group Intensity control is used to crossfade between the merge data and the Mbox data.
6	Group RGBW/Mbox Crossfade -> Group RGBW levels create color data. Group Intensity control is used to crossfade between the color data and Mbox data.	Merge data is ignored
7	Merge HTP + Group Intensity Master + RGBW Master -> Mbox data and merge data are mastered by Group controls, the resulting values are merged using HTP.	Merge data mixes with Mbox data using HTP.
8	HTP + Group Intensity Master + RGBW Master -> Group RGB levels create color data. The resulting color data and Mbox data are merged using HTP.	Merge data is ignored
101-108	These modes operate just like modes 1-8 respectively, except their color controls are treated as CMY rather than RGB. *	See notes in 1-8 above.
255	Force Off. All fixtures in group are forced to zero output.	Merge data is ignored

* The separate RGB and CMY modes are intended to handle the situation where the Group controls are being treated intentionally as CMY. However, most lighting consoles treat color in a generic fashion and therefore the Group controls can usually be treated as RGB, even if the fixture is a CMY fixture.

Guidelines:

- + The order of the actions (e.g. master then merge, and so on) in the descriptions above is intentional and specific to the mode, as performing the actions in a different order would lead to a different result on the output.
- + Modes 1-8 have color controls that use the RGB convention where 0,0,0 is black and 255,255,255 is white. Modes 101-108 operate like modes 1-8 except their color controls use the CMY convention where 0,0,0 is white and 255,255,255 is black. The Intensity control continues to master the output of the color channels normally in the modes that have an intensity master.
- + The separate RGB and CMY group modes are intended to handle the situation where the group controls are being treated specifically as CMY on the lighting console. This means that if you switch from mode 1 to mode 101, you would also need to invert the color control values.
- + However, most lighting consoles now allow color in a non-specific fashion (using a color picker) and therefore the Group controls can always be treated as RGB, even if the fixture is a CMY fixture.
- + Using HTP merge modes with CMY fixtures can be confusing because of the color inversion. HTP merges allow the source with higher levels (typically equaling brighter output) to be exerted. But an HTP merge with CMY color will not work as expected since brighter colors have lower values. Therefore, the use of HTP modes with CMY fixtures is not recommended.
- + In the two crossfade modes, the Group intensity control becomes a simple A/B crossfade between the two sources of data. When the control is at zero the source is Mbox, when it's at full the source is either the merge (mode 3) or the Group's color controls (mode 6).

- + In the case of mode 4, 'multiply' means mastered. If the Mbox data is at 100% and the incoming merge data is at 50%, then the result is $100 \times 50\% = 50\%$. Similarly, if the Mbox data is at 75% and the merge data is at 33%, then the result will be $75 \times 33\% = 25\%$.
- + Modes that master color or apply HTP merging with CIE Yxy or CIE xy pixel types may lead to unexpected results. CIE xy values don't correspond directly to color "intensity" and can't be mastered/merged in this way.

Merge

The Merge feature allows the server to receive additional Art-Net or sACN universes that can be combined in different ways with the pixel mapping output of the server. A primary use for this feature would be to allow both a console and Mbox to control the same pixel mapped fixtures, with the console operator deciding which device has control.

Note: While Mbox can output Art-Net, sACN, KiNET v1, and KiNET v2 to pixel mapped fixtures, Mbox can only receive Art-Net or sACN for the merge input. Starting with Mbox v5.5, the protocol used for merge data does not have to be the same protocol as the main control input to Mbox - the "PixMap Merge Protocol" preference allows for the selection of the desired protocol for merge input. It is possible for the merge input to use universes which are already being used for Mbox control, but it is not recommended. If the same universes are used, be sure to use unique, unused addresses within those universes.

The Merge operation is configured at the Fixtures > Merge tab by assigning a merge universe, merge address, and merge type to all fixtures that will be merged. In addition, all fixtures that are to be merged must be assigned to a pixel map group using the Groups feature, as explained in ["Groups"](#) on page 115.

Group controls (listed on page 115) are used to select a Group Control Mode which enables or disables the merge actions and selects what data is merged. There are eight merge modes that allow the Mbox output data to be replaced by the merge data, mastered by the merge data, or cross-faded with the merge data. The mode may be changed at any time.

Data will be handled differently depending on the pixel type(s) used in a pixel mapping fixture profile, and whether there are "non-pixels" (i.e. unpatched channels) in the pixel map fixture profile. For example, when patching a moving light, Mbox might control the color as a CMY pixel but the profile could also include empty space (non-pixels) for functions like pan and tilt to allow a console to control those parameters.

How different pixel types will react to merging:

- + Color pixels (RGB - in all orders, HSV, HSI, CMY/CYM, R, G, B, C, M, Y, Luma, etc. no matter whether 8-bit or 16-bit) - these pixel types will always be affected by merge data when using a group mode that enables the merge.
- + RGB+1 & RGB+2 - the RGB channels in these pixel types will always be affected by merge data when using a group mode that enables the merge. The extra channels (the +1 or +2) will be treated as non-pixels (see below).
- + Parked pixels (Park8 and Park16) - these pixel types will be unaffected by merge data unless the fixture is using the "Profile Non-Pixels Force" merge type.
- + Non-Pixels (any unpatched or skipped channels in a fixture profile) - these pixel types will always pass through merge data a.) when using a group mode that turns on the merge, or b.) when the "When merging always pass through non-pixels" preference is turned on at the Pixel Map > Groups tab and the fixture is using the Full Profile or Profile Non-Pixels Force merge type.

Fixtures

Groups

Destinations

Patch

Layout

Physical

Merge

no warnings

► Art-Net

▼ sACN

ctx	univ	addr	mrg univ	mrg addr	merge ir
2	17	1	0		No Mei
2	17	4	27	4	Full Prc
2	17	7	27	7	Full Prc
2	17	10	27	10	Full Prc

Fixtures Groups Destinations		
☒ Enable Groups		
Maximum # of groups: 2000		
☒ When merging, always pass through non-pixels		
By default, Mbox will listen for all groups (groups 1 through 2000)		
starting on universe 2, address 1		
group	universe	address
default	2	1

Note: If Color pixels are parked either in the profile or as an override, the park value will be affected by merge data in group modes that enable the merge.

To configure a merge:

Step 1. In Mbox Remote, start a live pixel mapping session, create and configure a context, and place some pixel mapping fixtures using methods described earlier in this manual.

Step 2. On the Fixtures > Patch tab, patch fixtures to desired output universe and address.

Step 3. On the Patch tab, assign a group number (1-2000) to the fixtures that require a merge with external data. The general idea is to group fixtures that would always share the same control or merge state.



Step 4. On the Groups tab, check the “When merging always pass through non-pixels” preference. This preference allows merge data for non-pixels (i.e. unpatched channels) to always pass through to the Mbox output, BUT only when the merge type is set to Full Profile or Profile Non-Pixels Force. This preference defaults to being on, as the most common usage of unpatched channels would be for additional parameters on fixtures; features like pan and tilt that can’t be affected by Mbox, and which should be passed through unaltered.



Step 5. Switch to the Fixtures > Merge tab. All patched fixtures will automatically appear on this tab, arranged by output universe and address. Note that only fixtures with a group number may be merged, but all fixtures, regardless of group number, will be shown here. Initially, the merge universe and merge address field will be empty for all fixtures.

Step 6. Decide what merge input type each fixture should have. There are ten different types:

- No Merge - this fixture's data will not be merged.
- Single RGB 8-bit - every color pixel on this fixture will output the same color, using three channels of merge data - using RGB ordering (e.g. 255,255,255 = white). Similarly, all luma pixels on this fixture will output the same intensity, based on the luma calculation derived from the incoming RGB values.
- Single RGB 16-bit - every color pixel on this fixture will output the same color using six channels of merge data - using RRGGBB ordering (e.g. 255,255,255,255,255,255 = white). Similarly, all luma pixels on this fixture will output the same intensity, based on the luma calculation derived from the incoming RGB values.
- Single CMY 8-bit - every color pixel on this fixture will output the same color, using three channels of merge data - using CMY ordering (e.g. 255,255,255 = black). Similarly, all luma pixels on this fixture will output the same intensity, based on the luma calculation derived from the incoming CMY values.
- Single CMY 16-bit - every color pixel on this fixture will output the same color, using six channels of merge data - using CCMMYY ordering (e.g. 255,255,255,255,255,255 = black). Similarly, all luma pixels on this fixture will output the same intensity, based on the luma calculation derived from the incoming CMY values.

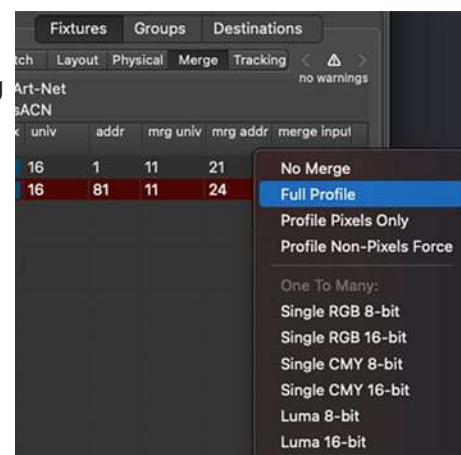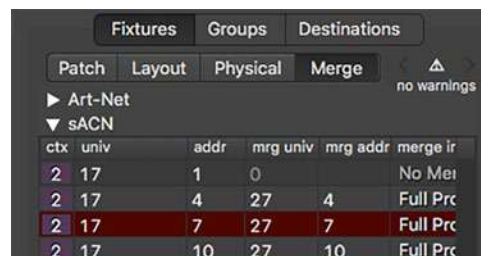

- Luma 8-bit - every luma pixel on this fixture will output the same value, using one channel of merge data (e.g. 255 = brightest). Similarly, all color pixels on this fixture will output that same value for each of their color values.
- Luma 16-bit - every luma pixel on this fixture will output the same value, using two channels of merge data (e.g. 255,255 = brightest). Similarly, all color pixels on this fixture will output that same value for each of their color values.
- Full Profile - Color and luma pixels are merged. Parked pixel values ignore any incoming merge data. If using a Group mode that supports merging, or if the “merge pass through non-pixels” preference is enabled, the Merge data on non-patched channels is passed through.
- Profile Pixels Only - Color and luma pixels are merged. Parked pixel values ignore any incoming merge data. Merge data on Non-patched channels is discarded (i.e. these pixels have no output).
- Profile Non-Pixels Force - Color and luma pixels are merged. Parked pixel values are replaced by any incoming merge data. If using a Group mode that supports merging, or if the “merge pass through non-pixels” preference is enabled, the Merge data on non-patched channels is passed through.

Note: Refer to the Pixel Mapping Merge Types chart below for a more detailed description of what happens for the most common pixel types when using the various merge modes.

Step 1. Enter merge universe and merge address values for each fixture in the table. Fixture values can be edited one at a time, or select multiple fixtures and double-click on one of them to open fixture edit window, then click on the “Re-Address Merge” button to assign a range of consecutive addresses to the selected fixtures. Make sure not to overlap universes and/or addresses with those being used to control Mbox or for the actual pixel mapping output!

ctx	univ	addr	mrg univ	mrg addr	merge ir
2	17	1	0		No Mer
2	17	4	27	4	Full Prc
2	17	7	27	7	Full Prc
2	17	10	27	10	Full Prc

Step 2. At Destinations tab, create the necessary output destinations for the pixel map. (Refer to “Destinations” on page 91 for more information.)

Step 3. Mbox is now ready to receive group control and merge data, and output pixel map data.

Table 3: Pixel Mapping Merge Types
(This chart assumes that a group mode that includes merge is being used)

Merge Type	Color Pixels	Color Pixels (Parked)	Parked Pixels (Profile)	Parked Pixels (Override)	Unpatched Pixels
No Merge	-	-	-	-	-
Single RGB 8-bit	Merged	Merged	Not Merged	Not Merged	Passed Through *
Single RGB 16-bit	Merged	Merged	Not Merged	Not Merged	Passed Through *
Single CMY 8-bit	Merged	Merged	Not Merged	Not Merged	Passed Through *
Single CMY 16-bit	Merged	Merged	Not Merged	Not Merged	Passed Through *
Intensity 8-bit	Merged	Merged	Not Merged	Not Merged	Passed Through *
Intensity 16-bit	Merged	Merged	Not Merged	Not Merged	Passed Through *
Full Profile	Merged	Merged	Not Merged	Not Merged	Passed Through *
Profile Pixels Only	Merged	Merged	Not Merged	Not Merged	Not Passed
Profile Non-Pixels Force	Merged	Merged	Merged	Merged	Passed Through *

* In these cases, data for unpatched pixels is passed through only if the “merge pass through non-pixels” preference is enabled in the Group tab.

Using the merge:

Note: Refer to [“Example Merge Hardware Diagrams”](#) on page 124 for possible hardware I/O connections.

- Step 1. Begin by playing content on Mbox and verifying correct output and control over all fixtures. It's best to confirm this before introducing the merge data, as the merged data may add to the confusion if there is a problem with the addressing or other setup.
- Step 2. Add the merge data input to the Mbox server, confirming that this connection does not affect the pixel mapping output (assuming that all pixel mapping groups are set to Group mode 0). If the pixel mapping output is affected at this stage, then there may be an addressing conflict or a group mode is selected that affects the output. It is recommended that testing happen with all Group modes set to 0!
- Step 3. At the control console, locate the pixel map group channels and confirm that there is control over the groups. Do this as follows:
- Set each group's Intensity, Red, Green, Blue, and White channels to full (255) - this should be their default.
 - Set each group's mode channel to the “off” mode (0) - this should be the default mode.
 - Set one group's mode channel to mode 1 (Intensity and RGBW mastering) and confirm that the corresponding intensity and RGBW output levels for all fixtures in that group can be mastered from the console. Repeat with other groups as necessary.
 - Set one group's mode channel to mode 3 (Merge Replace with Intensity and RGBW mastering) and confirm that the console's output for the fixtures in that group has replaced the Mbox output for the same fixtures. Test the intensity and RGBW mastering using the group controls. Repeat with other groups as necessary.
- Step 4. If the test provides the correct result, select the correct mode to obtain the desired merge result. Modes can be changed at any time to achieve different merge results. However, making mode changes live may result in an undesired jump in output levels. (Refer to [“Group Control Mode”](#) on page 117 for a list of possible modes)

Guidelines for Fixture Merge Types

- + The Merge Types are used to determine how incoming merge data will be applied to the patched pixel mapping fixtures in Mbox.
- + In many cases with simple RGB LED fixtures, the type can be set to Single RGB 8-bit. This allows three channels (RGB data) to apply the same color/intensity to every patched, non-parked pixel in the fixture.
- + If every pixel in the fixture should not be the same color, then use one of the last three modes - Full Profile, Profile Pixels Only, or Profile Non-Pixels Force.
- + To use merge data to control unpatched channels in a fixture, use either merge type “Full Profile” or merge type “Profile Non-Pixels Force”. When using one of these merge types, merge data on unpatched channels is passed through by default, no matter what Group Control mode is used. (The “When merging, always pass through non-pixels” preference on the Groups tab in Mbox Remote can disable this, if desired.)
- + When using one of the first three merge types, the type selected depends on how parked pixels and unpatched channels in the fixture should be treated.
 - “Full Profile” allows all the color and luma pixels on the fixture to be affected and merge data to be passed through on unpatched channels. However, parked pixels will be unaffected by any merge data.
 - “Profile Pixels Only” allows only the color and luma pixels to be affected. Parked pixels will not be affected by merge data and merge data will not be passed through on unpatched channels.

- “Profile Non-Pixels Force” allows all the color and luma pixels on the fixture to be affected, merge data to be passed through on unpatched channels, and parked pixel levels will be overridden by merge data.
- + The single RGB/CMY/Luma merge types may not work as desired if using a complex fixture that includes more than one pixel type.
- + It is not recommended to use the single RGB or CMY merge types for fixtures having both RGB and CMY pixels (e.g. High End Showgun), as doing so would invert the color controls for one set of pixels and therefore make group color mastering confusing. In this case, either split the fixture into two parts or use one of the first three merge types.
- + If a fixture uses 16-bit color mixing, don’t select an 8-bit merge type, and vice-versa.
- + If a fixture is CYM (e.g. PRG Bad Boy) rather than CMY, or if the fixture uses non-standard RGB ordering, don’t use the single RGB or single CMY modes. Instead, use one of the first three modes. If the CMY or RGB modes are used, the color ordering for the group controls will not be correct.

General Merge Notes

- + The Pixel Mapping Intensity parameter on Mbox’s Master fixture will still master the output level of all pixel map output from color or luma pixels. It does not master the output of parked pixel types. The Master intensity also does not affect any levels from the merge data that are passed through on unpatched channels.
 - Parked pixels and passed through levels are things that typically Mbox should not or cannot control (e.g., pan and tilt on a moving light). Mbox can control the color of the light, but typically the pan and tilt will be fixed (use a parked pixel) or controlled separately by a console (use merge data passed through).
- + Using the Pixel Mapping merge may have a performance impact on the entire Mbox application, especially when merging large amounts of data (many fixtures and/or universes). The slower/older the computer, the less capable it will be in merging large amounts of data.
- + When dealing with a large merge, it is recommended to use non-blocking gigabit ethernet switches (e.g., Pathway Connectivity Via10 or Via12). Make sure to configure the switch appropriately. Note that on cheaper switches (even gigabit switches), plugging in a slower device (e.g., a 10Mb/s Artistic Licence Art-Net node) may affect throughput on the entire switch. This may lead to poor results when trying get the smoothest pixel map output or when low latency is critical.
- + Merge data can be received by the Mbox computer on any interface, as long as it is of the same protocol as the main control protocol (i.e., either Art-Net or sACN as set on the Mbox Setup tab).
- + The Pixel Mapping output can be made from any interface(s) on the computer as long as the pixel mapping Destinations are set up correctly.

Merge Examples

The following section contains several operational examples using the Merge feature.

1) Setup with RGB LED fixtures having only one pixel each:

- When controlling only simple three-channel RGB fixtures (e.g. Color Kinetics ColorBlast) a very complex merge setup is not required. Each fixture in the patch will have a unique output universe and address. Each fixture can have its own unique merge universe and address, allowing the merge to control every fixture independently. Alternately, multiple fixtures can have the same merge universe and address and allow Mbox to pixel map to them individually, but have the merge source control them as one (i.e. they will all be the same color when control comes from the merge source). In both of these cases either the “Single RGB 8-bit” or “Full Profile” merge types can be used.

1) Setup with RGB LED fixtures having more than one pixel each:

- In this situation decide if the merge source should control the entire fixture as one unit (all pixels the same color) or if independent control over each pixel in the fixture is needed. In the former case, use the “Single RGB 8-bit” merge type for the fixtures. In the latter case, use the “Full Profile” merge type for the fixtures.

2) Setup with LED fixtures having RGB plus non-typical colors (e.g., deep red, cyan, etc.):

- The onscreen color of Mbox is limited to RGB. While there may be standard methods to convert an RGB color to simpler additional LED emitter colors as with RGBW, RGBAmber, or RGBLime, each LED fixture manufacturer may use different methods when they do this. To accommodate such differences, Mbox has preferences that allow for the white balance or tuning of the RGBW_2, RGBAmber, and RGBLime output. These preferences are universal - applied in the same way to all pixels of that type - and not adjustable per-fixture.
- An alternative solution for more-complex fixture types or non-typical colors is to let Mbox control the RGB pixels and then use merge data to control the additional colored pixels. While the color selection won't be automatic, this will allow precise control over the color of the fixture. Use either the “Full Profile” or “Profile Non-Pixels Force” merge type.
- The RGBW and RGBW_2 pixel types provide two different methods for converting the RGB color to RGBW color data. The RGBW pixel type sets the RGB channels to the RGB color of the pixel and sets the W channel to the CIE luma calculated value for the dimmest of the R, G, or B channels. The RGBW pixel type lacks the preference to allow for tuning of the white output; white output is always the same as the dimmest of the R, G, or B pixels. The RGBW_2 pixel type finds the overall hue of the RGB color of the pixel and as the color becomes brighter/lighter adds in the W channel and reduces the RGB channels.

3) Setup with fixtures having additional parameters that need some form of control (e.g., moving lights):

- Because Mbox can only generate color data for pixel mapping output, and because moving lights have additional parameters, some other source of control the additional parameters is needed. In situations like this, the fixture profile should include either parked pixels or unpatched channels for the additional parameters.
- Parked pixels can be used to set the additional parameters to fixed values. Useful for locking things like pan and tilt or the dimmer. If parked pixels are used in a profile and need to be overridden with merge data, the “Profile Non-Pixels Force” merge type must be used, otherwise the parked pixel values cannot not be affected by merge data. This can be quite useful if there are times when the merge data will not be present and you still want the parameters still need to have a useful value (albeit fixed).
- If the fixture profile has unpatched channels for the additional parameters, then merge data can be passed through when using either the “Full Profile” or “Profile Non-Pixels Force” merge type. However, when using unpatched channels, merge data must be provided all the time for fixture parameters that need to be at a level above 0.
- Parked pixels and unpatched channels can be combined, but keep in mind that if the parked pixel values need to be overridden the “Profile Non-Pixels Force” merge type must be used.

Example Merge Hardware Diagrams

In the diagram below, the console outputs control data to Mbox through an ethernet switch. The necessary data for controlling the pixel mapping groups (mode, intensity, color) is also included in that output, as is fixture control data to be merged with the Mbox output. The Mbox server responds to the control data and merges the other data when requested. The pixel mapping data is then output to the fixtures through a second ethernet switch.

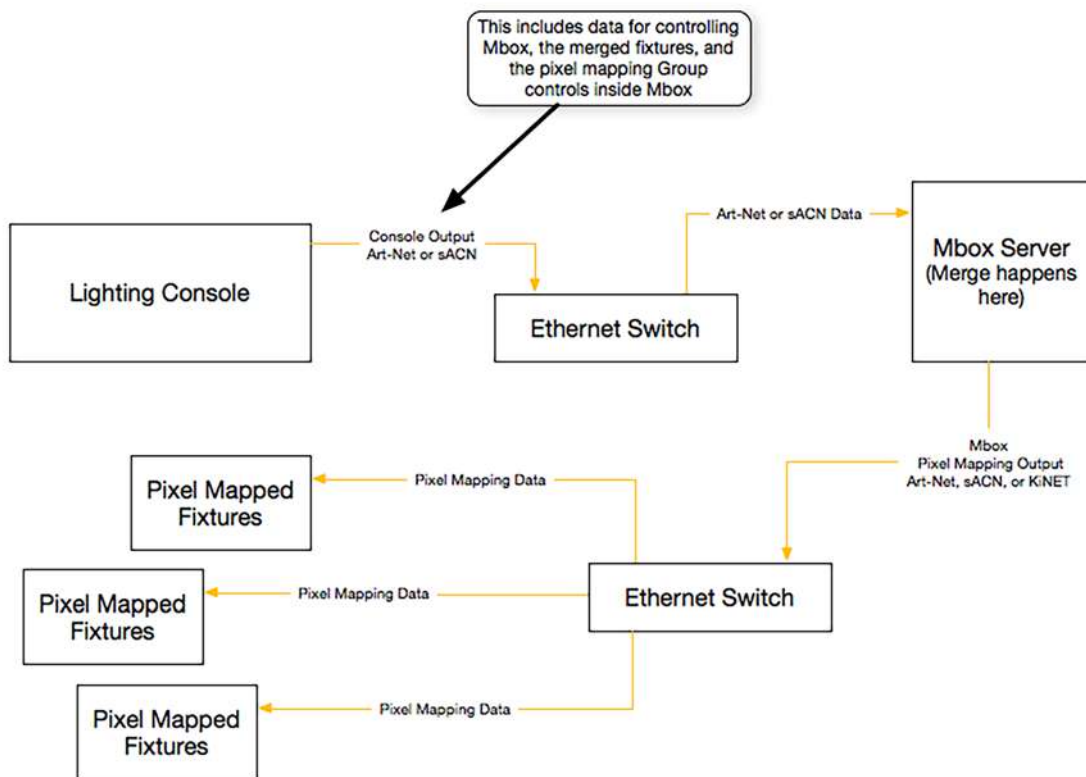


Figure 1: Example Merge Hardware I/O Diagram 1

In many cases, the system could work with only one ethernet switch. But the practicality of this may depend on the switches used and the number of universes of control data on the network. Wherever possible, we recommend using separate physical networks for control input and pixel mapping output.

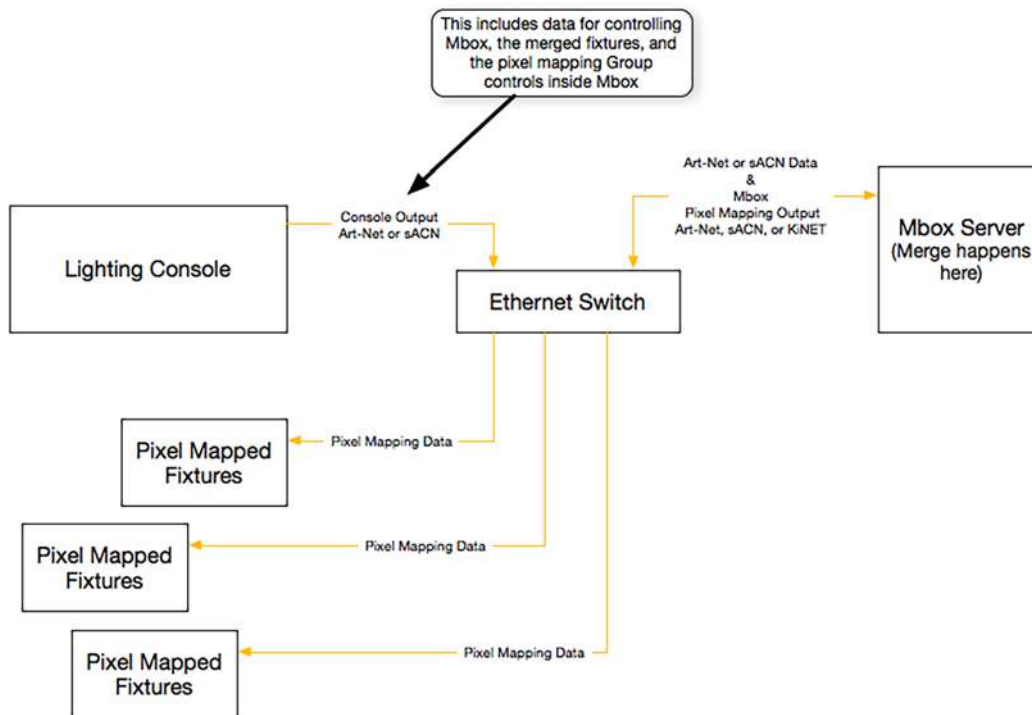


Figure 2: Example Merge Hardware I/O Diagram 2

Testing


The Testing feature provides a way to easily locate and test fixtures in order to verify the correct pixel mapping configuration. During testing, selected fixtures can be highlighted statically or flashed between highlight and lowlight states. (This testing functionality mimics highlight/lowlight functionality in lighting consoles.)

The Testing feature can be used while Mbox Remote is in a Live Editing session or a Test Only session. While in the Test Only session, the pixel mapping fixtures can be tested but the configuration is locked out from changes.




To test fixtures:


- Step 1. On Mbox Remote's Servers list, select the required server. Select the Pixel Map tab.
- Step 2. Click gear icon and select Begin Test Only session for... The pixel mapping configuration will now be locked from changes.

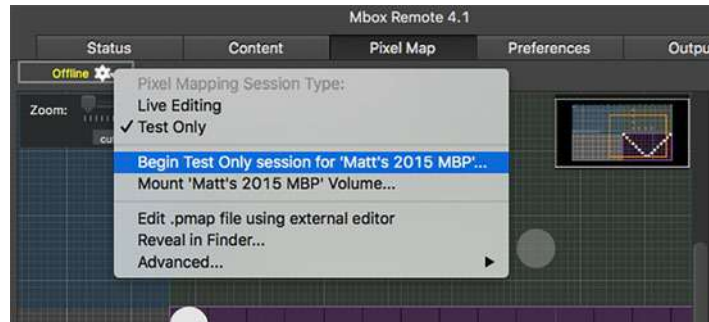

- Step 3. Choose a context and select one or more patched fixtures.

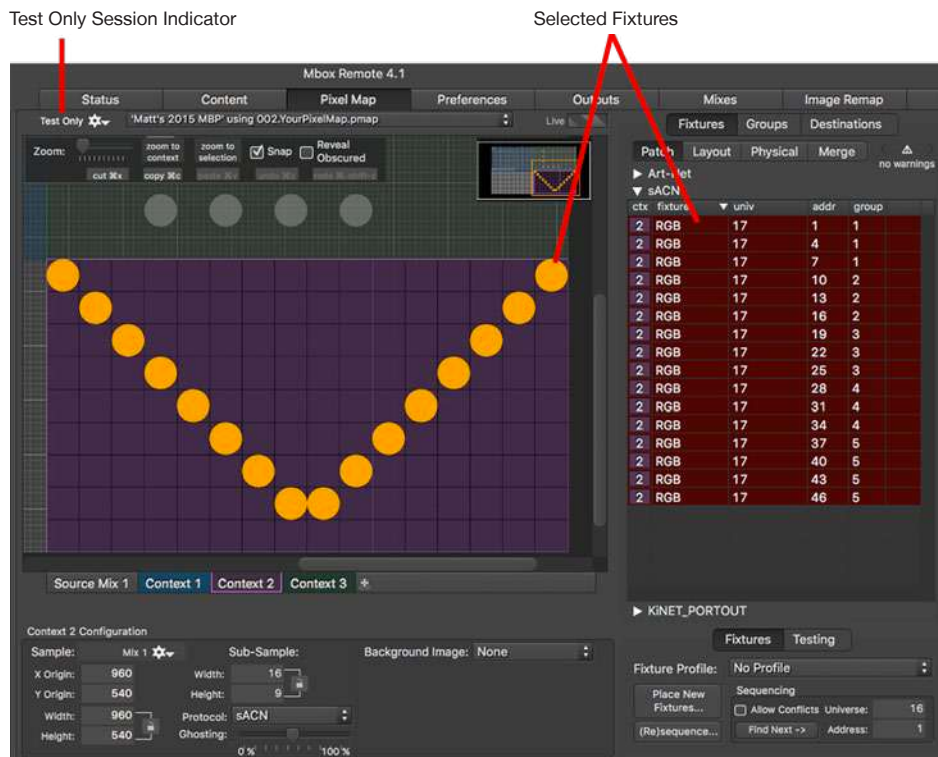


- Step 1. At the bottom-right of the tab, select the Testing tab then click the Test button. (The Testing tab text will be displayed in green and the Test button will be dark gray to indicate that the Testing mode is active.)
- Step 2. Once the Text button is clicked, the selected fixtures will start flashing between the specified highlight and lowlight colors.
- If multiple fixtures were selected in Step 3, clicking the Previous and Next buttons will cycle through the selection set. One fixture at a time will be highlighted with a green ring on both the context grid and in the fixture table.
 - Use the Flash checkbox to enable/disable flashing.
 - To change highlight/lowlight color scheme, enter custom RGB values.
- Step 3. Click Test button again to exit Testing mode.

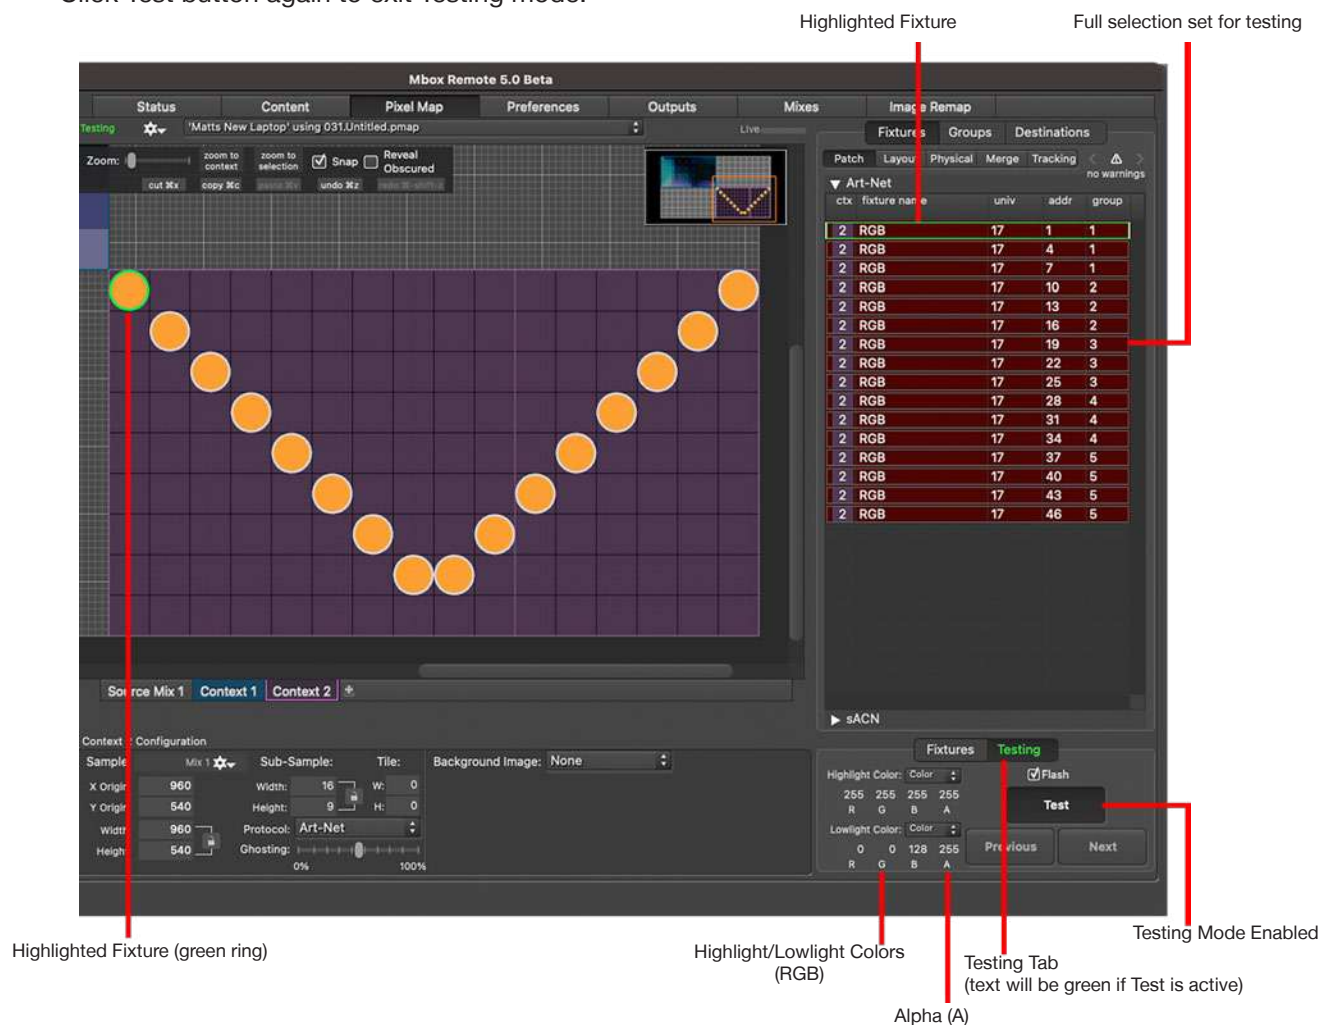

- + RGB - The highlight and lowlight colors are configurable with 8-bit RGB values.
- + A (Alpha) - The only two correct options for the field are 255 or 0. If the value is 255, the color (highlight or lowlight) will be completely opaque. If the value is 0, then the color values are ignored and the high/lowlight will be the color values that Mbox is actually sending out.

Import/Export

Mbox Remote has the ability to import and export pixel mapping fixture and destination data. The Import/Export window is used for this purpose.

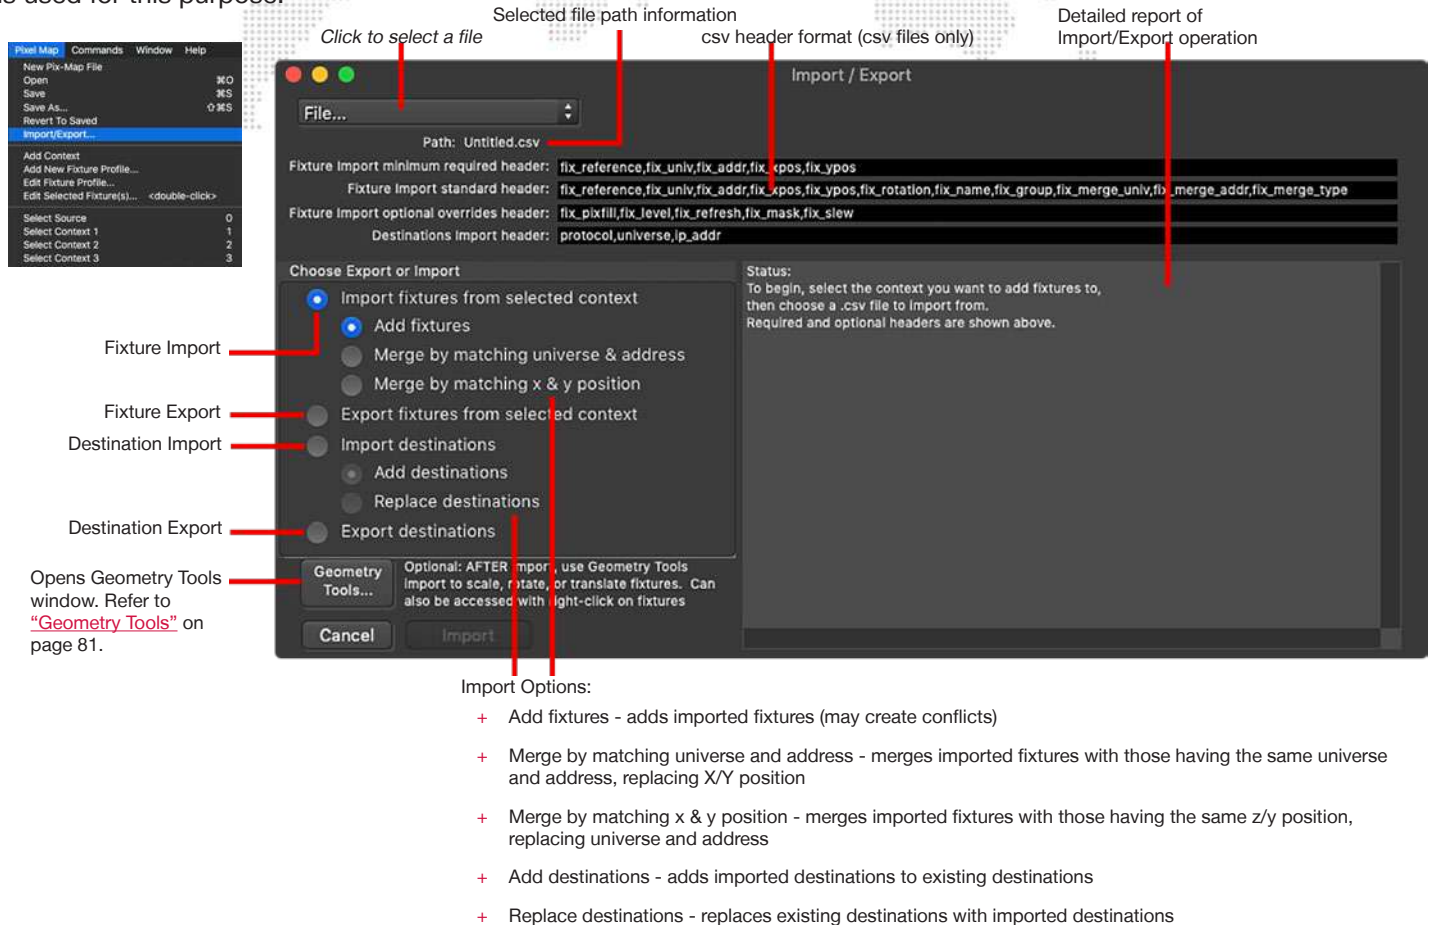

Property List Files

Mbox Remote can import and export fixture data from any pixel mapping .pmap file. Use the Import/Export window options to configure how this data will be imported (see above). When importing and exporting fixtures, the context that is currently selected on the main Mbox Remote window is taken into account. When importing, only fixtures from the context of the same number in the import file are imported into the selected context. If the import file does not have a context with the same number, no fixtures will be imported. When exporting, only fixtures from the currently selected context are exported.

The import of fixture data from .plist files created by prior versions of Mbox is supported. In this case, old profiles and fixtures will be upgraded to the new format and the imported fixtures will appear as if every parameter is overridden since the old .plist files had no concept of profile reference.


CSV Files

Pixel mapping fixture and destination data can also be imported and exported using the comma separated values (.csv) format. This functionality allows large or complex pixel mapping configurations to be created from or saved in a data format that can be more quickly edited as a spreadsheet rather than attempting to place and patch the same fixtures or create destinations using Mbox Remote.

The csv format is a plain text format using commas to separate values on the same line and a carriage return to separate lines. Many different applications can create text files with the appropriate formatting. Microsoft Excel can convert spreadsheet data into a csv format or data can be created/edited in a standard text editor. For example, the following images represent the same fixture data in text and spreadsheet formats:



```
fix_reference,fix_univ,fix_addr,fix_xpos,fix_ypos
RGB,1,1,222,639
RGB,1,4,225,641
RGB,1,7,228,641
RGB,1,10,232,641
RGB,1,13,235,639
```

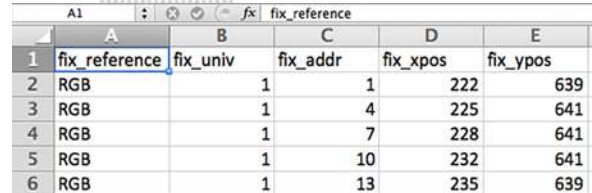


	A	B	C	D	E
1	fix_reference	fix_univ	fix_addr	fix_xpos	fix_ypos
2	RGB	1	1	222	639
3	RGB	4	4	225	641
4	RGB	7	7	228	641
5	RGB	10	10	232	641
6	RGB	13	13	235	639

The csv import functionality requires that the csv file be formatted properly for handling by Mbox Remote. If the formatting is not correct, Mbox Remote will not be able to read the file, or errors may occur when the file is being read.

Guidelines:


- + When importing fixture data, the csv file may only hold data for one context. If data is created for more than one context, the data should be saved as multiple csv files, one for each context.
- + The csv file requires that data be organized into lines of text, with each line representing either organizational data (the header data) or one fixture or destination's data.
- + The first line of the file, known as the "header," holds the names (in order, separated by commas) of the properties listed (in corresponding order) in the data in the following lines. The import window notes what the header should include and shows the correct order, spelling, and formatting of the header items. For example:



```
Fixture Import minimum required header: fix_reference,fix_univ,fix_addr,fix_xpos,fix_ypos
Fixture Import standard header: fix_reference,fix_univ,fix_addr,fix_xpos,fix_ypos,fix_rotation,fix_name,fix_group,fix_merge_univ,fix_merge_addr,fix_merge_type
Fixture Import optional overrides header: fix_pixfill,fix_level,fix_refresh,fix_mask,fix_slew
Destinations Import header: protocol,universe,ip_addr
```

- + Property names must follow the standards dictated and must be spelled and capitalized correctly. These are:
 - Fixture Required: fix_reference, fix_univ, fix_addr, fix_xpos, fix_ypos
 - Fixture Optional additions: fix_rotation, fix_name, fix_group, fix_merge_univ, fix_merge_addr, fix_merge_type
 - Fixture Override additions: fix_pixfill, fix_level, fix_refresh, fix_mask, fix_slew, fix_cie_factor, fix_cie_whitepoint, fix_cie_linearFunc, fix_rgbw2_whiteTuneEnable, fix_rgbw2_whiteTuneVal, fix_amber_whitePointEnable, fix_amber_whitePointVal, fix_lime_whitePointEnable, fix_lime_whitePointVal
 - Destination Required: protocol, universe, ip_addr


If an incorrect property name is detected during the import process, Mbox Remote will display an error such as the one below (where "fix_reference" has been spelled incorrectly):

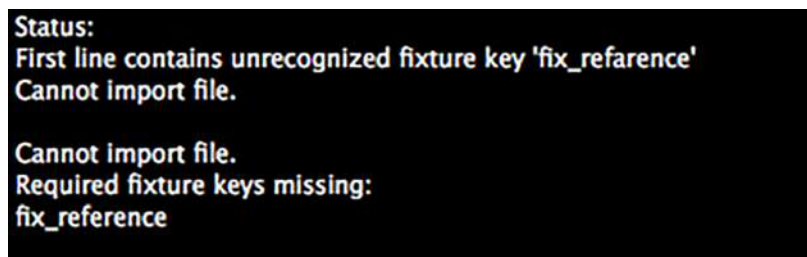

```
Status:
First line contains unrecognized fixture key 'fix_refarence'
Cannot import file.


Cannot import file.
Required fixture keys missing:
fix_reference
```

- + The lines following the header are known as the "body." These lines hold the fixture or destination data corresponding to the property names in the header, in the order specified.

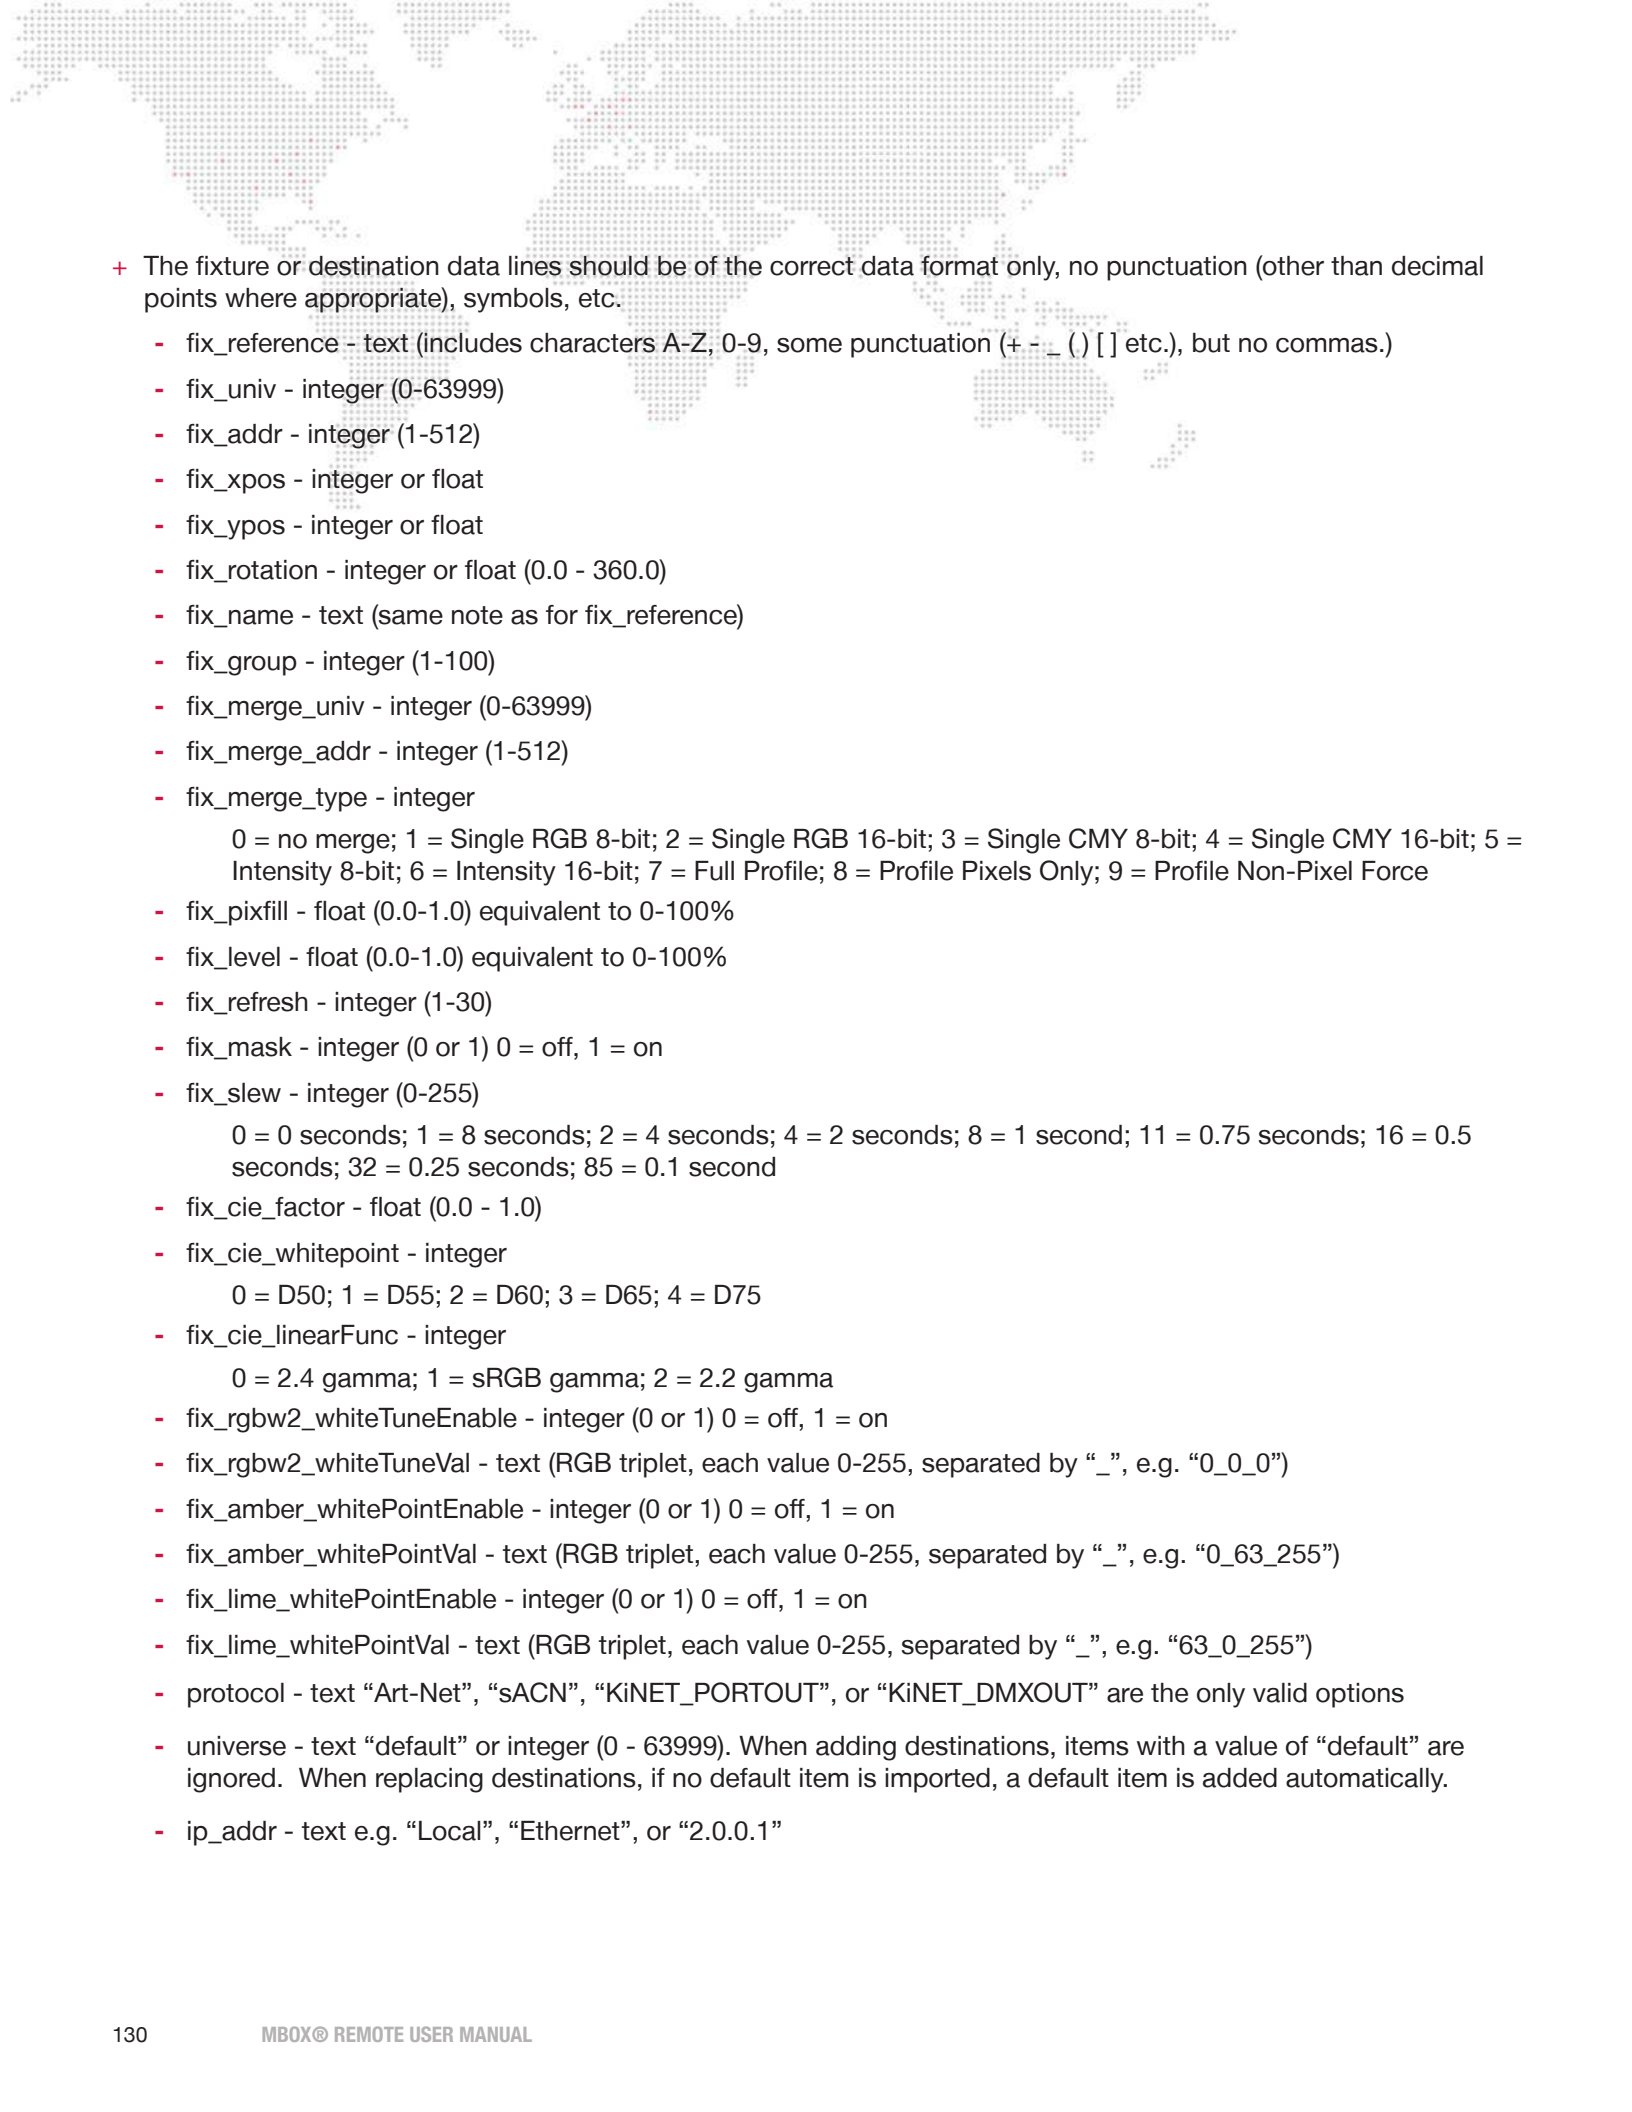- 
- + The fixture or destination data lines should be of the correct data format only, no punctuation (other than decimal points where appropriate), symbols, etc.
 - fix_reference - text (includes characters A-Z, 0-9, some punctuation (+ - _ () [] etc.), but no commas.)
 - fix_univ - integer (0-63999)
 - fix_addr - integer (1-512)
 - fix_xpos - integer or float
 - fix_ypos - integer or float
 - fix_rotation - integer or float (0.0 - 360.0)
 - fix_name - text (same note as for fix_reference)
 - fix_group - integer (1-100)
 - fix_merge_univ - integer (0-63999)
 - fix_merge_addr - integer (1-512)
 - fix_merge_type - integer
 - 0 = no merge; 1 = Single RGB 8-bit; 2 = Single RGB 16-bit; 3 = Single CMY 8-bit; 4 = Single CMY 16-bit; 5 = Intensity 8-bit; 6 = Intensity 16-bit; 7 = Full Profile; 8 = Profile Pixels Only; 9 = Profile Non-Pixel Force
 - fix_pixfill - float (0.0-1.0) equivalent to 0-100%
 - fix_level - float (0.0-1.0) equivalent to 0-100%
 - fix_refresh - integer (1-30)
 - fix_mask - integer (0 or 1) 0 = off, 1 = on
 - fix_slew - integer (0-255)
 - 0 = 0 seconds; 1 = 8 seconds; 2 = 4 seconds; 4 = 2 seconds; 8 = 1 second; 11 = 0.75 seconds; 16 = 0.5 seconds; 32 = 0.25 seconds; 85 = 0.1 second
 - fix_cie_factor - float (0.0 - 1.0)
 - fix_cie_whitepoint - integer
 - 0 = D50; 1 = D55; 2 = D60; 3 = D65; 4 = D75
 - fix_cie_linearFunc - integer
 - 0 = 2.4 gamma; 1 = sRGB gamma; 2 = 2.2 gamma
 - fix_rgbw2_whiteTuneEnable - integer (0 or 1) 0 = off, 1 = on
 - fix_rgbw2_whiteTuneVal - text (RGB triplet, each value 0-255, separated by “_”, e.g. “0_0_0”)
 - fix_amber_whitePointEnable - integer (0 or 1) 0 = off, 1 = on
 - fix_amber_whitePointVal - text (RGB triplet, each value 0-255, separated by “_”, e.g. “0_63_255”)
 - fix_lime_whitePointEnable - integer (0 or 1) 0 = off, 1 = on
 - fix_lime_whitePointVal - text (RGB triplet, each value 0-255, separated by “_”, e.g. “63_0_255”)
 - protocol - text “Art-Net”, “sACN”, “KiNET_PORTOUT”, or “KiNET_DMxOUT” are the only valid options
 - universe - text “default” or integer (0 - 63999). When adding destinations, items with a value of “default” are ignored. When replacing destinations, if no default item is imported, a default item is added automatically.
 - ip_addr - text e.g. “Local”, “Ethernet”, or “2.0.0.1”

Note: When importing address data for KiNET v2 (PORTOUT) fixtures, use the device.port notation (e.g. 12.1) and place that in the 'fix_univ' field of the csv file. You must still have a fix_addr column in your csv file, but any data in that column will be ignored. Remember to only import KiNET data into a context that has been previously set to use the KiNET protocol.

Errors will occur if any required formatting is missing. For example, if commas are missing then the entire fixture or destination will be ignored and an error such as the one below will be displayed:

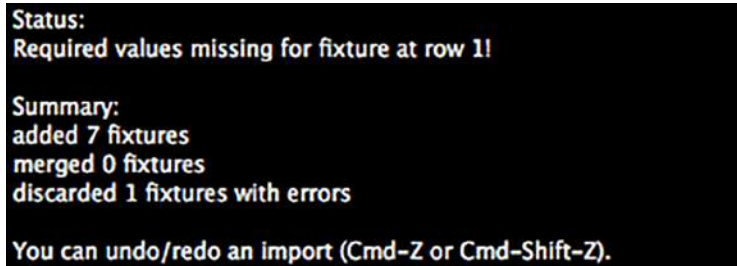

```
Status:
Required values missing for fixture at row 11

Summary:
added 7 fixtures
merged 0 fixtures
discarded 1 fixtures with errors

You can undo/redo an import (Cmd-Z or Cmd-Shift-Z).
```

- + If commas are included, but values are missing, default values will be substituted as follows:
 - fix_reference - fixture will be ignored (not imported)
 - fix_univ - univ = 0
 - fix_addr - addr = 0 (this is invalid)
 - fix_xpos - xpos = 0
 - fix_ypos - ypos = 0
 - fix_rotation - rotation = 0°
 - fix_name - name = fixture reference name
 - fix_group - group = none
 - fix_merge_univ - univ = 0
 - fix_merge_addr - addr = 0
 - fix_merge_type - type = No Merge
 - fix_pixfill - pixfill = 100%
 - fix_level - level = 100%
 - fix_refresh - refresh = 30Hz
 - fix_mask - mask = No
 - fix_slew - slew = 0 sec
 - protocol/universe - destination will be ignored (not imported)
 - ip_addr - no value
- + Each line must end in a standard line feed/carriage return.
- + When importing fixture data, the fixture reference model is used, and therefore, fixture profiles with names that match those in the csv file exactly must be present in Mbox Remote before importing the csv file.
 - Fixture profiles can be imported into Mbox Remote. Fixture profiles must be imported or created before the csv file is imported. (Refer to [“Importing Profiles”](#) on page 114.)
- + Fixture data in the csv file is not pixel level; rather it represents the fixture-level properties. Pixel positioning, size, shape, etc. will be created using the fixture reference model (i.e., taken from the fixture profile with the same name).

Fixture Auto-Place



Mbox Remote v5.6 adds functionality for Mbox Remote to automatically place pixel mapping fixtures onto the context grid through the use of camera scanning. Fixture Auto-Place allows complex fixture placements that might take a long time to lay out manually to be handled in a simpler fashion. The pixel mapping fixtures to be scanned then placed must be added to the context and patched in advance, but they don't need to be arranged on the context. Instead, Mbox Remote can turn on the first then last pixel of each fixture to determine its location and rotation within the camera's view, which corresponds directly to the context boundaries.

Guidelines:


- + Fixture auto-place requires a connection to Mbox in a pixel mapping live edit session. During the scanning process Mbox Remote tells Mbox to illuminate the scanned pixels, therefore Mbox must be running and have active control data - most importantly the Global Master's Pixel Mapping Intensity parameter at its default level of 255.
- + Fixture auto-place runs on a per-context basis and must be performed separately for each context in the pixel mapping configuration.
- + All fixtures to be scanned and automatically placed must already be patched in the context. The fixtures do not need to be placed in any organized fashion prior to the scan.
- + Fixture auto-place uses a connected AVFoundation video source (e.g. a USB camera) when scanning for fixtures. This video source must be configured as the context's background image source before any fixture auto-placement can happen.
- + Fixture auto-place will scan and place only selected fixtures, allowing for selective scan/placement, or rescan/ placement if fixtures move after a prior scan and placement session.
- + The context's sub-sampling dimensions, each fixture's pixel layout, and the camera's field of view and perspective all affect the accuracy of the scan and placement. To achieve the best results, trial and error may be required to position the camera and adjust the context's sub-sampling dimensions. When multiple fixture types with differing emitter sizes are to be scanned, it may be necessary to patch them on different contexts to correctly handle the automatic placement.
- + The auto-place process uses the dimensions of each fixture, as stored in the fixture's profile. When scanning, only the first and last pixel of the fixture are illuminated, and the fixture's position and rotation are derived from this. The fixture is never scaled, therefore the pixel mapping configuration's settings or individual fixture profiles may need adjustment to match how the camera views the fixtures in the real world.
- + Fixture scanning is best done in a dark environment with other fixtures - whether controlled by Mbox or not - turned off or dimmed and in a static state (i.e. not turning on and off) during the scanning process.
- + The quality and capabilities of the camera used for automatic placement scanning can affect the results. It is best to use a camera with a resolution of 1920x1080 and which does not constantly automatically adjust focus or iris.

Fixture Auto-Place procedure:

- Step 1. Launch the Mbox and Mbox Remote applications and make sure that Mbox Remote can see the Mbox and can add it to a session in Remote. Select that Mbox in Remote and switch to the Pixel Map tab, then start a live editing session.
- Step 2. Start by configuring a context in the normal fashion, setting the source, sampling dimensions, and sub-sampling dimensions. Make sure to select the correct output protocol.

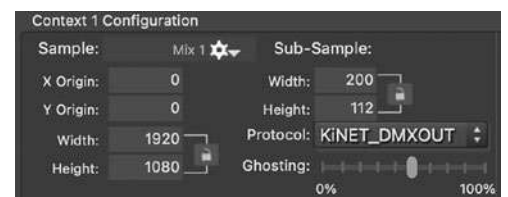


Step 3. Enable the AVFoundation background image type for the context, then select the desired AVFoundation video input device. The camera's input image will appear in place of the solid background color for the context.

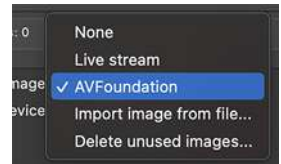


- a. The camera should be placed in a position from which it can see all pixels of all fixtures to be scanned and placed, from a perspective that corresponds as much as possible to where the audience will view the mapped fixtures. Start with the fixtures filling the camera's view as much as possible without extending beyond it. Filling the camera's view isn't required, but for many pixel mapping setups, it's best to spread the fixtures across the context rather than having them grouped in a smaller portion of the context. More complex pixel mapping setups with multiple fixture types and/or multiple contexts may require different arrangements of the fixtures within the camera's view.

Step 4. Add the desired fixtures to the context. While their actual location on the context grid isn't critical at this point, keep in mind how much space on the context they will eventually require - for the quantity of fixtures, their size, and the gaps between fixtures. If necessary, make initial adjustments to the context's sub-sampling width and height.

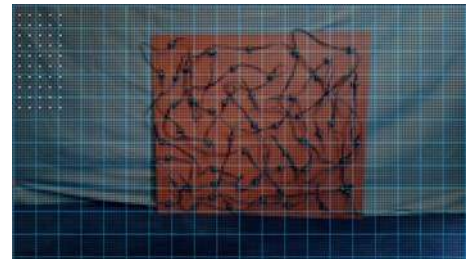


Step 5. Use the Fixtures > Patch table to make any required patch adjustments to the fixtures.

Step 6. To confirm camera positioning and setup, turn on all the fixtures to be mapped. This can be achieved by making Mbox display a white rectangle that covers the entire pixel mapping source area or by using the testing mode function built into Mbox Remote. Look at the context's background image to make sure that all fixtures illuminate and that their output is visible within the camera's view. If all pixels are not visible, the camera position or field of view should be adjusted.

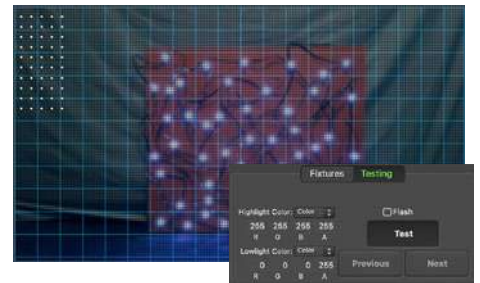


Step 7. With all fixtures turned on, check to see if the real-world emitter size of the pixels on some fixtures is noticeably different to that on others as viewed by the camera. While some pixels may appear to occupy approximately one sub-sampling rectangle of the context grid, others may be significantly larger or smaller than one sub-sampling rectangle.


- a. If the pixels of all fixtures are the same size but bigger/smaller than one sub-sampling rectangle it's simple to correct things - just increase or decrease the sub-sampling width and/or height of the context. Typically, higher resolution is better (larger sub-sampling width/height) than lower. At least up to the point where the hot spot of the emitter is larger than one sub-sampling rectangle or at the point where the context's sub-sampling dimensions are so large that output performance is affected.

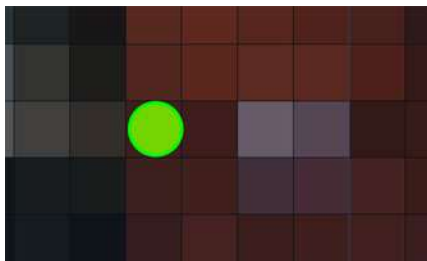

Sub-sampling dimensions too small; the hotspot of the illuminated pixel is not obvious and is smaller than one sub-sampling rectangle.

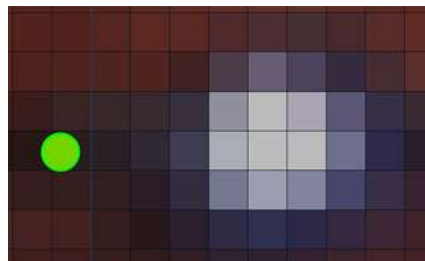

Sub-sampling dimensions too large; the hotspot of the illuminated pixel is larger than one sub-sampling rectangle.

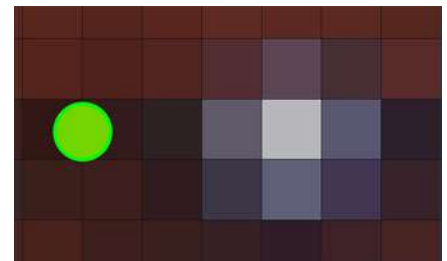


Sub-sampling dimensions just right; the hotspot of the illuminated pixel is about the same size as one sub-sampling rectangle.


- b. If fixtures have differing emitter sizes it is usually better to create additional contexts rather than try to find a compromise. Each context would then use appropriate sub-sampling dimensions for the emitter size of the fixtures it holds. Then the fixture auto-place process would be used separately on each context.
- c. When mapping multi-pixel fixtures, the pixel dimensions of these fixtures needs to be factored in when setting context width and height. If a fixture is 12 pixels wide, but appears to span a smaller or larger number of context rectangles with the current sub-sampling width and height, then the context sub-sampling needs to be adjusted.



Width & Height too large

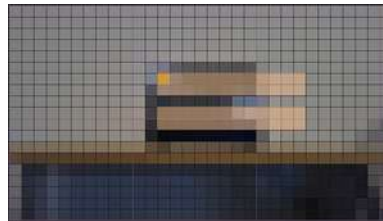

Width & Height too small

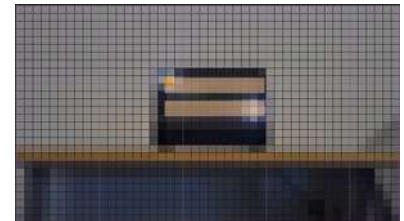

Width & Height about right

Step 8. With all fixtures patched, visible to the camera, and with the context having the appropriate sub-sampling width and height, turn off all fixtures - clear all layers in Mbox or disable the testing mode in Mbox Remote.

Step 9. Select any fixtures in the context that the auto-place should scan (this doesn't have to be all fixtures) then right-click on one of the selected fixtures and select "Fixture Auto-Place" from the contextual menu. If that option is grayed out then either a live edit session is not active, the Mbox server is not online, or the context does not have an AVFoundation video input device selected as the background image.



Step 10. The Fixture Auto-Place window will open, showing the camera's input image without pixelation, a table showing the selected fixtures (the fixtures to be scanned) and the controls to perform an automatic scan or manual placement. Automatic scanning will step through all of the fixtures in the table, one after another. Manual placement allows manual marking of the first and last pixel of individual fixtures - either for quick, simple placement or to override or correct a fixture's placement if the automatic scan fails or provides an undesirable result.

Live Camera Image

Automatic Scan Controls

Manual Placement Controls

Discard Results

Pixel Illumination Level

Selected Fixtures Table


#	ref	univ	addr	xpos	ypos	rotn
1	RGB	1	1	2.20	3.60	0.00
2	RGB	1	4	6.72	3.60	0.00
3	RGB	1	7	11.25	3.60	0.00
4	RGB	1	10	15.77	3.60	0.00
5	RGB	1	13	20.30	3.60	0.00
6	RGB	1	16	2.20	8.09	0.00
7	RGB	1	19	6.72	8.09	0.00
8	RGB	1	22	11.25	8.09	0.00
9	RGB	1	25	15.77	8.09	0.00
10	RGB	1	28	20.30	8.09	0.00
11	RGB	1	31	2.20	12.58	0.00
12	RGB	1	34	6.72	12.58	0.00
13	RGB	1	37	11.25	12.58	0.00
14	RGB	1	40	15.77	12.58	0.00
15	RGB	1	43	20.30	12.58	0.00
16	RGB	1	46	2.20	17.07	0.00
17	RGB	1	49	6.72	17.07	0.00
18	RGB	1	52	11.25	17.07	0.00
19	RGB	1	55	15.77	17.07	0.00
20	RGB	1	58	20.30	17.07	0.00
21	RGB	1	61	2.20	21.56	0.00
22	RGB	1	64	6.72	21.56	0.00
23	RGB	1	67	11.25	21.56	0.00
24	RGB	1	70	15.77	21.56	0.00
25	RGB	1	73	20.30	21.56	0.00
26	RGB	1	76	2.20	26.05	0.00
27	RGB	1	79	6.72	26.05	0.00
28	RGB	1	82	11.25	26.05	0.00
29	RGB	1	85	15.77	26.05	0.00
30	RGB	1	88	20.30	26.05	0.00

Step 11. For automatic scanning:

- The Begin Automatic Scan button starts a full, automated scan of all fixtures in the table. This process steps through all fixtures in the table, illuminating each fixture's first pixel then its last pixel if it has more than one pixel. During the scan, a green target will be shown overlaid on the camera image for each successful pixel location. Fixtures with a successful scan - i.e. first and last pixel (as applicable) successfully located - are then marked in green in the table, while those with a failed scan are marked in red.
- The Cancel Automatic Scan button can be used to cancel an automatic scan at any time during the scanning process.
- When an automatic scan completes an alert will appear to show the successful and failed counts, and providing options to: end the fixture auto-place session and commit the scanned locations of successful fixtures only, end the fixture auto-place session and discard all results, or to keep the session open with the successful scan results. The first two options will immediately close the Fixture Auto-Place window. The third option is useful if only a few fixtures fail to scan and a manual placement can be made for those fixtures.
- If at any time during an automatic scan more than 10% of the selected fixtures could not be scanned successfully, the automatic scan process is stopped and the alert shown with an indication of the failures.
- After a scan completes, and while the Fixture Auto-Place window is still open, clicking the Discard All Results button will result in all scan results, successful or failed, being cleared.

Number of Selected Fixtures: 50

#	ref	univ	addr	xpos	ypos	rotn
1	RGB	1	1	54.87	100.01	0.00
2	RGB	1	4	63.95	92.95	0.00
3	RGB	1	7	54.51	77.62	0.00
4	RGB	1	10	78.02	86.04	0.00
5	RGB	1	13	112.35	98.47	0.00
6	RGB	1	16	2.40	8.18	0.00
7	RGB	1	19	6.72	8.08	0.00
8	RGB	1	22	11.04	8.08	0.00
9	RGB	1	25	15.37	8.08	0.00
10	RGB	1	28	19.69	8.08	0.00
11	RGB	1	31	23.99	12.58	0.00
12	RGB	1	34	6.72	12.58	0.00

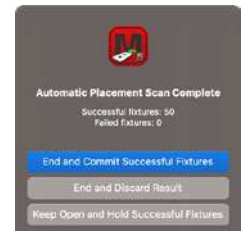


Note: When using either automatic scanning or manual placement, Mbox sets the illuminated pixel to full intensity in white. The Level slider can be used to reduce the pixel output level if full intensity causes issues due to image blooming, automatic camera irisling, or reflections.

Step 12. For manual placement, the first step is to select the desired fixture in the table. The selected fixture's first and last (if applicable) pixels' current location will show an overlaid green target on the camera view with a green line between the two locations as applicable. The Light First Pixel button will be enabled and its text colored white. Next:

- Click the Light First Pixel button to illuminate the first pixel of the selected fixture, the button's text will change to orange and the green target overlay for the first and last pixels will disappear. While the cursor is hovering over the camera view, orange crosshairs will appear, helping to show exactly where the cursor is. Use the camera view's zoom ([⌘ +] to zoom in and [⌘ -] to zoom out) and x/y scrolling to get the best possible view of the illuminated pixel.
- Click on the center of the illuminated pixel/emitter on the camera view to mark its position. A yellow target will be shown at the clicked location and the crosshairs and Light First Pixel button's text will change to green. If the fixture has only one pixel, the Apply Manual Placement button will enable and its text will be colored green. The x and y position of the first pixel will be noted below the buttons. Fixtures with only one pixel have no specific rotation value, as this cannot be derived from only one pixel.



- c. If the fixture has more than one pixel, the Light Last Pixel button will enable and its text colored white. Click on the Light Last Pixel button to illuminate the fixture's last pixel, its text color will change to orange. The orange crosshairs will be visible over the camera view. Click on the illuminated pixel/emitter on the camera view to mark its position. An orange target will be shown at the clicked location. The Light Last Pixel button's text color will change to green. The Apply Manual Placement button will enable and its text will be colored green.
- d. Finally, click the Apply Manual Placement button to confirm the first and last pixel locations and perform the calculation of the fixture's position and rotation. A pair of green targets with a green line drawn between them will be overlaid on the camera view - representing the located first and last pixel and the line between them. The fixture will be marked in green in the table.

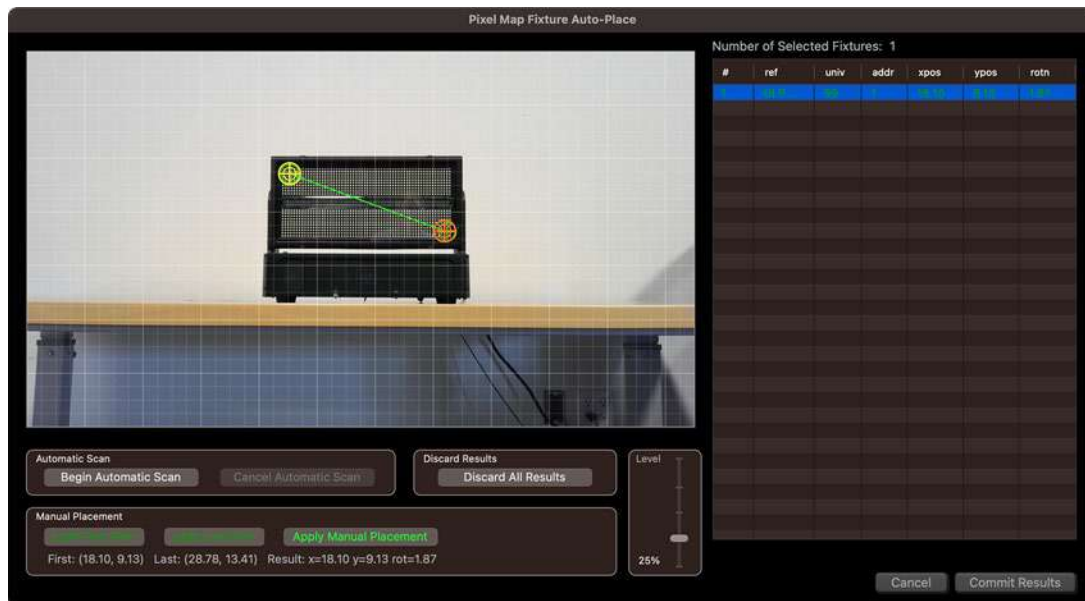

Note: Before/after the Apply Manual Placement button is pressed, it is possible to click either the Light First Pixel or Light Last Pixel button to relocate that point. To stop the manual placement process, click on an empty row in the table.

Step 13. After an automatic scan or manual placement has taken place, it is possible to select a fixture in the table to cause the green target markers for the fixture's first and last pixel to be overlaid on the camera view. This can be useful to confirm the results of a scan or to make sure that the context's sub-sampling width and height match the actual size of a multi-pixel fixture:

- a. With a multi-pixel fixture selected, both the first and last pixel will display target overlays on the camera view, with a line drawn between them. Keep in mind that the actual size of a fixture is determined by the fixture profile and its pixel layout in the profile. The scan or manual placement uses the last pixel's position to determine rotation, not actual fixture size. Therefore, if the overlaid target for the fixture's last pixel is not located directly on top of the actual last pixel in the camera's view, then the context's sub-sampling width and height probably need to be adjusted.




Width & Height too large



Width & Height too small



Width & Height about right

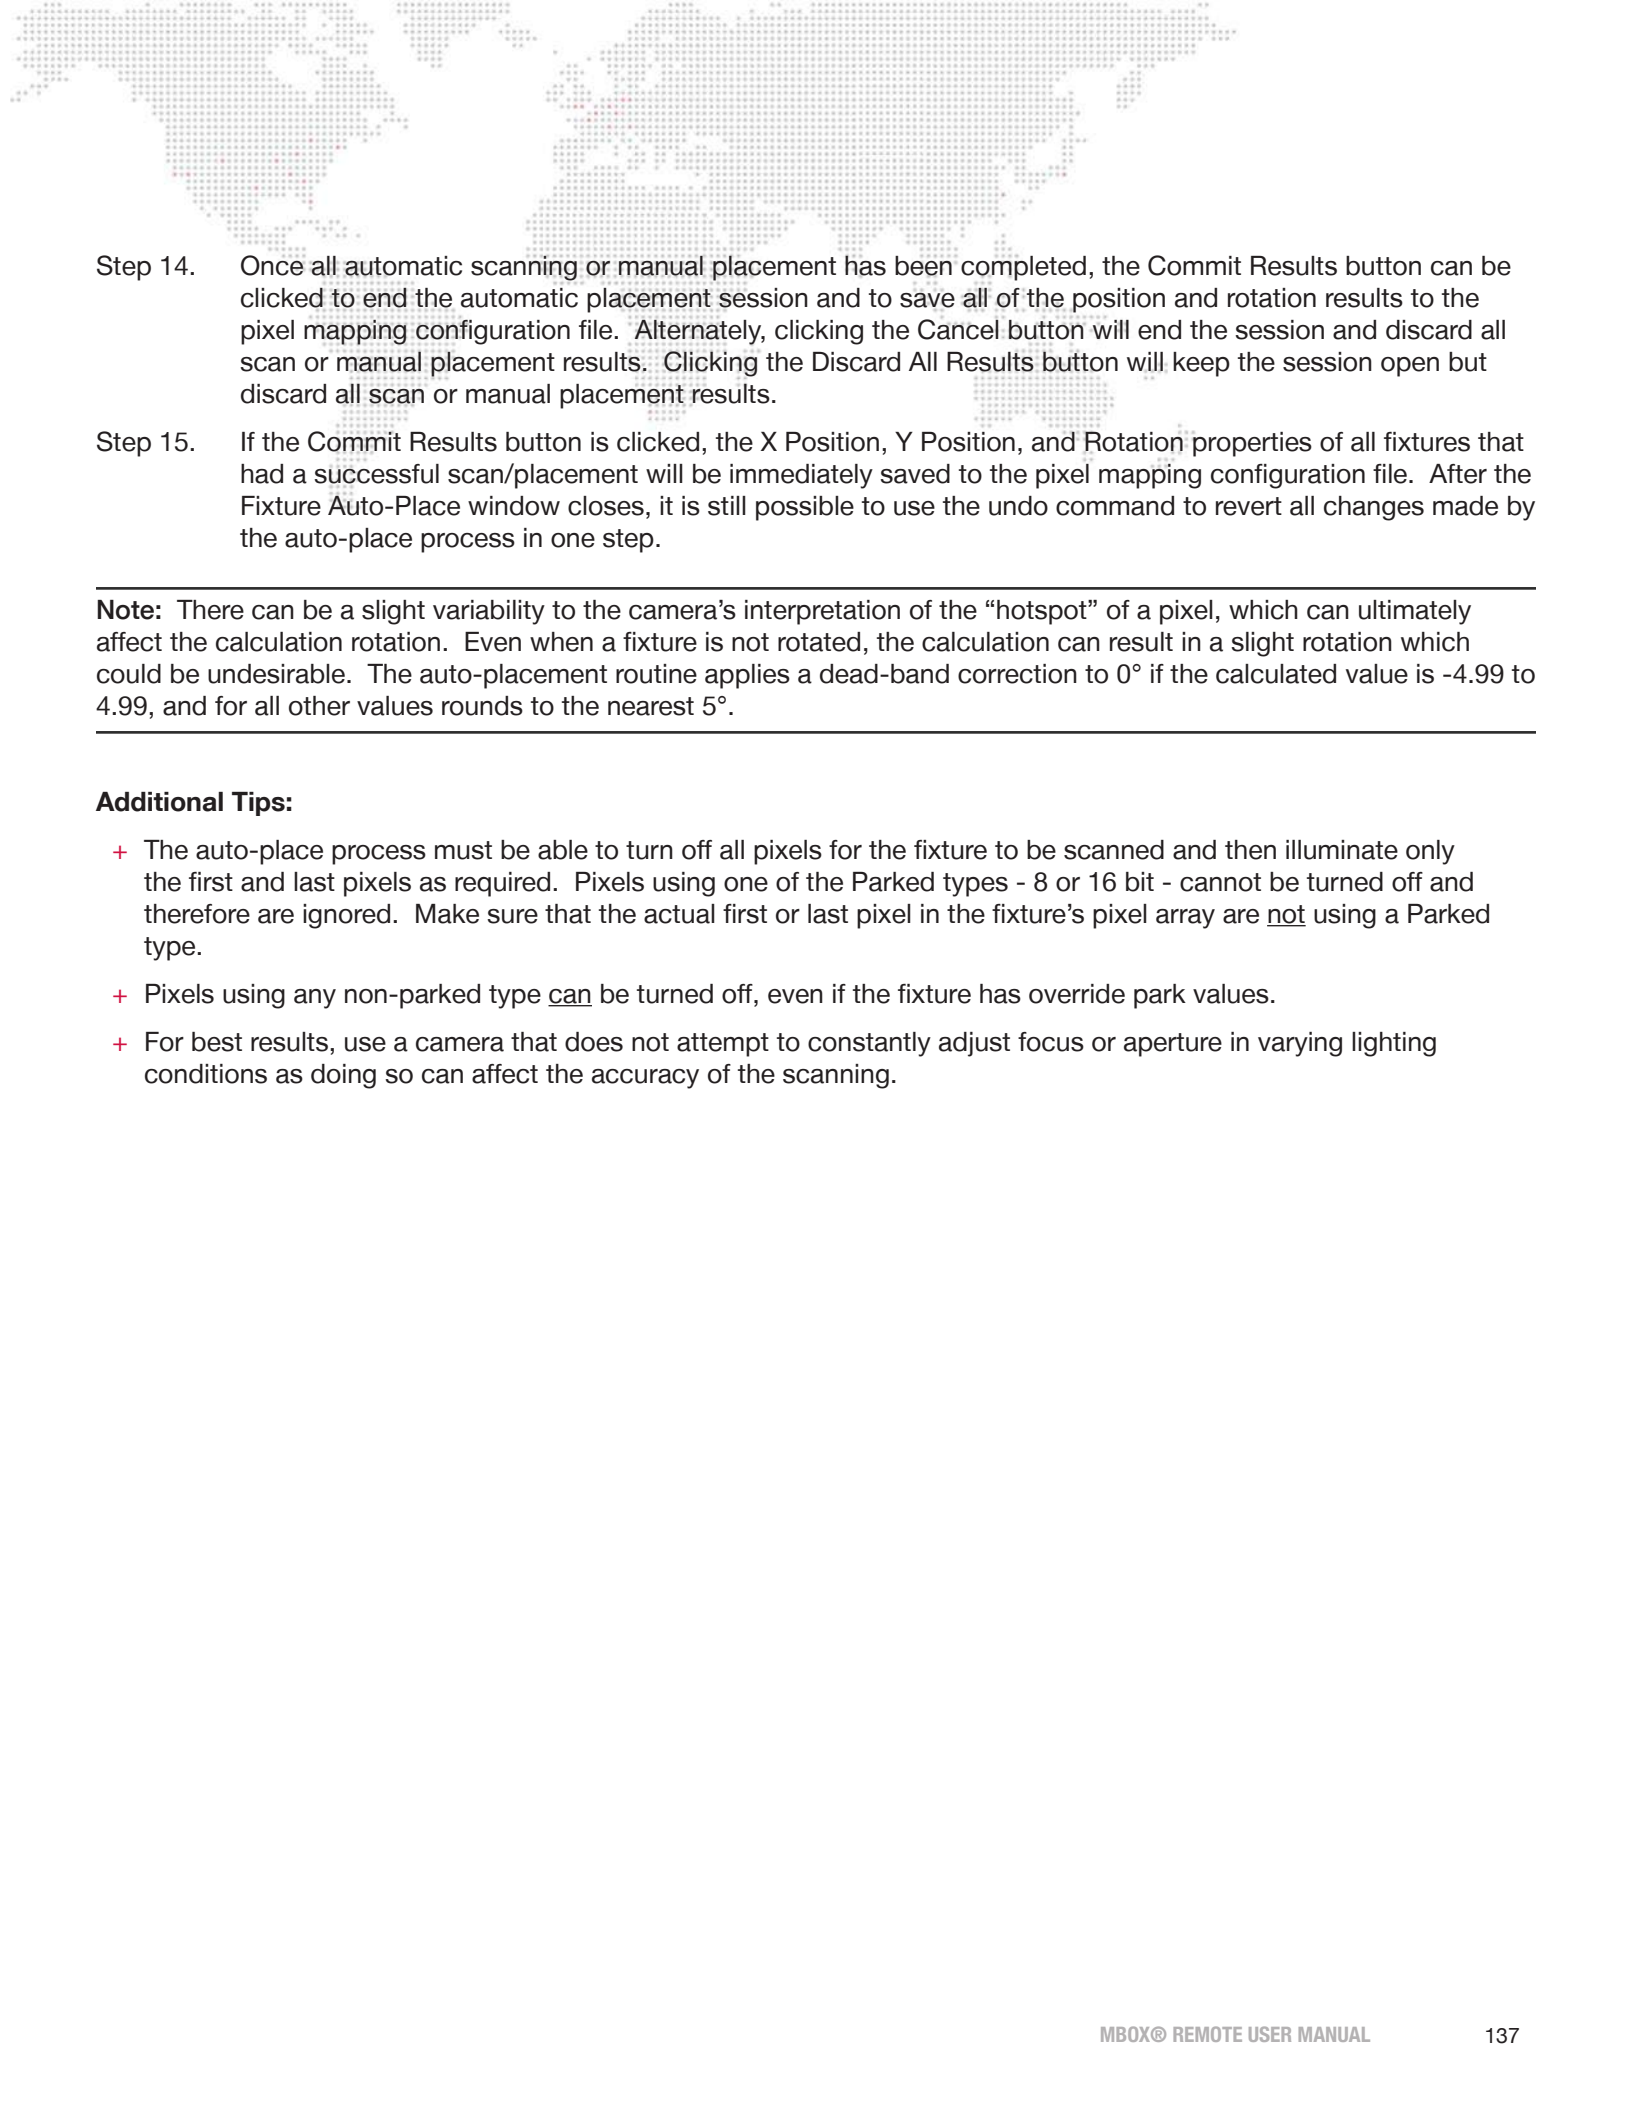- 
- Step 14. Once all automatic scanning or manual placement has been completed, the Commit Results button can be clicked to end the automatic placement session and to save all of the position and rotation results to the pixel mapping configuration file. Alternately, clicking the Cancel button will end the session and discard all scan or manual placement results. Clicking the Discard All Results button will keep the session open but discard all scan or manual placement results.
- Step 15. If the Commit Results button is clicked, the X Position, Y Position, and Rotation properties of all fixtures that had a successful scan/placement will be immediately saved to the pixel mapping configuration file. After the Fixture Auto-Place window closes, it is still possible to use the undo command to revert all changes made by the auto-place process in one step.

Note: There can be a slight variability to the camera's interpretation of the "hotspot" of a pixel, which can ultimately affect the calculation rotation. Even when a fixture is not rotated, the calculation can result in a slight rotation which could be undesirable. The auto-placement routine applies a dead-band correction to 0° if the calculated value is -4.99 to 4.99, and for all other values rounds to the nearest 5°.

Additional Tips:

- + The auto-place process must be able to turn off all pixels for the fixture to be scanned and then illuminate only the first and last pixels as required. Pixels using one of the Parked types - 8 or 16 bit - cannot be turned off and therefore are ignored. Make sure that the actual first or last pixel in the fixture's pixel array are not using a Parked type.
- + Pixels using any non-parked type can be turned off, even if the fixture has override park values.
- + For best results, use a camera that does not attempt to constantly adjust focus or aperture in varying lighting conditions as doing so can affect the accuracy of the scanning.



IMAGE REMAPPING

Overview

What is Image Remapping

The Image Remapping functionality of the Mbox software allows the creation of one or more configurations of two-dimensional rectangular “screen objects” that may be used to reposition, copy, or alter pixels on a layer, while keeping everything absolutely pixel-accurate.

Screen objects within each configuration receive the texture that is provided by 2D content used on the layer. Two separate set of coordinate values determine first - which portion of the source texture is sampled from the content, and then second - where that imagery is drawn on the Global Surface. This allows different portions of a layer’s imagery to be moved, copied, chopped up, and/or rescaled. These tools can be used to aid composition or to rearrange onscreen pixels to better suit the configuration of the output device.

Each screen object can also have extra control parameters added, allowing for changes to the imagery shown on the screen object. Standard control parameters for image remapping allow for intensity or opacity changes, position changes, rotations, and color changes. Additional parameters allow for further mastering and the creation of repetitive identical elements with a regular offset.

The Mbox application’s image remapping file (found at Mbox/MultiScreenData.plist) can hold multiple configurations, and each configuration may be made up of multiple screen objects that can each have unique controls and mapping properties. This structure creates a hierarchical relationship: File > Configuration > Screen Object > Control. External control over screen object parameters is handled through Art-Net or sACN input to the Mbox server.

Note: At the Designer license level, Mbox can have 255 Image Remapping configurations, the Studio+ license level allows 16, Studio license level 8, and Mini license level 2.

For More Information

Image Remapping is covered in detail in the Mbox manual. Refer to Chapter 6: Image Remapping in the Mbox manual document for a full explanation of the user interface, plus detailed information (and a tutorial) on setting up a remapping configuration.



APPENDIX A. MBOX NETWORKING GUIDELINES

Concepts

The majority of communications to and from Mbox use ethernet protocols. This means that ethernet networks route the data into the Mbox server and from the server to other connected devices. Because all of these protocols need to live in harmony, steps need to be taken to avoid interference between protocols, and to maximize the available network bandwidth/speed. Due to these requirements, it is recommended that the computer used as an Mbox server have more than one network interface. For more complex setups, three or four network interfaces may be preferable.

While all the network interfaces on a computer could be connected to the same network to gain some amount of additional bandwidth, doing so would bypass the desire to keep certain protocols separate. Therefore, it is much more useful if each network interface on the computer is configured for and connected to a separate physical ethernet network. If multiple interfaces must be connected to the same physical network, then the network should have a system of VLANs enabled to help segregate different protocols.

Connecting more than one network interface to different networks is only the first step. Each interface needs to have its IP Address and subnet mask set correctly for the network that it is being connected to. Getting the IP Address and subnet mask correct ensures that communications to and from the computer will leave the computer through the correct interface and arrive at the intended destination without any ambiguity or loss of data.

Concept definitions:

- + **Network Interface** - the physical ethernet connection (typically RJ-45) on the computer that a cable is connected to in order to connect the computer to a physical network.
- + **Network** - a group of devices connected to each other that can potentially communicate using ethernet IP protocols. The word “network” describes not just the physical connection of multiple devices, but also the “web” of electronic communication between them.
- + **Subnet (subnetwork)** - a logical subdivision of a network such that multiple interfaces can be connected to the same physical network, but are placed on different subdivisions of that network for the purposes of routing or for keeping some communications separate. (Note: a subnet is not the same as a VLAN.)
- + **IP Address** - an interface property using the dot-decimal (e.g., 2.0.0.123) notation, where each of the four numbers separated by decimal points is referred to as an octet (because each is an 8-bit number). In combination with the interface’s subnet mask, the octets in the IP address designate either the device’s sub-network or the device’s unique identifier on that subnet.
- + **Subnet Mask** - a second interface property, also using dot-decimal notation (e.g., 255.0.0.0). The value of each octet in the subnet mask determines which of the octets in the device’s IP address specify the sub-network and which specify the interface’s unique identifier on that sub-network. The subnet is specified by setting one or more of the octets in the subnet mask to a value other than 0.

Subnet Masking Basics

For pretty much all communication to and from Mbox, each octet in an interface's subnet mask will be set to either 0 or 255. Values other than 0 or 255 can be used for more complicated subnetting, but are typically not needed with Mbox and won't be discussed here.

In order to understand how an interface's subnet mask works, it needs to be viewed together with the interface's IP address. If an octet in the subnet mask has a value of 255, then the corresponding octet in the interface's IP address is used to designate the subnet that the interface belongs to. If an octet in the subnet mask has a value of 0, the corresponding octet in the IP address is used as part of the interface's unique identifier on that subnet. Within the structure of sub-networks and unique identifiers, it is possible to have multiple interfaces on the same subnet, each being uniquely identifiable. Data can be sent to all interfaces in the subnet by broadcasting, to groups by multicasting, or to individual members by unicasting.

How the IP Address and Subnet Mask Work Together

For a device with the IP address of 192.168.0.123 and a subnet mask of 255.255.0.0, the first two octets of the IP address "192.168" are used to specify the sub-network, and the last two octets "0.123" specify the device's unique identifier within that network.

	Network		Unique ID	
Subnet Mask:	255	255	000	000
IP Address:	192	168	000	123

Depending on the number of octets with a value of 255 in the subnet mask, different descriptions may be given to the interface. A subnet mask of 255.0.0.0 leads to a description of "/8" for the interface. Combined with the interface's IP address, this information would be written as "192.168.0.123/8". A subnet mask of 255.255.0.0 gets a description of "/16" and 255.255.255.0 a description of "/24".

Note: There is no such thing as a /32 subnet mask, as the last octet in an interface's IP address must always be used as a unique identifier.

Routing Ethernet Communications

- + **Full Broadcast** - data packets that are sent to the full broadcast destination IP address (255.255.255.255) will be received by all devices on the physical network provided the packets are not blocked by a switch or router between devices. Full broadcast is akin to shouting in a crowded room. Everyone can hear the yelling, but must decide whether to listen or not. Full broadcast is simple and guarantees for the most part that every device on the network can get the data. However, it places a lot of data onto the network, thus using up more of the available bandwidth. Another downside is that receiving devices may need to spend more time than is desirable to filter out data that they don't need to listen to.
- + **Subnet Broadcast** - packets that use a subnet broadcast IP address (x.255.255.255, x.x.255.255, or x.x.x.255) will only be received by interfaces on the matching subnet - i.e., those with a subnet mask that places them into the same subnet. This is one step down from shouting, as subnet filtering allows receiving devices to immediately discard any subnet broadcast data that isn't destined for their subnet.

To obtain the subnet broadcast address for a particular subnet:

- Step 1. Take the IP address for a device on that subnet and the subnet mask for that device.
- Step 2. Line the address and subnet mask up one above the other, in four columns with each octet being a column.
- Step 3. In columns where the subnet mask has a value of 255, write down the value from the IP address' octet.
- Step 4. In columns where the subnet mask a value of 0, write down a value of 255.

IP Address:	192	168	000	123
Subnet Mask:	255	255	000	000
Subnet Broadcast Address:	192	168	255	255

- + **Unicast** - packets using a specific, unique destination IP address. This is most comparable to two people having a single face-to-face conversation without anyone else able to hear them. Interfaces can have more than one unicast communication at a time. Unicasting cuts down on network overhead as it places the minimum amount of data on the network and because packets are addressed specifically, it eliminates the requirements that a device filter out data it doesn't need to listen to.
- + **Multicast** - packets that are sent to an IP address belonging to a predetermined range of IP addresses. Interface's may join a multicast group to be able to send and receive packets within the group. This is comparable to a group of listeners who all choose to listen to one speaker, or to other members of the group who take on the role as speaker. The conversation doesn't leave the group.


It is possible for interfaces to send packets to or receive packets sent to a multicast address without joining the corresponding multicast group. But unless the interfaces join the multicast group, switches between the devices may not forward the multicast packets correctly.

Most of the time a /8 subnet mask (255.0.0.0) can be used with Mbox. When using multiple interfaces on the same computer, with each having a /8 subnet mask, a general rule is to make sure that each interface has a different first octet. Otherwise there may be ambiguity when trying to determine which interface to use for various communications. While all interfaces on a computer may receive packets from any source, packets sent by the computer almost always should leave through only one interface. If that interface is not on the correct subnet (or indeed the correct physical network) then the packets will never get to the intended destination.

CAUTION! IP addresses starting with 2 and 192 and having a subnet mask of 255.0.0.0 are actually publicly routable IP addresses. Therefore, if the computer has an interface connected to a router (e.g. connecting to the internet), and also has an interface with a 2./8 or 192./8 then there may be some connection issues with certain websites.

For example, if two interfaces are configured with IP addresses of 2.0.0.1 and 2.1.0.1 and both have a subnet mask of 255.0.0.0. -> Both interfaces are on the same sub-network (i.e. 2.x.x.x), but have unique IDs on that network. Because this is a valid IP scheme, the computer will allow this; but using this setup will cause issues with Mbox software. One or both of these interfaces should use a /16 subnet mask instead of the /8 subnet mask, thereby placing the two interfaces onto different subnets. -> 2.1.x.x and 2.0.x.x

With all protocols, especially those detailed below, it's best that one and only one interface on the computer be on the same subnet as the destination devices. When the computer is told to output data to a specific destination device it avoids confusion if only one interface can "talk" to that device.

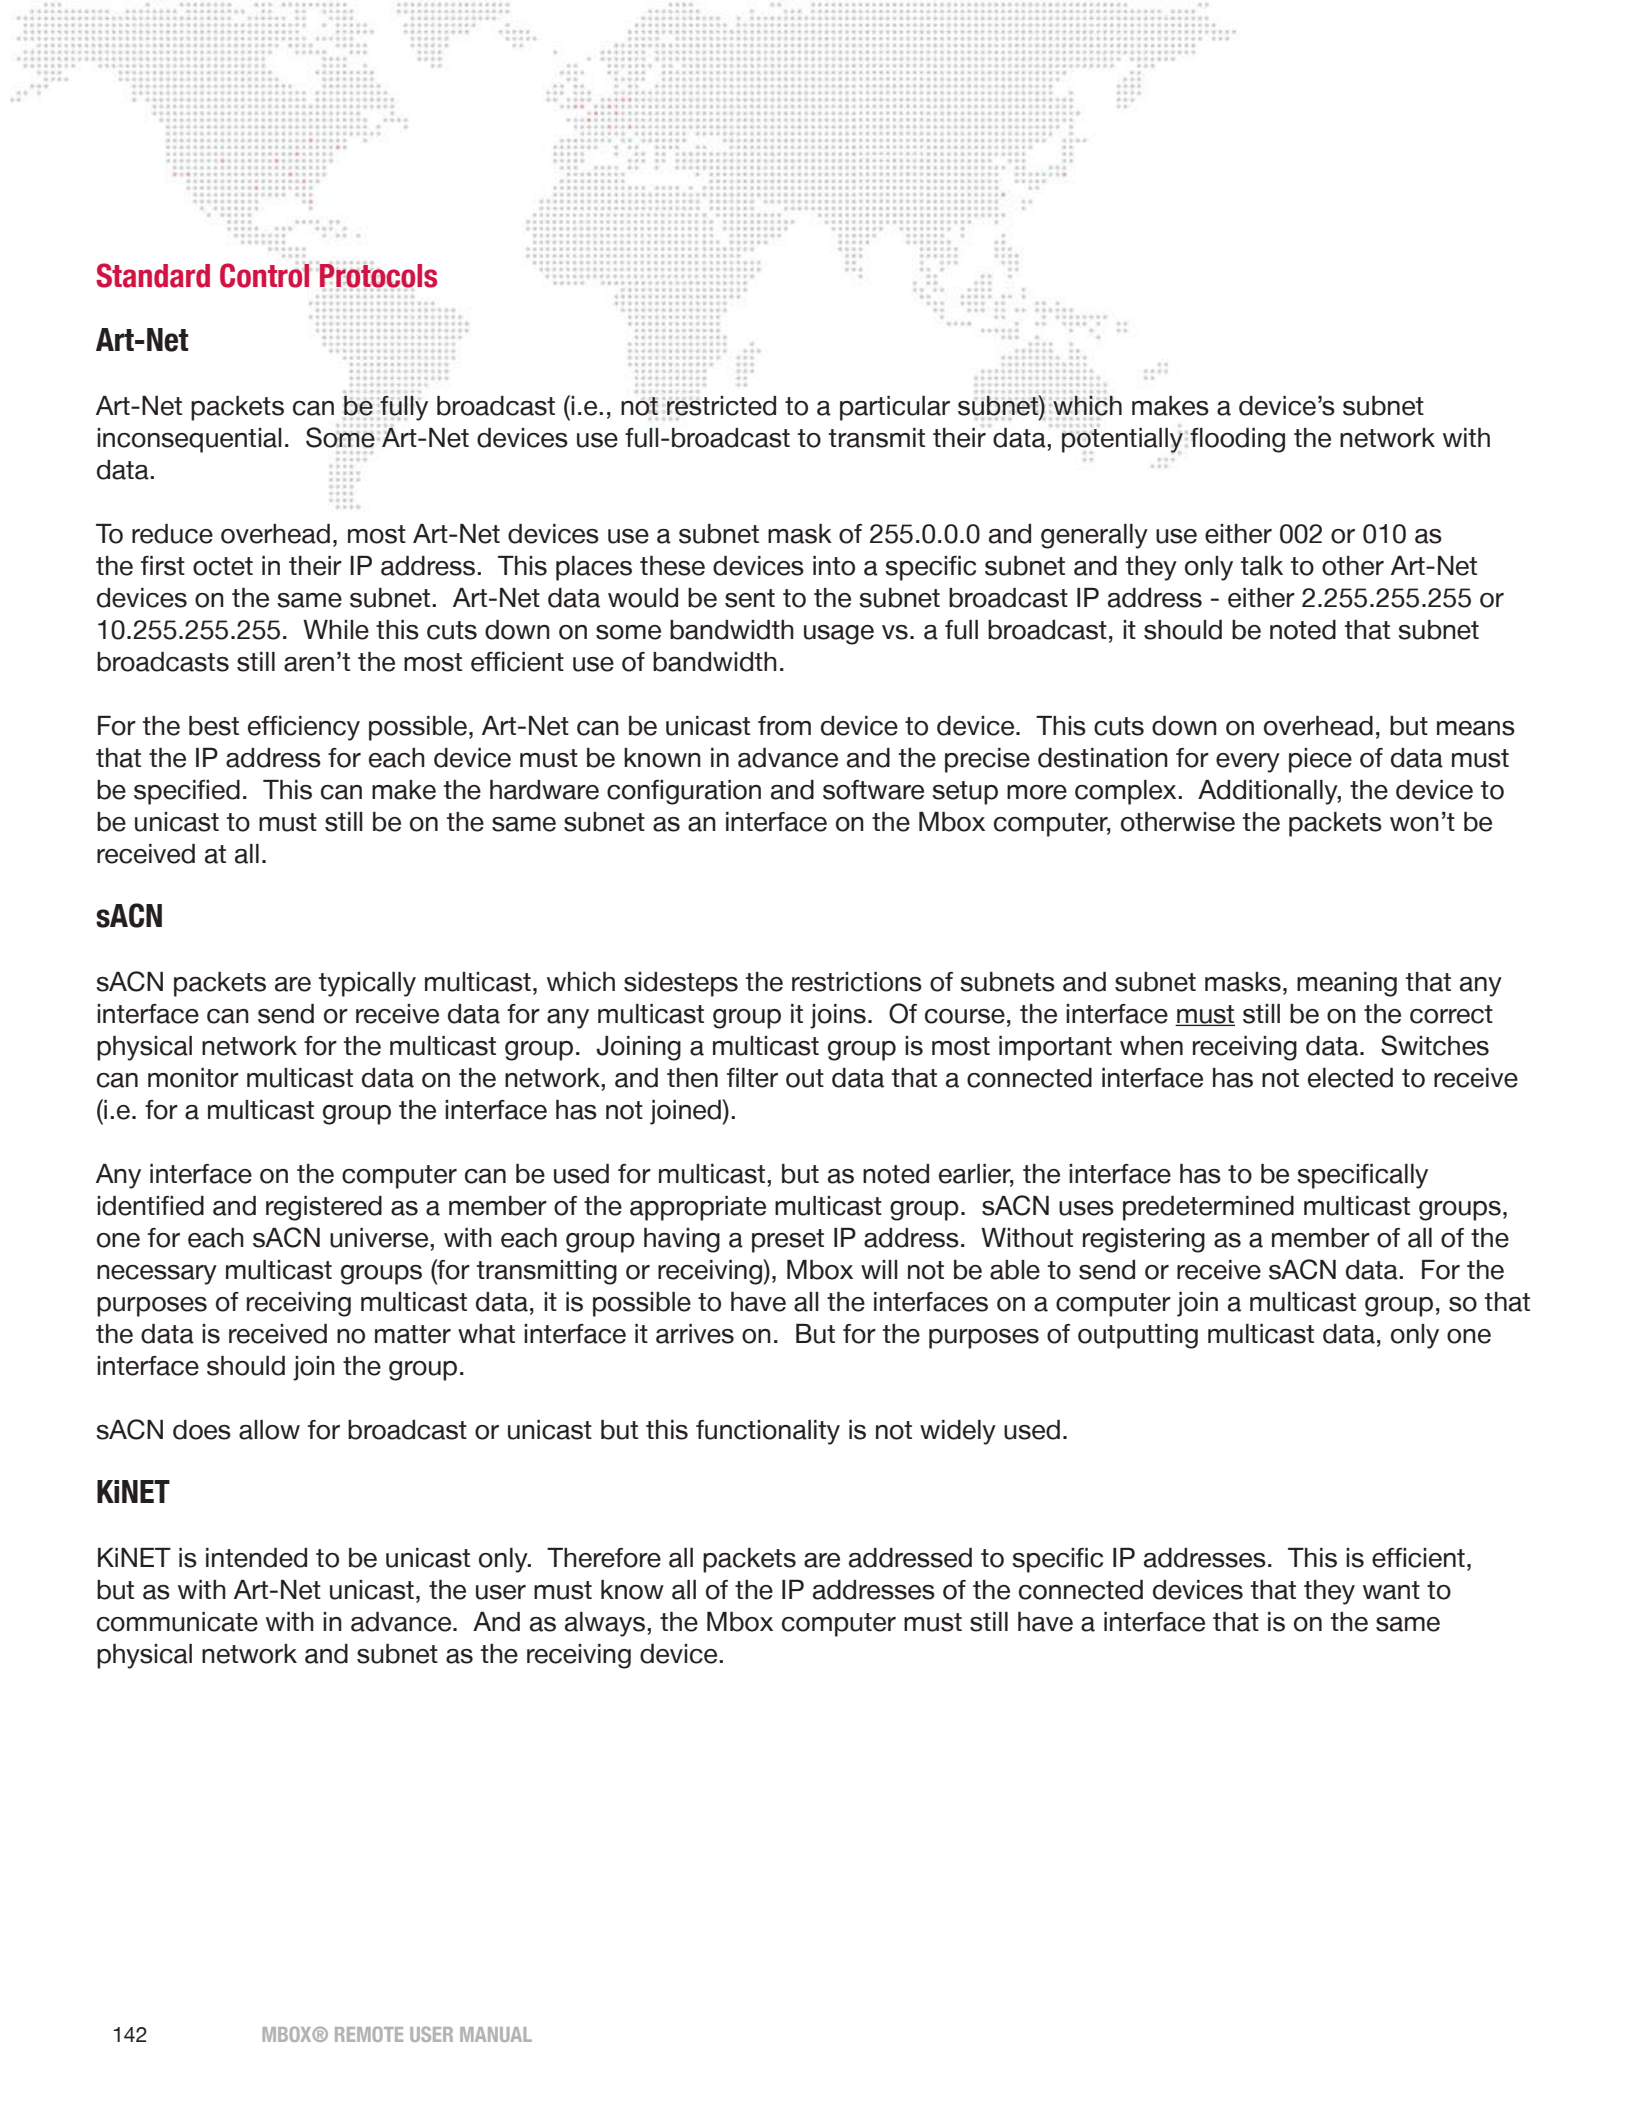

Standard Control Protocols

Art-Net

Art-Net packets can be fully broadcast (i.e., not restricted to a particular subnet) which makes a device's subnet inconsequential. Some Art-Net devices use full-broadcast to transmit their data, potentially flooding the network with data.

To reduce overhead, most Art-Net devices use a subnet mask of 255.0.0.0 and generally use either 002 or 010 as the first octet in their IP address. This places these devices into a specific subnet and they only talk to other Art-Net devices on the same subnet. Art-Net data would be sent to the subnet broadcast IP address - either 2.255.255.255 or 10.255.255.255. While this cuts down on some bandwidth usage vs. a full broadcast, it should be noted that subnet broadcasts still aren't the most efficient use of bandwidth.

For the best efficiency possible, Art-Net can be unicast from device to device. This cuts down on overhead, but means that the IP address for each device must be known in advance and the precise destination for every piece of data must be specified. This can make the hardware configuration and software setup more complex. Additionally, the device to be unicast to must still be on the same subnet as an interface on the Mbox computer, otherwise the packets won't be received at all.

sACN


sACN packets are typically multicast, which sidesteps the restrictions of subnets and subnet masks, meaning that any interface can send or receive data for any multicast group it joins. Of course, the interface must still be on the correct physical network for the multicast group. Joining a multicast group is most important when receiving data. Switches can monitor multicast data on the network, and then filter out data that a connected interface has not elected to receive (i.e. for a multicast group the interface has not joined).

Any interface on the computer can be used for multicast, but as noted earlier, the interface has to be specifically identified and registered as a member of the appropriate multicast group. sACN uses predetermined multicast groups, one for each sACN universe, with each group having a preset IP address. Without registering as a member of all of the necessary multicast groups (for transmitting or receiving), Mbox will not be able to send or receive sACN data. For the purposes of receiving multicast data, it is possible to have all the interfaces on a computer join a multicast group, so that the data is received no matter what interface it arrives on. But for the purposes of outputting multicast data, only one interface should join the group.

sACN does allow for broadcast or unicast but this functionality is not widely used.

KiNET

KiNET is intended to be unicast only. Therefore all packets are addressed to specific IP addresses. This is efficient, but as with Art-Net unicast, the user must know all of the IP addresses of the connected devices that they want to communicate with in advance. And as always, the Mbox computer must still have a interface that is on the same physical network and subnet as the receiving device.

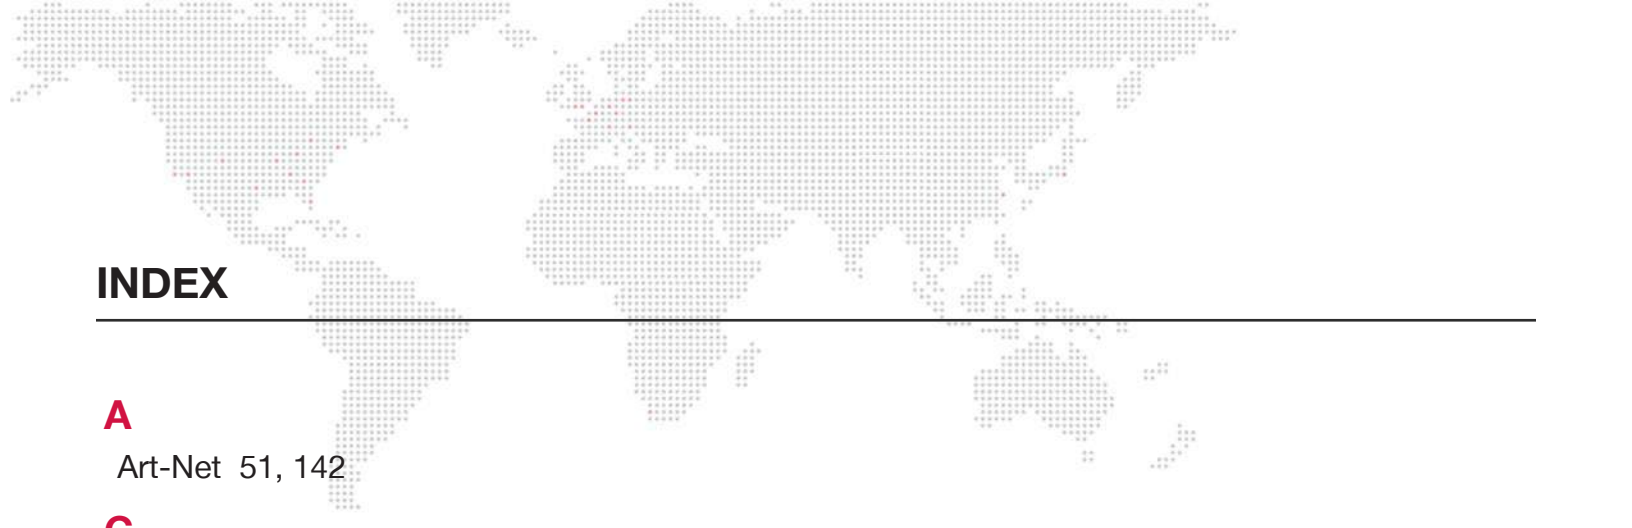

INDEX

A

Art-Net 51, 142

C

Content Management 11

- Archiving 20

 - Configuration 20

 - Restoring 20

- File Conflicts 21

- Managing Content 13

 - Configuring Network Bandwidth 13

 - Master/Member Roles 14

 - Network Performance Monitoring 13

 - Reverse Sync 18

 - Selecting Content to Sync 15

 - Sync History 19

 - Synchronizing Content 16

- Monitor and Manage Modes 23

- Networking Hardware 12

- Newer File Warning 22

- Overview 11

 - Terminology 11

E

Ethernet

- Broadcast 140

- Interface 50, 139

- IP Address 139

 - Pixel Mapping Destination 93

- Multicast 141

- Network 139

- Subnet 139

- Subnet Mask 139

- Unicast 141

F

Full Broadcast 140

I

Image Remapping 24



K

KiNET 51, 91, 142

M

Mbox Daemon 3

Multicast 141

N

Networking

Full Broadcast 140

Multicast 141

Networking for Content Management 12

Subnet Broadcast 140

Unicast 141

P

Pixel Mapping 48

Background Image

Live Stream 98

Still Image 98

Configuration

Compatibility 52

Live Editing 58

Offline Editing 57

Session Types 56

Sync Between Servers 53

Contexts

Deleting 67

Destinations 91, 93

IP Address 93

Protocols 91

Enabling 54

Fixture Auto-Place 132

Fixture Profiles 101

Creating 101

Editing 112

Fixture Profile Model 52

Import 114

Parked Pixels 111

RGBAmber Pixels 107

Fixtures 80, 84

Copy and Paste 78

Editing Properties 84


Fixture Profile Model 52

Geometry Tools 81

Re-Addressing 75



- In Multiple Fixtures Window 76
 - In Patch Table 75
 - Re-Sequencing 76
- Group Control 115
 - Control Mode 117
- Import/Export 128
- Merge 118, 124
- Output
 - Ethernet Interface 50
 - Protocol 51
- Pixel Map Tab 55
- Pixel Type
 - Parked 111
 - RGBAmber 107
- Sources 62, 64
 - Adding and Configuring 64
 - Dimensions 62
- Testing 126
- Projection Mapping 25
 - 3D Object Creation Guidelines 45
 - Advanced Mode 34
 - ModelInfo 45
 - Controls 45
 - Keystone/Warp 45
 - Model Matrix 45
 - Properties 45
 - Projection Setup 34
 - Camera Setup 34
 - Output Setup 34
 - Topography 36
 - Geometry 38
 - ModelInfo 41
 - ModelInfo > Controls 42
 - ModelInfo > Keystone/Warp 44
 - ModelInfo > Model Matrix 41
 - ModelInfo > Properties 41
 - Multi Model 44
 - Texture 39
 - Vignettes 40
 - Vignettes 45
 - Basic Projection Mode 27
 - Keystone/Warp 27
 - Output Setup 27
 - Vignettes 30
- Protocols
 - Art-Net 51, 142
 - For Pixel Mapping 91
 - KiNET 51, 142

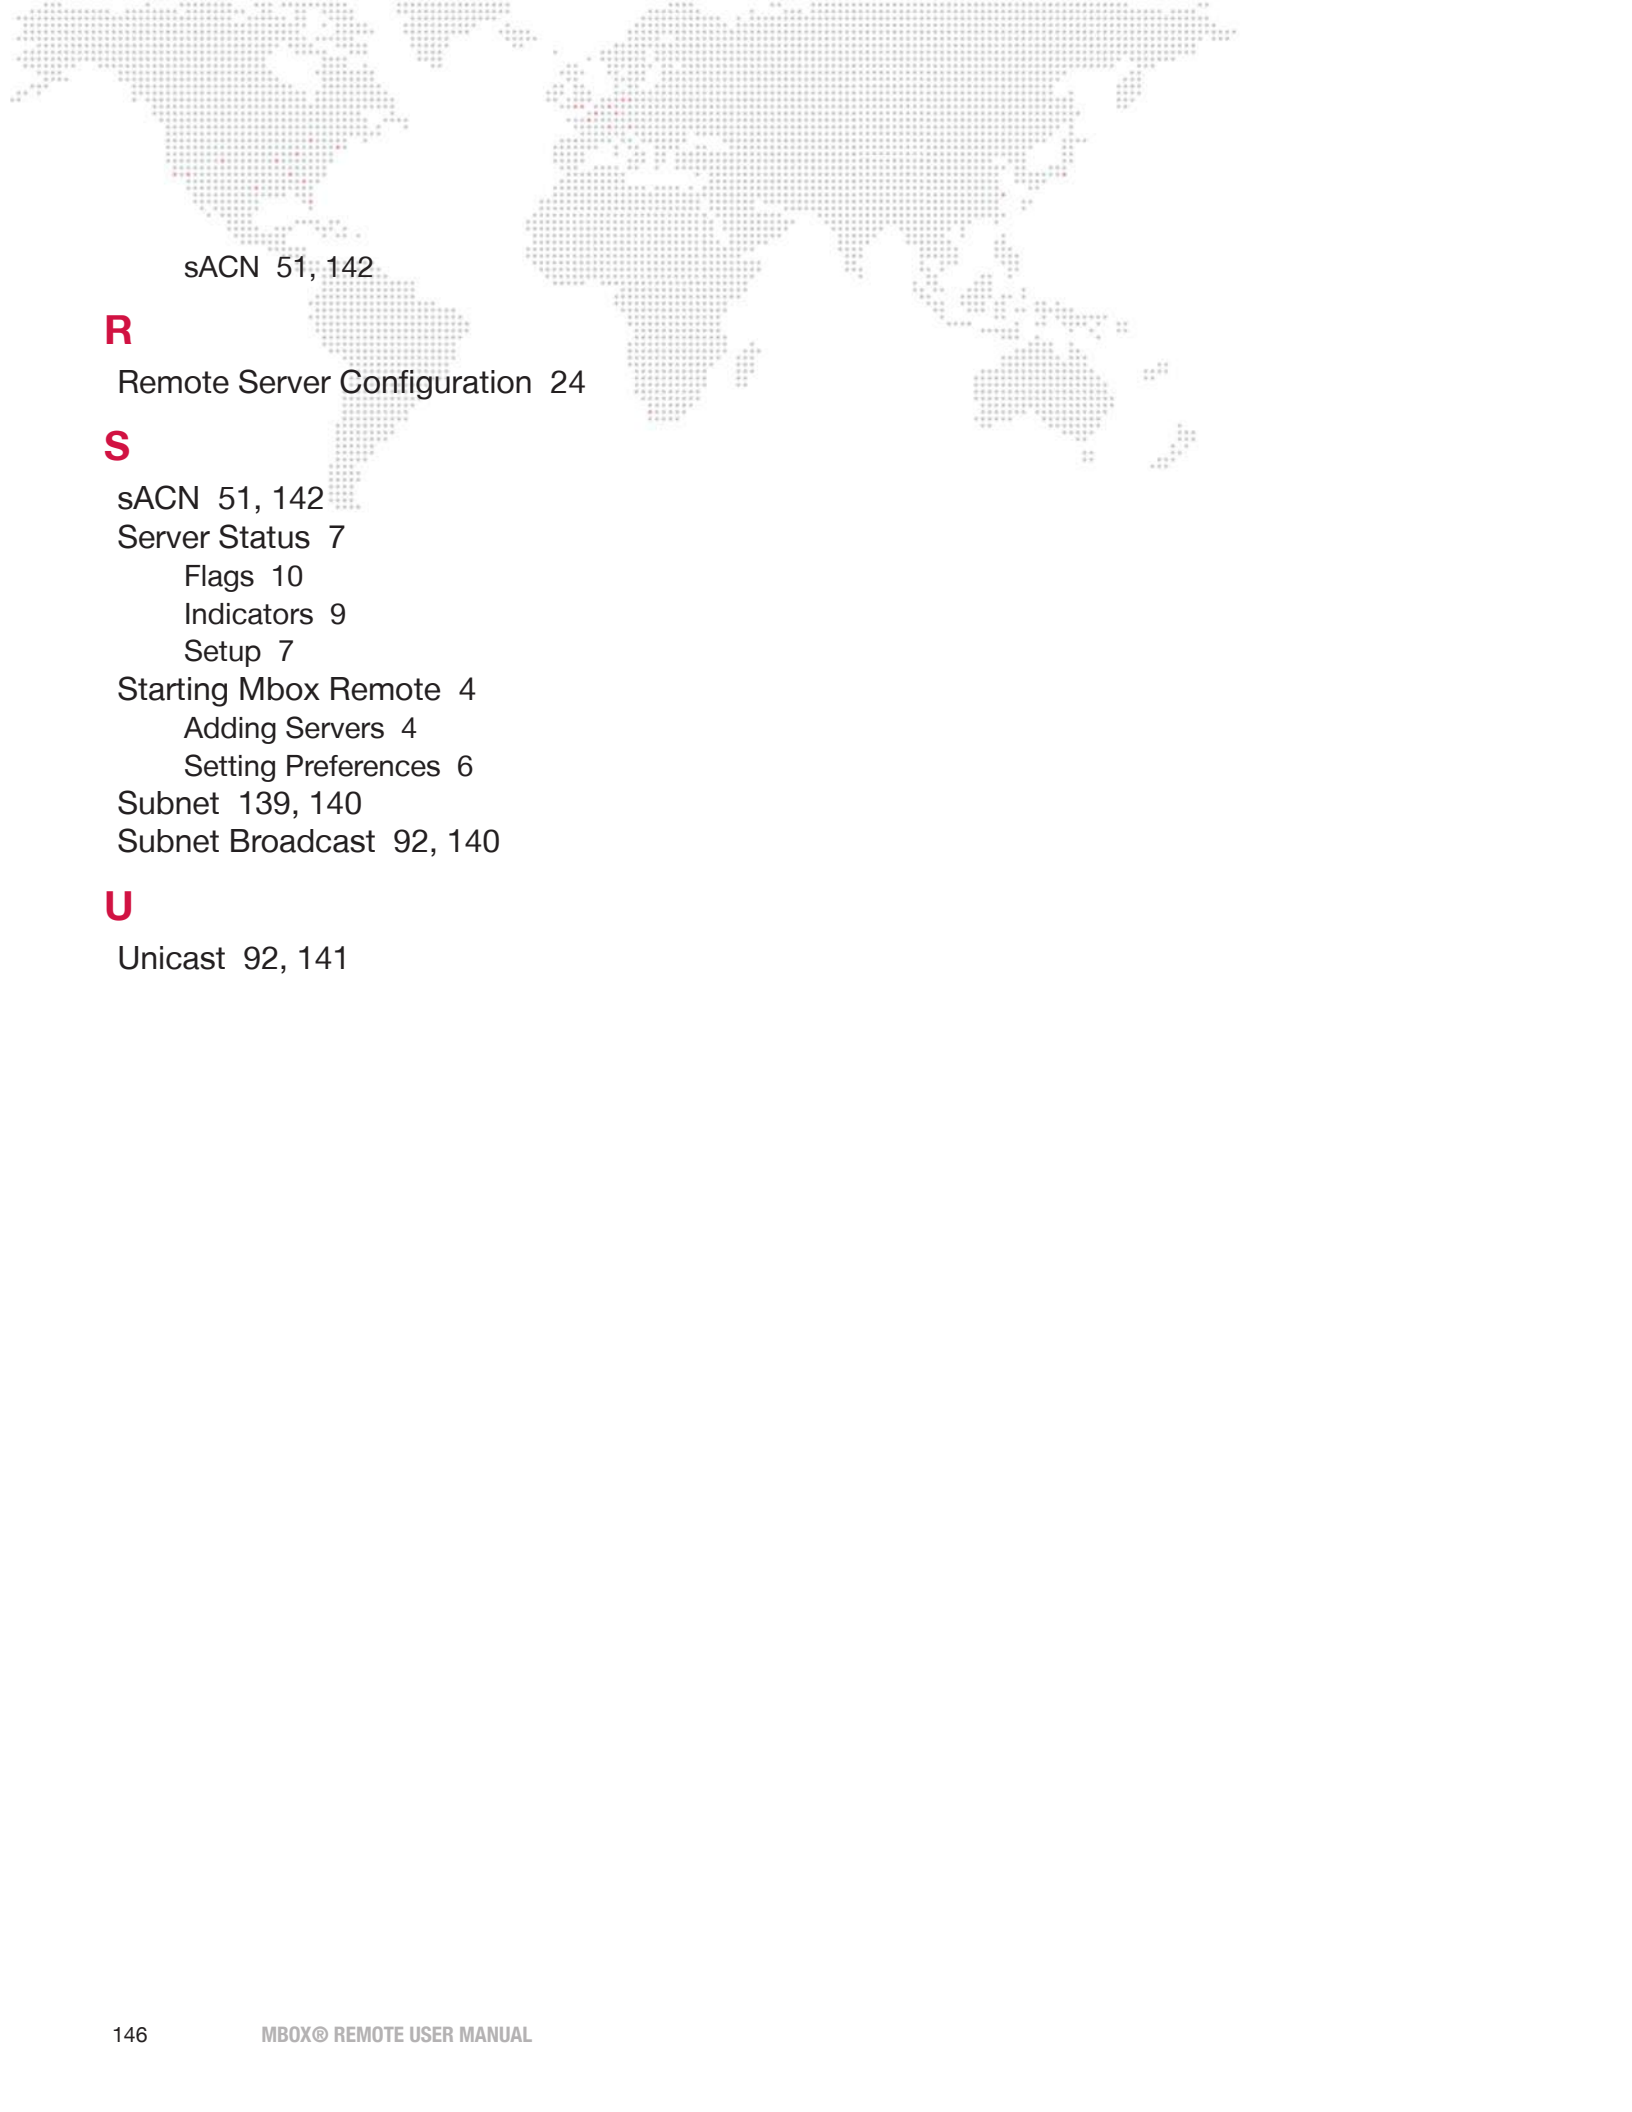

sACN 51, 142

R

Remote Server Configuration 24

S

sACN 51, 142

Server Status 7

Flags 10

Indicators 9

Setup 7

Starting Mbox Remote 4

Adding Servers 4

Setting Preferences 6

Subnet 139, 140

Subnet Broadcast 92, 140

U

Unicast 92, 141